

How to set up the conference server

(KX-TGP600/HDV1xx/HDV2xx series)

No. 02-005

Sep 10 , 2015

Ver.1.0

Panasonic Corporation

Abstract about this document

This document describes how to set up the conference server to activate the N-way conference feature.

Revision history

Date	Version	Revision	Firmware version
Sep. 10, 2015	Ver. 1.0	Initial Release	All versions

There are 2 methods to setup conference server setting in TGP.

- 1) with a configuration file
- 2) with web I/F (administrator access level is required)

1) Setting conference server by a configuration file

To activate Network Conference feature, URL/IP address of conference server is required to be configured in “CONFERENCE_SERVER_URI” field in a configuration file.

Once uploading the configuration file with the server information, the feature is ready.

CONFERENCE_SERVER_URI="conference_server@xxx.net"

Your server URI/address

upload



2) Setting Conference server by web I/F

Panasonic
KX-TGP600

Status Network System VoIP Telephone Maintenance

Call Control

Web Port Close

Telephone

- Multi Number Settings
- Call Control**
- Line 1
- Line 2
- Line 3
- Line 4
- Line 5
- Line 6
- Line 7
- Line 8
- Hotline Settings
- Tone Settings
- Import Phonebook
- Export Phonebook

Call Control

Send SUBSCRIBE to Voice Mail Server	<input type="radio"/> Yes <input checked="" type="radio"/> No
Conference Server URI	conference_server@xxx.net
First-digit Timeout	30 seconds [1-600]
Inter-digit Timeout	5 seconds [1-15]
Timer for Dial Plan	5 seconds [1-15]
Enable # Key as delimiter	<input checked="" type="radio"/> Yes <input type="radio"/> No
International Call Prefix	
Country Calling Code	
National Access Code	
Call Park Number	
Enable Call Park Key	<input type="radio"/> Yes <input checked="" type="radio"/> No
Park Retrieve Number	
Park Retrieve Soft Key	Not Use

Emergency Call Phone Numbers

1.		2.	
3.		4.	
5.			

Save Cancel



Your conference server's URI/address

Appendix : How to operate conference calls

Operation



TGP600:

Making a Conference Call

1. /[FUNC]/[FUNCTION] during a conversation. → "Conference"
2. Dial the party you want to add to the conversation. → **CALL**
3. **CONF**/

HDV1xx/HDV2xx:

Making a Conference Call

1. Press /[CONF] during a conversation.
2. Dial the party you want to add to the conversation. → **Call**
3. /[CONF]

For further details, please refer to Operating Instructions of each Model..