

Method for receiving the data, only from server that can be trusted

(KX-TGP600 series)

No. 02-008

Dec 14, 2015

Ver.1.0

Panasonic Corporation

Abstract about this document

This document describes about behavior and setting method of "SSAF(SIP Source Address Filter)". By using this function, TGP600 will reject the call from the server which is not set into TGP600

Revision history


Date	Version	Revision	Firmware version
Dec 14, 2015	Ver. 1.0	Initial Release	All versions

- TGP600 have a function that can receive the data “only” from servers set as Register, Proxy or Presence server and reject another server which are not set.
- The function is enabled by setting the parameters of “configuration file” or “Web user interface” .

Configuration file Parameter	: SIP_DETECT_SSAF
Web user interface Parameter	: Enable SSAF select

Distinguish method of data

1. Register server information by Configuration file or Web user interface

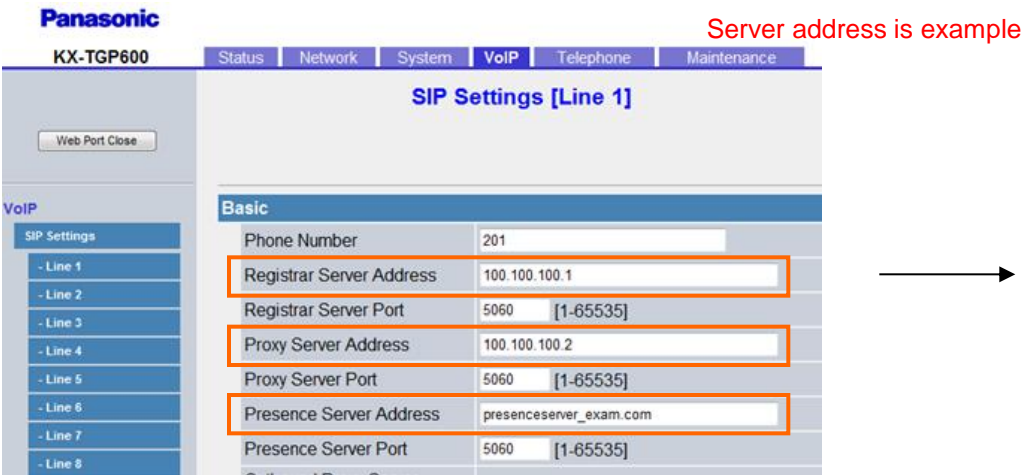


Server information

Registrar : 100.100.100.1
Proxy : 100.100.100.2
Presence: presenceserver_exam.com

2. TGP600 saves IP address of the server to the list.

When server address is registered as FQDN, it is converted into IP address by “name resolution” and stored as list of IP Addresses.

(presenceserver_exam.com → 100.100.100.3)

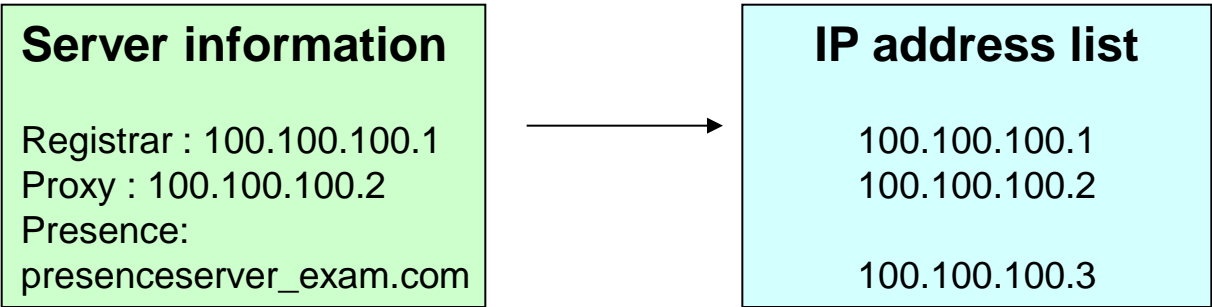

Distinguish method of data


3 – 1 Data arrives at TGP600.

3 – 2 Collation is done between IP address list of TGP600 and source address of IP header of the data.

3 – 3 As a result of checking,

When source address of the data is in the IP address list, TGP600 accept the data.

When it is not so, the data is discarded.

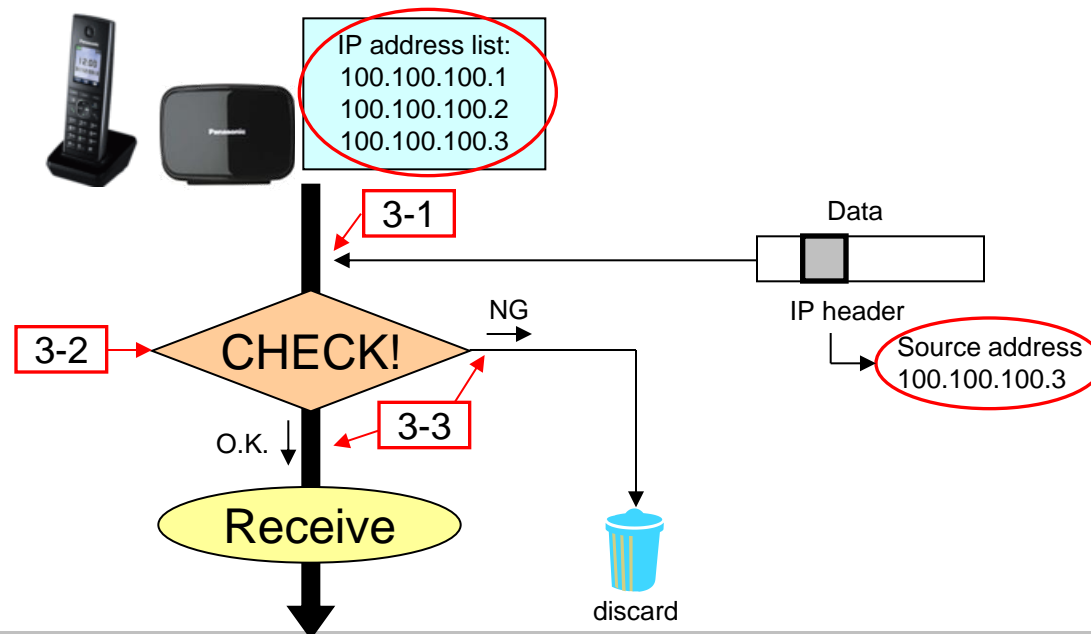

How to turn on “SSAF”

Via Web UI

Panasonic
KX-TGP600

Status | Network | System | **VoIP** | Telephone | Maintenance

Web Port Close

VoIP

SIP Settings

- Line 1
- Line 2
- Line 3
- Line 4
- Line 5
- Line 6
- Line 7
- Line 8

VoIP Settings

- Line 1
- Line 2
- Line 3
- Line 4
- Line 5
- Line 6
- Line 7
- Line 8

Outbound Proxy Server Port: 5060 [1-65535]

Service Domain:

Authentication ID: 201

Authentication Password:

Advanced

SIP Packet QoS (DSCP): 0 [0-63]

Enable DNS SRV lookup: ☒ Yes ☐ No

SRV lookup Prefix for UDP: _sip_udp.

SRV lookup Prefix for TCP: _sip_tcp.

SRV lookup Prefix for TLS: _sip_tls.

Local SIP Port: 5060 [1024-49151]

SIP URI:

T1 Timer: 500 milliseconds

T2 Timer: 4 seconds

REGISTER Expires Timer: 3600 seconds [1-4294967295]

Enable Session Timer (RFC 4028): 0 seconds [60-65535, 0: Disable]

Session Timer Method: ☒ INVITE ☐ UPDATE ☐ INVITE/UPDATE

Enable 100rel (RFC 3262): ☒ Yes ☐ No

Enable SSAF (SIP Source Address Filter): ☒ Yes ☐ No

Enable c=0.0.0.0 Hold (RFC 2543): ☒ Yes ☐ No

Transport Protocol: ☒ UDP ☐ TCP ☐ TLS

TLS Mode: ☐ SIPS ☒ SIP-TLS

Save Cancel

1. Enter the IP address into a PC's Web Browser.
(refer to final page “**How to access Web User Interface**”)
2. Login as “Administrator”.
3. Move to [VoIP] .
4. Select “Yes” at “Enable SSAF(SIP Source Address Filter)”
5. Click [Save].

How to turn on “SSAF”

Via Configuration file



```
SIP_DETECT_SSAF="Y"
```

1. Add or change the above-mentioned setting to existing configuration file.
Note!! If the same parameter is specified in a configuration file more than once, the value specified first is applied.
2. Apply Configuration file into TGP600.

1. Confirm the IP address of KX-TGP600.

1-1 : [Menu] (Center soft key) → select [System Settings] → [Enter] → select [Status] → [Enter] → select [IPv4 Settings] → [Enter] → select [IP Address].

1-2 : Confirm the IP address displayed on LCD.

2. Embedded Web.

2-1 : [Menu] → [Basic Setting] → [Other Option] → [Embedded Web] → select [On]

3. Access the Web user interface.

3-1 : Open your Web browser.

3-2 : Enter your KX-TGP600 URL to Web browser
(http://your KX-TGP600 IP address) .

3-3 : Enter Authentication ID and password and click “OK”.
(Default :ID=“admin”, password=“adminpass”)