


Panasonic®

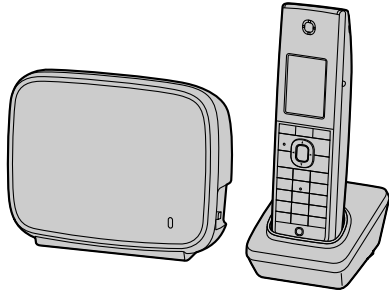

Administrator Guide

SIP Cordless Phone

Model No. **KX-TGP600**

Thank you for purchasing this Panasonic product.
Please read this manual carefully before using this product and save this manual for future use.

In this manual, the suffix of each model number is omitted unless necessary.

Introduction

Outline

This Administrator Guide provides detailed information on the configuration and management of this unit.

Audience

This Administrator Guide contains explanations about the installation, maintenance, and management of the unit and is aimed at network administrators and phone system dealers. Technical descriptions are included in this guide. Prior knowledge of networking and VoIP (Voice over Internet Protocol) is required.

Related Documentation

Quick Start Guide

Briefly describes basic information about the installation of the unit.

Operating Instructions

Describes information about the installation and operation of the unit.

Manuals and supporting information are provided on the Panasonic Web site at:

<http://www.panasonic.com/sip> (for users in the United States)

<http://panasonic.net/pcc/support/sipphone> (for users in all other countries/areas)

Technical Support

When technical support is required, contact your phone system dealer/service provider.

Trademarks

- Microsoft, Excel, Internet Explorer, Outlook, and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Linux is a registered trademark of Linus Torvalds in the United States, other countries, or both.
- Firefox is a registered trademark of the Mozilla Foundation.
- Google Chrome is a registered trademark of Google Inc.
- All other trademarks identified herein are the property of their respective owners.
- Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.

NOTES

- The screen shots shown in this guide are provided for reference only, and may differ from the screens displayed on your PC.

Table of Contents

1	Initial Setup	21
1.1	Setup	22
1.1.1	Factory Defaults	22
1.1.2	Language Selection for the Unit	22
1.1.3	Basic Network Setup	22
1.1.4	Overview of Programming	25
1.1.5	Phone User Interface Programming	26
1.1.5.1	Changing the Language for Phone User Interface Programming	26
1.1.6	Web User Interface Programming	27
1.1.6.1	Password for Web User Interface Programming	27
1.1.6.2	Changing the Language for Web User Interface Programming	28
1.1.6.3	Before Accessing the Web User Interface	28
1.1.6.4	Accessing the Web User Interface	30
1.2	Firmware Update	34
1.2.1	Firmware Update	34
2	General Information on Provisioning	35
2.1	Pre-provisioning	36
2.1.1	What is Pre-provisioning?	36
2.1.2	How to Obtain a Pre-provisioning Server Address	36
2.1.3	Server Address Formats	36
2.1.4	Obtaining a Provisioning Server Address via SIP PnP	37
2.1.5	Obtaining a Provisioning Server Address from DHCP Options	38
2.2	Provisioning	42
2.2.1	What is Provisioning?	42
2.2.2	Protocols for Provisioning	42
2.2.3	Configuration File	42
2.2.4	Downloading Configuration Files	44
2.2.5	Provisioning Server Setting Example	47
2.2.6	Encryption	48
2.3	Priority of Setting Methods	49
2.4	Configuration File Specifications	50
2.5	Configuration File Examples	52
2.5.1	Examples of Codec Settings	52
2.5.2	Example with Incorrect Descriptions	53
3	Phone User Interface Programming	55
3.1	Phone User Interface Programming	56
3.1.1	Opening/Closing the Web Port	56
4	Web User Interface Programming	57
4.1	Web User Interface Setting List	58
4.2	Status	71
4.2.1	Version Information	72
4.2.1.1	Base Unit	72
	Model	72
	Operating Bank	72
	IPL Version	72
	Firmware Version	72
4.2.1.2	Handset	73
	Model	73
	Firmware Version	73

Table of Contents

4.2.2	Handset Information	73
4.2.2.1	Handset Information	73
	Handset 1–8 (Model)	73
	Handset 1–8 (Firmware Version)	73
4.2.3	Network Status	74
4.2.3.1	Network Common	74
	MAC Address	74
	Ethernet Link Status	74
	IP Address Mode	74
4.2.3.2	IPv4	75
	Connection Mode	75
	IP Address	75
	Subnet Mask	75
	Default Gateway	75
	DNS1	75
	DNS2	76
4.2.3.3	IPv6	76
	Connection Mode	76
	IP Address	76
	Prefix	76
	Default Gateway	76
	DNS1	77
	DNS2	77
4.2.3.4	VLAN	77
	Setting Mode	77
	VLAN ID	77
	VLAN Priority	77
4.2.4	VoIP Status	77
4.2.4.1	VoIP Status	78
	Line No. (1–8)	78
	Phone Number	78
	VoIP Status	78
4.3	Network	79
4.3.1	Basic Network Settings	79
4.3.1.1	IP Addressing Mode	80
	IP Addressing Mode	80
4.3.1.2	IPv4	80
	Connection Mode	80
	DHCP Host Name	81
	IP Address	81
	Subnet Mask	81
	Default Gateway	82
	Auto DNS via DHCP	82
	DNS1	82
	DNS2	82
4.3.1.3	IPv6	83
	Connection Mode	83
	IP Address	83
	Prefix	83
	Default Gateway	83
	Auto DNS via DHCP	84
	DNS1	84
	DNS2	84
4.3.2	Ethernet Port Settings	84
4.3.2.1	Link Speed/Duplex Mode	85

	LAN Port	85
4.3.2.2	LLDP	86
	Enable LLDP	86
	Packet Interval	86
4.3.2.3	VLAN	86
	Enable VLAN	86
	VLAN ID	87
	Priority	87
4.3.3	HTTP Client Settings	87
4.3.3.1	HTTP Client	87
	HTTP Version	87
	HTTP User Agent	88
	Authentication ID	88
	Authentication Password	88
4.3.3.2	Proxy Server	89
	Enable Proxy	89
	Proxy Server Address	89
	Proxy Server Port	89
4.3.4	STUN Settings	89
4.3.4.1	STUN	90
	Server Address	90
	Port	90
	Binding Interval	90
4.3.5	Multicast Paging Settings	91
4.3.5.1	Multicast Paging	91
	IPv4 Address (Group 1–5)	91
	IPv6 Address (Group 1–5)	91
	Port (Group 1–5)	92
	Priority (Group 1–3)	92
	Label (Group 1–5)	92
	Enable Transmission (Group 1–5)	92
4.3.6	LDAP Settings	93
4.3.6.1	LDAP	93
	Enable LDAP	93
	Server Address	93
	Port	93
	User ID	94
	Password	94
	Max Hits	94
	Name Filter	94
	Number Filter	94
	Name Attributes	95
	Number Attributes	95
	Display Name	95
	Enable DNS SRV lookup	95
4.3.7	Xtended Service Settings	96
4.3.7.1	Xtended Service	96
	Enable Xtended Service	96
	Server Address	96
	Port	97
	Protocol	97
	User ID (Line 1–8)	97
	Password (Line 1–8)	97
	Enable Phonebook (Line 1–8)	97
	Phonebook Type (Line 1–8)	98

Table of Contents

	Enable Call Log (Line 1–8)	98
4.3.8	UC Settings	98
4.3.8.1	Presence Feature	99
	Enable UC	99
	Server Address	99
	Local XMPP Port	99
	Handset 1–8 (User ID)	99
	Handset 1–8 (Password)	99
4.3.9	XML Application Settings	100
4.3.9.1	XML Application	100
	Enable XMLAPP	100
	User ID	100
	Password	100
	Local XML Port	101
4.3.9.2	XML Phonebook	101
	LDAP URL	101
	User ID	101
	Password	101
	Max Hits	101
4.4	System	102
4.4.1	System Settings	102
4.4.1.1	System	102
	Enable Multi Number	102
	Enable Repeater Mode	102
4.4.2	Language Settings	103
4.4.2.1	Selectable Language	103
	Handset	103
	Web	104
4.4.2.2	Web Language	105
	Web Language	105
4.4.3	User Password Settings	106
4.4.3.1	User Password	107
	Current Password	107
	New Password	107
	Confirm New Password	107
4.4.4	Admin Password Settings	107
4.4.4.1	Admin Password	108
	Current Password	108
	New Password	108
	Confirm New Password	108
4.4.5	Time Adjust Settings	109
4.4.5.1	Synchronization	109
	Server Address	109
	Synchronization Interval	109
4.4.5.2	Time Zone	110
	Time Zone	110
4.4.5.3	Daylight Saving Time (Summer Time)	110
	Enable DST (Enable Summer Time)	110
	DST Offset (Summer Time Offset)	110
4.4.5.4	Start Day and Time of DST (Start Day and Time of Summer Time)	110
	Month	110
	Day of Week	111
	Time	112
4.4.5.5	End Day and Time of DST (End Day and Time of Summer Time)	112
	Month	112

	Day of Week	112
	Time	113
4.4.6	Handset Basic Settings	113
4.4.6.1	Handset 1–8	114
	Handset Name	114
	Language	114
4.4.7	Handset Advanced Settings	115
4.4.7.1	Soft Key during IDLE Status	115
	Soft Key A (Left)	115
	Soft Key B (Center)	115
	Soft Key C (Right)	116
4.4.7.2	Handset 1–8	116
	Enable Admin Ability	116
	Enable Handset Lock	116
	Password for Unlocking	117
4.4.8	Parallel Mode Settings	117
4.4.8.1	Parallel Mode	117
	Slave Handset Number (Master Desk Phone Number 1–8)	117
	Mode (Master Desk Phone Number 1–8)	117
4.5	VoIP	118
4.5.1	SIP Settings	118
4.5.1.1	User Agent	118
	User Agent	118
4.5.1.2	NAT Identity	119
	Enable Rport (RFC 3581)	119
	Enable Port Punching for SIP	119
	Enable Port Punching for RTP	119
4.5.2	SIP Settings [Line 1]–[Line 8]	120
4.5.2.1	Basic	120
	Phone Number	120
	Registrar Server Address	121
	Registrar Server Port	121
	Proxy Server Address	121
	Proxy Server Port	121
	Presence Server Address	121
	Presence Server Port	122
	Outbound Proxy Server Address	122
	Outbound Proxy Server Port	122
	Service Domain	122
	Authentication ID	122
	Authentication Password	123
4.5.2.2	Advanced	123
	SIP Packet QoS (DSCP)	123
	Enable DNS SRV lookup	123
	SRV lookup Prefix for UDP	123
	SRV lookup Prefix for TCP	124
	SRV lookup Prefix for TLS	124
	Local SIP Port	124
	SIP URI	125
	T1 Timer	125
	T2 Timer	125
	REGISTER Expires Timer	126
	Enable Session Timer (RFC 4028)	126
	Session Timer Method	126
	Enable 100rel (RFC 3262)	126

Table of Contents

	Enable SSAF (SIP Source Address Filter)	127
	Enable c=0.0.0.0 Hold (RFC 2543)	127
	Transport Protocol	127
	TLS Mode	127
4.5.3	VoIP Settings	128
4.5.3.1	RTP	128
	RTP Packet Time	128
	Minimum RTP Port Number	128
	Maximum RTP Port Number	128
	Telephone-event Payload Type	129
4.5.3.2	Voice Quality Report	129
	Server Address	129
	Port	129
	Enable PUBLISH	129
	Alert Report Trigger	130
	Threshold MOS-LQ (Critical)	130
	Threshold MOS-LQ (Warning)	130
	Threshold Delay (Critical)	130
	Threshold Delay (Warning)	130
4.5.4	VoIP Settings [Line 1]–[Line 8]	131
4.5.4.1	Basic	131
	G.722 (Enable)	131
	G.722 (Priority)	131
	PCMA (Enable)	132
	PCMA (Priority)	132
	G.722.2 (AMR-WB) (Enable)	132
	G.722.2 (AMR-WB) (Priority)	132
	G.729A (Enable)	133
	G.729A (Priority)	133
	PCMU (Enable)	133
	PCMU (Priority)	133
	DTMF Type	133
4.5.4.2	Advanced	134
	RTP Packet QoS (DSCP)	134
	RTCP Packet QoS (DSCP)	134
	Enable RTCP	134
	Enable RTCP-XR	134
	RTCP&RTCP-XR Interval	135
	SRTP Mode	135
	Enable Mixed SRTP & RTP by Conference	135
	Enable Mixed SRTP & RTP by Transfer	135
4.6	Telephone	136
4.6.1	Multi Number Settings	136
4.6.1.1	Group Handset / Handset select for receiving call	136
	Line (1–8)	136
	Phone Number	137
	Handset Number (1–8)	137
	Paging	137
4.6.1.2	Handset and Line Number select for making call	137
	Handset	137
	Line Number	137
	Default	138
4.6.2	Call Control	138
4.6.2.1	Call Control	138
	Send SUBSCRIBE to Voice Mail Server	138

	Conference Server URI	139
	First-digit Timeout	139
	Inter-digit Timeout	139
	Timer for Dial Plan	139
	Enable # Key as delimiter	140
	International Call Prefix	140
	Country Calling Code	140
	National Access Code	140
	Call Park Number	140
	Enable Call Park Key	141
	Park Retrieve Number	141
	Park Retrieve Soft Key	141
4.6.2.2	Emergency Call Phone Numbers	141
	1–5	141
4.6.3	Call Control [Line 1]–[Line 8]	142
4.6.3.1	Call Features	142
	Display Name	142
	Voice Mail Access Number	143
	Enable Anonymous Call	143
	Enable Block Anonymous Call	143
	Enable Do Not Disturb	143
	Enable Call Waiting	143
	Enable Call Forwarding Always	144
	Forwarding Number (Always)	144
	Enable Call Forwarding Busy	144
	Forwarding Number (Busy)	144
	Enable Call Forwarding No Answer	144
	Forwarding Number (No Answer)	145
	Ring Counts (No Answer)	145
	Enable Shared Call	145
	Enable Key Synchronization	145
	Enable Call Park Notification	146
	Enable Click to Call	146
	MoH Server URI	146
4.6.3.2	Dial Plan	146
	Dial Plan (max 1000 columns)	146
	Call Even If Dial Plan Does Not Match	147
4.6.3.3	Call Rejection Phone Numbers	147
	1–20	147
4.6.4	Hotline Settings	148
4.6.4.1	Hotline	148
	Handset 1–8 (Enable)	148
	Handset 1–8 (Hotline Number)	148
	Hotline Delay	149
4.6.5	Tone Settings	149
4.6.5.1	Dial Tone	149
	Tone Frequencies	149
	Tone Timings	150
4.6.5.2	Busy Tone	150
	Tone Frequencies	150
	Tone Timings	150
4.6.5.3	Ringing Tone	151
	Tone Frequencies	151
	Tone Timings	151
4.6.5.4	Stutter Tone	151

Table of Contents

	Tone Frequencies	151
	Tone Timings	152
4.6.5.5	Reorder Tone	152
	Tone Frequencies	152
	Tone Timings	152
4.6.6	Import Phonebook	153
4.6.6.1	Import Phonebook	153
	Handset Number	153
	File Name	154
4.6.7	Export Phonebook	154
4.6.7.1	Export Phonebook	155
	Handset Number	155
4.7	Maintenance	155
4.7.1	Provisioning Maintenance	155
4.7.1.1	Provisioning Maintenance	155
	Standard File URL	155
	Product File URL	156
	Master File URL	156
	Cyclic Auto Resync	156
	Resync Interval	156
	Time Resync	157
	Header Value for Resync Event	157
4.7.2	Firmware Maintenance	157
4.7.2.1	Firmware Maintenance	157
	Enable Firmware Update	157
	Firmware File URL	158
4.7.3	Upgrade Firmware	158
4.7.3.1	Upgrade Firmware	158
	File Name	158
4.7.4	Import Wallpaper	159
4.7.4.1	Import Wallpaper	159
	Gradation Type	159
	File Name	159
4.7.5	Export Logging File	160
4.7.5.1	Export Logging File	160
	Logging File Type	160
4.7.6	Reset to Defaults	160
4.7.7	Restart	161
5	Configuration File Programming	163
5.1	Configuration File Parameter List	164
5.2	General Information on the Configuration Files	181
5.2.1	Configuration File Parameters	181
5.2.2	Characters Available for String Values	182
5.3	System Settings	182
5.3.1	System Settings	182
	MULTI_NUMBER_ENABLE	182
	WIDEBAND_AUDIO_ENABLE	183
	CODEC_G722AMR_ENABLE	183
	FACTORY_RESET_ENABLE	183
5.3.2	Handset Registration Settings	183
	IPEI_HSy	183
	IPEI_AUTOREGMODE_ENABLE	184
	IPEI_RESTRICTION_ENABLE	184
5.3.3	Basic Network Settings	184

	IP_ADDR_MODE	184
	CONNECTION_TYPE	184
	STATIC_IP_ADDRESS	185
	STATIC_SUBNET	185
	STATIC_GATEWAY	185
	USER_DNS1_ADDR	186
	USER_DNS2_ADDR	186
	DHCP_DNS_ENABLE	186
	DHCP_HOST_NAME	187
	DHCP_VENDOR_CLASS	187
	CONNECTION_TYPE_IPV6	187
	STATIC_IP_ADDRESS_IPV6	188
	PREFIX_IPV6	188
	STATIC_GATEWAY_IPV6	188
	USER_DNS1_ADDR_IPV6	188
	USER_DNS2_ADDR_IPV6	188
	DHCP_DNS_ENABLE_IPV6	189
5.3.4	Ethernet Port Settings	189
	PHY_MODE_LAN	189
	VLAN_ENABLE	189
	VLAN_ID_IP_PHONE	190
	VLAN_PRI_IP_PHONE	190
	LLDP_ENABLE	190
	LLDP_INTERVAL	191
5.3.5	Pre-Provisioning Settings	191
	SIPPNP_PROV_ENABLE	191
	OPTION66_ENABLE	191
	OPTION159_PROV_ENABLE	192
	OPTION160_PROV_ENABLE	192
	DHCPV6_OPTION17_PROV_ENABLE	192
5.3.6	Provisioning Settings	192
	CFG_STANDARD_FILE_PATH	192
	CFG_PRODUCT_FILE_PATH	193
	CFG_MASTER_FILE_PATH	193
	CFG_CYCLIC	193
	CFG_CYCLIC_INTVL	193
	CFG_RESYNC_TIME	194
	CFG_RTRY_INTVL	194
	CFG_RESYNC_FROM_SIP	194
	CFG_RESYNC_ACTION	194
	CFG_FILE_KEY2	195
	CFG_FILE_KEY3	195
	CFG_FILE_KEY_LENGTH	195
	CFG_ROOT_CERTIFICATE_PATH	196
	CFG_CLIENT_CERT_PATH	196
	CFG_PKEY_PATH	196
	HTTP_SSL_VERIFY	196
5.3.7	Firmware Update Settings	197
	FIRM_UPGRADE_ENABLE	197
	FIRM_FILE_PATH	197
	FIRM_VERSION	198
5.3.8	HTTP Settings	198
	HTTP_VER	198
	HTTP_USER_AGENT	198
	HTTP_AUTH_ID	199

	HTTP_AUTH_PASS	199
	HTTP_PROXY_ENABLE	199
	HTTP_PROXY_ADDR	199
	HTTP_PROXY_PORT	200
	HTTP_PROXY_ID	200
	HTTP_PROXY_PASS	200
5.3.9	HTTPD/WEB Settings	200
	HTTPD_LISTEN_PORT	200
	HTTPD_PORTOPEN_AUTO	200
	HTTPD_PORTCLOSE_TM	201
	USER_ID	201
	USER_PASS	201
	ADMIN_ID	202
	ADMIN_PASS	202
5.3.10	TR-069 Settings	202
	ACS_URL	202
	ACS_USER_ID	202
	ACS_PASS	203
	PERIODIC_INFORM_ENABLE	203
	PERIODIC_INFORM_INTERVAL	203
	PERIODIC_INFORM_TIME	203
	CON_REQ_USER_ID	204
	CON_REQ_PASS	204
	ANNEX_G_STUN_ENABLE	205
	ANNEX_G_STUN_SERV_ADDR	205
	ANNEX_G_STUN_SERV_PORT	205
	ANNEX_G_STUN_USER_ID	205
	ANNEX_G_STUN_PASS	206
	ANNEX_G_STUN_MAX_KEEP_ALIVE	206
	ANNEX_G_STUN_MIN_KEEP_ALIVE	206
	UDP_CON_REQ_ADDR_NOTIFY_LIMIT	207
5.3.11	XML Settings	207
	XMLAPP_ENABLE	207
	XMLAPP_USERID	207
	XMLAPP_USERPASS	208
	XMLAPP_LDAP_URL	208
	XMLAPP_LDAP_USERID	208
	XMLAPP_LDAP_USERPASS	208
	XMLAPP_NPB_SEARCH_TIMER	208
	XMLAPP_LDAP_MAXRECORD	209
	XML_HTTPD_PORT	209
	XML_ERROR_INFORMATION	209
5.3.12	XSI Settings	209
	XSI_ENABLE	209
	XSI_SERVER	210
	XSI_SERVER_TYPE	210
	XSI_SERVER_PORT	210
	XSI_USERID_n	210
	XSI_PASSWORD_n	211
	XSI_PHONEBOOK_ENABLE_n	211
	XSI_PHONEBOOK_TYPE_n	211
	XSI_CALLLOG_ENABLE_n	211
5.3.13	XMPP (UC-ONE) Settings	212
	UC_ENABLE	212
	UC_USERID_HSy	212

	UC_PASSWORD_HSy	212
	XMPP_SERVER	213
	XMPP_PORT	213
	XMPP_TLS_VERIFY	213
	XMPP_ROOT_CERT_PATH	213
	XMPP_CLIENT_CERT_PATH	213
	XMPP_PKEY_PATH	214
5.3.14	LDAP Settings	214
	LDAP_ENABLE	214
	LDAP_DNSSRV_ENABLE	214
	LDAP_SERVER	214
	LDAP_SERVER_PORT	215
	LDAP_MAXRECORD	215
	LDAP_NUMB_SEARCH_TIMER	215
	LDAP_NAME_SEARCH_TIMER	215
	LDAP_USERID	215
	LDAP_PASSWORD	216
	LDAP_NAME_FILTER	216
	LDAP_NUMB_FILTER	216
	LDAP_NAME_ATTRIBUTE	216
	LDAP_NUMB_ATTRIBUTE	217
	LDAP_BASEDN	217
	LDAP_SSL_VERIFY	217
	LDAP_ROOT_CERT_PATH	217
	LDAP_CLIENT_CERT_PATH	217
	LDAP_PKEY_PATH	218
5.3.15	SNMP Settings	218
	SNMP_ENABLE	218
	SNMP_TRUST_IP	218
	SNMP_TRUST_PORT	218
	SNMP_RO_COMMUNITY_STRING	219
	SNMP_SECURITY_TYPE	219
	SNMP_SECURITY_USER	219
	SNMP_AUTH_TYPE	219
	SNMP_AUTH_PASSWORD	219
	SNMP_ENCRYPT_TYPE	220
	SNMP_ENCRYPT_PASSWORD	220
5.3.16	Multicast Paging Settings	220
	MPAGE_ADDRm	220
	MPAGE_IPV6_ADDRm	220
	MPAGE_PORTm	221
	MPAGE_PRIORITYm	221
	MPAGE_LABELm	221
	MPAGE_SEND_ENABLEm	221
	MPAGE_CODEC	222
	MPAGE_SP_VOL_EMERGENCY	222
	MPAGE_SP_VOL_PRIORITY	222
	MPAGE_DND_ENABLE_HSy	222
	MPAGE_FUNCKEY_ENABLE	223
5.3.17	NTP Settings	223
	NTP_ADDR	223
	TIME_SYNC_INTVL	223
	TIME_QUERY_INTVL	223
5.3.18	Time Settings	224
	LOCAL_TIME_ZONE_POSIX	224

	TIME_ZONE	224
	DST_ENABLE	225
	DST_OFFSET	225
	DST_START_MONTH	226
	DST_START_ORDINAL_DAY	226
	DST_START_DAY_OF_WEEK	226
	DST_START_TIME	227
	DST_STOP_MONTH	227
	DST_STOP_ORDINAL_DAY	228
	DST_STOP_DAY_OF_WEEK	228
	DST_STOP_TIME	228
5.3.19	Network Phonebook (Common)	229
	ONLY_NPB_ENABLE	229
	NETWORK_SEARCH_ENABLE	229
5.3.20	Language Settings	229
	AVAILABLE_LANGUAGE_HS	229
	DEFAULT_LANGUAGE_HSy	230
	HS_LANGUAGE_PATHx	230
	HS_LANGUAGE_VERx	230
	AVAILABLE_LANGUAGE_WEB	230
	WEB_LANGUAGE	231
	WEB_LANGUAGE_PATHx	231
	WEB_LANGUAGE_VERx	231
5.3.21	NAT Settings	231
	STUN_SERV_ADDR	231
	STUN_SERV_PORT	232
	STUN_2NDSERV_ADDR	232
	STUN_2NDSERV_PORT	232
	STUN_INTVL	232
	SIP_ADD_RPORT	232
	PORT_PUNCH_INTVL	233
	RTP_PORT_PUNCH_INTVL	233
5.3.22	SIP Settings	233
	SIP_USER_AGENT	233
	PHONE_NUMBER_n	234
	SIP_URI_n	234
	SIP_RGSTR_ADDR_n	234
	SIP_RGSTR_PORT_n	235
	SIP_PRXY_ADDR_n	235
	SIP_PRXY_PORT_n	235
	SIP_PRSNc_ADDR_n	235
	SIP_PRSNc_PORT_n	236
	SIP_OUTPROXY_ADDR_n	236
	SIP_OUTPROXY_PORT_n	236
	SIP_SVCDOMAIN_n	237
	SIP_AUTHID_n	237
	SIP_PASS_n	237
	SIP_SRC_PORT_n	237
	DSCP_SIP_n	238
	SIP_DNSSRV_ENA_n	238
	SIP_UDP_SRV_PREFIX_n	239
	SIP_TCP_SRV_PREFIX_n	239
	REG_EXPIRE_TIME_n	239
	REG_INTERVAL_RATE_n	240
	REG_RTX_INTVL_n	240

USE_DEL_REG_OPEN_n	240
USE_DEL_REG_CLOSE_n	240
SIP_SESSION_TIME_n	241
SIP_SESSION_METHOD_n	241
SIP_TIMER_T1_n	241
SIP_TIMER_T2_n	242
SIP_TIMER_T4_n	242
SIP_TIMER_B_n	242
SIP_TIMER_D_n	243
SIP_TIMER_F_n	243
SIP_TIMER_H_n	243
SIP_TIMER_J_n	243
SIP_100REL_ENABLE_n	244
SIP_18X_RTX_INTVL_n	244
SIP_SUBS_EXPIRE_n	244
SUB_INTERVAL_RATE_n	245
SUB_RTX_INTVL_n	245
SIP_P_PREFERRED_ID_n	245
SIP_PRIVACY_n	245
ADD_USER_PHONE_n	246
SIP_ANM_DISPNAME_n	246
SIP_ANM_USERNAME_n	246
SIP_ANM_HOSTNAME_n	247
SIP_DETECT_SSAF_n	247
SIP_RCV_DET_HEADER_n	247
SIP_RCV_DET_REQUIRE_n	248
SIP_CONTACT_ON_ACK_n	248
VOICE_MESSAGE_AVAILABLE	248
SIP_INVITE_EXPIRE_n	249
SIP_FOVR_NORSP_n	249
SIP_FOVR_MAX_n	249
SIP_FOVR_MODE_n	249
SIP_FOVR_DURATION_n	250
SIP_ADD_ROUTE_n	250
SIP_REQUIRE_PORT_n	250
ADD_EXPIRES_HEADER_n	251
ADD_TRANSPORT_UDP_n	251
SIP_ADD_DIVERSION_n	251
TRANSFER_RECALL_TIM	252
SIGNAL_COMPRESSION_n	252
MAX_BREADTH_n	252
MUTIPART_BOUNDARY_DELIMITER_n	252
RFC5626_KEEPALIVE_ENABLE_n	253
RINGTONE_183_180_ENABLE_n	253
SIP_403_REG_SUB_RTX_n	253
SIP_FORK_MODE_n	254
AKA_AUTHENTICATION_ENABLE_n	254
RFC2543_HOLD_ENABLE_n	254
SIP_HOLD_ATTRIBUTE_n	254
SDP_USER_ID_n	255
TELEVENT_PAYLOAD	255
HOLD_SOUND_PATH_n	255
KEEP_EARLYMEDIA_n	256
RFC3327_SUPPORT_PATH	256
RFC4244_SUPPORT_HISTORY	256

	RFC3319_SUPPORT_JOIN	256
	RFC6947_DRAFT08_ALTC	257
	RFC5627_SUPPORT_GRUU_n	257
	ESCAPECODE_CONVERSION	257
5.3.23	SIP-TLS Settings	257
	SIP_TRANSPORT_n	257
	SIP_TLS_MODE_n	258
	SIP_TLS_RECONNECT_n	258
	SIP_TLS_SRV_PREFIX_n	258
	SIP_TLS_VERIFY_n	259
	SIP_TLS_ROOT_CERT_PATH	259
	SIP_TLS_CLIENT_CERT_PATH	259
	SIP_TLS_PKEY_PATH	259
5.3.24	CODEC Settings	259
	CODEC_G729_PARAM_n	259
	CODEC_ENABLEx_n	260
	CODEC_PRIORITYx_n	260
	CODEC_PAYLOAD2	261
5.3.25	DTMF Settings	261
	DTMF_METHOD_n	261
	OUTBANDDTMF_VOL	262
	INBANDDTMF_VOL	262
	DTMF_SIGNAL_LEN	262
	DTMF_INTDIGIT_TIM	262
5.3.26	RTP/RTCP/RTCP-XR Settings	262
	DSCP_RTP_n	262
	DSCP_RTCP_n	263
	MAX_DELAY_n	263
	MIN_DELAY_n	263
	NOM_DELAY_n	264
	RTP_PORT_MIN	264
	RTP_PORT_MAX	264
	RTP_PTIME	265
	RTP_TARGET_CHECK	265
	RTCP_ENABLE_n	265
	RTCP_INTVL_n	265
	RTCP_SEND_BY_SDP_n	266
	RTP_CLOSE_ENABLE_n	266
	RTCPXR_ENABLE_n	266
5.3.27	SRTP Settings	267
	SRTP_CONNECT_MODE_n	267
	SRTP_MIX_CONFERENCE_ENABLE_n	267
	SRTP_MIX_TRANSFER_ENABLE_n	267
	SRTP_HELD_CALL_RTP_ENABLE	268
5.3.28	VQ Report by PUBLISH	268
	VQREPORT_COLLECTOR_ADDRESS	268
	VQREPORT_COLLECTOR_PORT	268
	VQREPORT_SEND	268
	ALERT_REPORT_TRIGGER	269
	ALERT_REPORT_MOSQ_CRITICAL	269
	ALERT_REPORT_MOSQ_WARNING	269
	ALERT_REPORT_DELAY_CRITICAL	269
	ALERT_REPORT_DELAY_WARNING	270
	VQREPORT_SIGNAL_COMPRESSION	270
5.3.29	uaCSTA Settings	270

	UACSTA_ENABLE_n	270
	UACSTA_UNIQUE_ID	270
	CSTA_PORT	270
	CSTA_PRXY_ADDR	271
	CSTA_PRXY_PORT	271
	CSTA_RGSTR_ADDR	271
	CSTA_RGSTR_PORT	271
	CSTA_REG_EXPIRE_TIME	271
	CSTA_TRANSPORT	272
	CSTA_RGSTR_AUTHID	272
	CSTA_RGSTR_PASS	272
5.3.30	Telephone Settings	272
	POWER_ON_DISPLAY_LOGO_PATH	272
	DISPLAY_WALLPAPER_DARK_PATH	273
	DISPLAY_WALLPAPER_LIGHT_PATH	273
	FIRSTDIGIT_TIM	273
	INTDIGIT_TIM	273
	POUND_KEY_DELIMITER_ENABLE	273
	POST_DIAL_TALK_ENABLE	274
	RINGTONE_SETTING_HSy_n	274
	INTERCOM_RINGTONE_SETTING_HSy	275
	DISPLAY_NAME_REPLACE	275
	NUMBER_MATCHING_LOWER_DIGIT	275
	NUMBER_MATCHING_UPPER_DIGIT	275
	INCOMING_BUSY_ENABLE	275
	FLASH_RECALL_TERMINATE	276
	FLASHHOOK_CONTENT_TYPE	276
	NUM_PLAN_PARKING	276
	CALLPARK_KEY_ENABLE	276
	NUM_PLAN_PARK_RETRIEVING	277
	IDLE_SOFT_KEY_PARK_RETRIEVING	277
	HOLD_RECALL_TIM	277
	HOLD_TRANSFER_OPERATION	277
	ONHOOK_TRANSFER_ENABLE	278
	ONHOOK_HOLD_TRNS_ENABLE	278
	BLIND_TRANSFER_ENABLE	278
	REPEATER_MODE	278
	SYS_LOCK_ENABLE_HSy	279
	SYS_LOCK_PASSWORD_HSy	279
	INTERCOM_ENABLE	279
	PAUSE_INPUT_ENABLE	279
	REGISTRATION_PIN	280
5.3.31	Tone Settings	280
	OUTSIDE_DIAL_TONE_FRQ	280
	OUTSIDE_DIAL_TONE_GAIN	280
	OUTSIDE_DIAL_TONE_RPT	280
	OUTSIDE_DIAL_TONE_TIMING	280
	REORDER_TONE_ENABLE	281
	TONE_LEN_DISCONNECT	281
	DIAL_TONE1_FRQ	281
	DIAL_TONE1_GAIN	281
	DIAL_TONE1_RPT	281
	DIAL_TONE1_TIMING	282
	DIAL_TONE2_FRQ	282
	DIAL_TONE2_GAIN	282

Table of Contents

	DIAL_TONE2_RPT	282
	DIAL_TONE2_TIMING	283
	DIAL_TONE4_FRQ	283
	DIAL_TONE4_GAIN	283
	DIAL_TONE4_RPT	283
	DIAL_TONE4_TIMING	284
	BUSY_TONE_FRQ	284
	BUSY_TONE_GAIN	284
	BUSY_TONE_RPT	285
	BUSY_TONE_TIMING	285
	REORDER_TONE_FRQ	285
	REORDER_TONE_GAIN	285
	REORDER_TONE_RPT	286
	REORDER_TONE_TIMING	286
	RINGBACK_TONE_FRQ	286
	RINGBACK_TONE_GAIN	286
	RINGBACK_TONE_RPT	287
	RINGBACK_TONE_TIMING	287
	HOLD_TONE_FRQ	287
	HOLD_TONE_GAIN	287
	BELL_CORE_PATTERN1_TIMING	288
	BELL_CORE_PATTERN2_TIMING	288
	BELL_CORE_PATTERN3_TIMING	288
	BELL_CORE_PATTERN4_TIMING	288
	BELL_CORE_PATTERN5_TIMING	289
5.3.32	Call Control Settings	289
	OUTGOING_CALL_LINE_HSy	289
	DEFAULT_LINE_SELECT_HSy	290
	INCOMING_CALL_GROUP_n	290
	PAGING_ENABLE_HANDSET_n	290
	ANONYMOUS_CALL_ENABLE_n	291
	BLOCK_ANONYMOUS_CALL_ENABLE_n	291
	HOTLINE_ENABLE_HSy	291
	HOTLINE_NUMBER_HSy	292
	HOTLINE_TIM	292
	DISPLAY_NAME_n	292
	VM_SUBSCRIBE_ENABLE	292
	VM_NUMBER_n	293
	DIAL_PLAN_n	293
	DIAL_PLAN_NOT_MATCH_ENABLE_n	293
	MACRODIGIT_TIM	294
	INTERNATIONAL_ACCESS_CODE	294
	COUNTRY_CALLING_CODE	294
	NATIONAL_ACCESS_CODE	295
	IDLE_SOFT_KEY_A	295
	IDLE_SOFT_KEY_B	295
	IDLE_SOFT_KEY_C	296
	ADMIN_ABILITY_ENABLE_HSy	296
	HANDSET_NAME_HSy	296
	EMERGENCY_CALLx	297
	CALL_REJECTIONx_n	297
	CLICKTO_ENABLE_n	297
	CALLPARK_NOTIFICATION_ENABLE_n	298
	SHARED_CALL_ENABLE_n	298
	FWD_DND_SYNCHRO_ENABLE_n	299

	MOH_SERVER_URI_n	299
	FWD_DND_CONTROL_ENABLE	299
	FWD_DND_SYNCHRO_MODE	299
	HOLD_AND_CALL_ENABLE	300
	AUTO_CALL_HOLD	300
	SIP_RESPONSE_CODE_DND	300
	SIP_RESPONSE_CODE_CALL_REJECT	300
	CW_ENABLE_n	301
	RETURN_VOL_SET_DEFAULT_ENABLE	301
	CONFERENCE_SERVER_URI	301
	PRIVACY_MODE_n	301
	PARALLEL_HSN0m	302
	PARALLEL_MODEm	302
5.3.33	Logging Settings	302
	SYSLOG_ADDR	302
	SYSLOG_PORT	303
	LOGGING_LEVEL_DNS	303
	LOGGING_LEVEL_NW1	303
	LOGGING_LEVEL_FILE	303
	LOGGING_LEVEL_SIP	303
	LOGGING_LEVEL_TR069	304
	LOGGING_LEVEL_STUN	304
	LOGGING_LEVEL_NW2	304
	LOGGING_LEVEL_CFGPARSE	304
6	Useful Telephone Functions	305
6.1	Line Settings	306
6.1.1	Multi Number Settings	306
6.2	Phonebook Import and Export	308
6.2.1	Import/Export Operation	310
6.2.2	Editing with Microsoft Excel	311
6.2.3	Exporting Data from Microsoft Outlook	313
6.3	Dial Plan	314
6.3.1	Dial Plan Settings	314
6.4	Broadsoft XSI (Xtended Services Interface)	316
6.4.1	Outline	316
6.4.2	XSI Service Settings	317
6.5	BroadCloud (Presence)	318
6.5.1	Outline	318
6.5.2	BroadCloud (Presence) Function Settings	319
6.5.3	Handset Operation of BroadCloud (Presence) Functions	319
6.6	Pairing (Parallel Mode)	320
6.6.1	Outline	320
6.6.2	Pairing (Parallel Mode) Settings	321
7	Firmware Update	325
7.1	Firmware Server Setup	326
7.2	Firmware Update Settings	326
7.3	Executing Firmware Update	327
7.4	Upgrade Firmware	328
8	Troubleshooting	329
8.1	Troubleshooting	330

Section 1

Initial Setup

This section provides an overview of the setup procedures for the unit.

1.1 Setup

1.1.1 Factory Defaults

Many of the settings for this unit have been configured before the unit ships.

Where possible, these settings are configured with the optimum or most common values for the setting. For example, the port number of the SIP (Session Initiation Protocol) server is set to "5060".

However, many of the settings, such as the address of the SIP server or the phone number, have not been pre-configured, and they must be modified depending on the usage environment. If the port number of the SIP server is not "5060", the value of this setting must be changed.

This unit thus will not function properly using only the factory default settings. The settings for each feature must be configured according to the environment in which the unit is used.

1.1.2 Language Selection for the Unit

You can change the language used on the LCD.

In addition, various settings can be configured by accessing the Web user interface from a PC on the same network (→ see **Section 4 Web User Interface Programming**). You can select the language for the Web user interface.

Note

- To select the display language for the unit, refer to the Operating Instructions on the Panasonic Web site (→ see **Introduction**).
- To select the display language for the Web user interface, see **4.4.2 Language Settings**.

1.1.3 Basic Network Setup

This section describes the basic network settings that you must configure before you can use the unit on your network.

You must configure the following network settings:

- IP Address Mode (IPv4 or IPv6 or IPv4/IPv6 Dual) settings
- TCP/IP settings (DHCP / RA for IPv6 / static IP)
- DNS server settings

For details about basic network settings via the Web user interface, see **4.3.1 Basic Network Settings**.

TCP/IP Settings for IPv4 (DHCP or Static IP Address Assignment)

A unique IP address must be assigned to the unit so that it can communicate on the network. How you assign an IP address depends on your network environment. This unit supports the following 2 methods for assigning an IP address:

Obtaining an IP Address Automatically from a DHCP Server

You can configure the unit to automatically obtain its IP address when it starts up from a DHCP server running on your network. With this method, the system can efficiently manage a limited number of IP addresses. Note that the IP address assigned to the unit may vary every time the unit is started up.

For details about the DHCP server, consult your network administrator.

Using a Static IP Address Specified by Your Network Administrator

If IP addresses for network devices are specified individually by your network administrator, you will need to manually configure settings such as the IP address, subnet mask, default gateway, and DNS servers. For details about the required network settings, consult your network administrator.

TCP/IP Settings for IPv6 (DHCP, RA or Static IP Address Assignment)

A unique IP address must be assigned to the unit so that it can communicate on the network. How you assign an IP address depends on your network environment. This unit supports the following 3 methods for assigning an IP address:

Obtaining an IP Address Automatically from a DHCP Server

You can configure the unit to automatically obtain its IP address when it starts up from a DHCP server running on your network. With this method, the system can efficiently manage a limited number of IP addresses. Note that the IP address assigned to the unit may vary every time the unit is started up. For details about the DHCP server, consult your network administrator.

Using a Static IP Address Specified by Your Network Administrator

If IP addresses for network devices are specified individually by your network administrator, you will need to manually configure settings such as the IP address, Prefix, default gateway, and DNS servers. For details about the required network settings, consult your network administrator.

Using a RA (Router Advertisement)

An IPv6 address can be assigned using Stateless Autoconfiguration. This enables the setting of addresses for only the router and the node without the need to manage information. For details about the required network settings, consult your network administrator.

DNS Server Settings

You can configure the unit to use 2 DNS servers: a primary DNS server is DNS1 and a secondary DNS server is DNS2. The primary DNS1 server receives priority over the secondary DNS2 server. If the primary DNS1 server returns no reply, the secondary DNS2 server will be used.

For details about configuring the DNS server settings using the unit, or using the Web user interface, see **Configuring the Network Settings of the Unit** in this section.

DNS Priority Using Configuration File

The setting for DNS server(s) may be configured using the configuration files by your phone system dealer/service provider (→ see "DHCP_DNS_ENABLE", "DHCP_DNS_ENABLE_IPV6", "USER_DNS1_ADDR"/"USER_DNS2_ADDR" (for IPv4) and

"USER_DNS1_ADDR_IPV6"/"USER_DNS2_ADDR_IPV6" (for IPv6) in **5.3.3 Basic Network Settings**).

- When "DHCP_DNS_ENABLE" (for IPv4) is set to "Y", you can manually configure the DNS server address by using "USER_DNS1_ADDR" or ("USER_DNS1_ADDR" and "USER_DNS2_ADDR"). When set to "N", the DNS server address will be automatically transmitted. This setting is available only when ("IP_ADDR_MODE"="0" or "IP_ADDR_MODE"="2") and "CONNECTION_TYPE"="1".
- When "DHCP_DNS_ENABLE_IPV6" (for IPv6) is set to "Y", you can manually configure the DNS server address by using "USER_DNS1_ADDR_IPV6" or ("USER_DNS1_ADDR_IPV6" and "USER_DNS2_ADDR_IPV6"). When set to "N", the DNS server address will be automatically transmitted. This setting is available only when ("IP_ADDR_MODE"="1" or "IP_ADDR_MODE"="2") and "CONNECTION_TYPE_IPV6"="1".

Configuring the Network Settings of the Unit

The following procedures explain how to change the network settings via the unit.

For details about the individual network settings that can be configured via the unit, refer to the Operating Instructions on the Panasonic Web site (→ see **Introduction**).

For details about configuring network settings via the Web user interface, see **4.3.1 Basic Network Settings**.

To configure IP Mode (IPv4, IPv6, IPv4&IPv6)

1.  / **MENU**
2. **[▲]/[▼]/[◀]/[▶]**:  → **OK**
3. **[▲]/[▼]**: "Network Settings" → **OK**
4. **[▲]/[▼]**: "IP Mode Select" → **OK**
5. **[▲]/[▼]**: "IPv4" / "IPv6" / "IPv4&IPv6" → **OK**
 - The initial value is "IPv4".
6. 

Configuring the Network Settings Using IPv4

To configure network settings automatically

1.  / **MENU**
2. **[▲]/[▼]/[◀]/[▶]**:  → **OK**
3. **[▲]/[▼]**: "Network Settings" → **OK**
4. **[▲]/[▼]**: "IPv4 Settings" → **OK**
5. **[▲]/[▼]**: "DHCP" → **OK**
6. **[▲]/[▼]**: "Auto" → **OK**
 - Select "Manual" to enter the addresses for DNS1 (primary DNS server) and, if necessary, DNS2 (secondary DNS server) manually, and then press **OK**.
7. 

To configure network settings manually

1.  / **MENU**
2. **[▲]/[▼]/[◀]/[▶]**:  → **OK**
3. **[▲]/[▼]**: "Network Settings" → **OK**
4. **[▲]/[▼]**: "IPv4 Settings" → **OK**
5. **[▲]/[▼]**: "Static" → **OK**
6. Enter the IP address, subnet mask, default gateway, DNS1 (primary DNS server), and, if necessary, DNS2 (secondary DNS server), and then press **OK**.
7. 

Configuring the Network Settings Using IPv6

To configure network settings automatically using DHCP

1.  / **MENU**
2. **[▲]/[▼]/[◀]/[▶]**:  → **OK**

3. [▲]/[▼]: "Network Settings" → **OK**
4. [▲]/[▼]: "IPv6 Settings" → **OK**
5. [▲]/[▼]: "DHCP" → **OK**
6. [▲]/[▼]: "Auto" → **OK**
 - Select "Manual" to enter the addresses for DNS1 (primary DNS server) and, if necessary, DNS2 (secondary DNS server) manually, and then press **OK**.
7. 

To configure network settings automatically using RA

1.  / **MENU**
2. [▲]/[▼]/[◀]/[▶]:  → **OK**
3. [▲]/[▼]: "Network Settings" → **OK**
4. [▲]/[▼]: "IPv6 Settings" → **OK**
5. [▲]/[▼]: "RA" → **OK**
6. Enter the addresses for DNS1 (primary DNS server) and, if necessary, DNS2 (secondary DNS server) manually, and then press **OK**.
7. 

To configure network settings manually

1.  / **MENU**
2. [▲]/[▼]/[◀]/[▶]:  → **OK**
3. [▲]/[▼]: "Network Settings" → **OK**
4. [▲]/[▼]: "IPv6 Settings" → **OK**
5. [▲]/[▼]: "Static" → **OK**
6. Enter the IP address, Prefix (for IPv6), Default Gateway, DNS1 (primary DNS server), and, if necessary, DNS2 (secondary DNS server), and then press **OK**.
7. 

Note

- If your phone system dealer/service provider does not allow you these settings, you cannot change them even though the unit shows the setting menu. Contact your phone system dealer/service provider for further information.
- If you select "DHCP" for the connection mode, all the settings concerning static connection will be ignored, even if they have been specified.
- If you select "DHCP" for the connection mode and "Auto" for DNS, the DNS server settings (DNS1 and DNS2) will be ignored, even if they have been specified.

1.1.4 Overview of Programming

There are 3 types of programming, as shown in the table below:

Programming Type	Description	References
Phone user interface programming	Configuring the unit's settings directly from the unit.	→ 1.1.5 Phone User Interface Programming → Section 3 Phone User Interface Programming

Programming Type	Description	References
Web user interface programming	Configuring the unit's settings by accessing the Web user interface from a PC connected to the same network.	→ 1.1.6 Web User Interface Programming → Section 4 Web User Interface Programming
Configuration file programming	Configuring the unit's settings beforehand by creating configuration files (pre-provisioning), and having the unit download the files from a server on the Internet and configure its own settings (provisioning).	→ Section 2 General Information on Provisioning → Section 5 Configuration File Programming

1.1.5 Phone User Interface Programming

You can change the settings directly from the unit.

For details about the operations, refer to the Operating Instructions on the Panasonic Web site (→ see **Introduction**).

For details about additional features available with direct commands, see **Section 3 Phone User Interface Programming**.


1.1.5.1 Changing the Language for Phone User Interface Programming

You can change the language used on the LCD. Because the language settings for the LCD of the unit are not synchronized, you must set the languages individually for the unit.

For details about changing the setting, refer to the Operating Instructions on the Panasonic Web site (→ see **Introduction**).

1.1.6 Web User Interface Programming

After connecting the unit to your network, you can configure the unit's settings by accessing the Web user interface from a PC connected to the same network. For details, see **Section 4 Web User Interface Programming**.

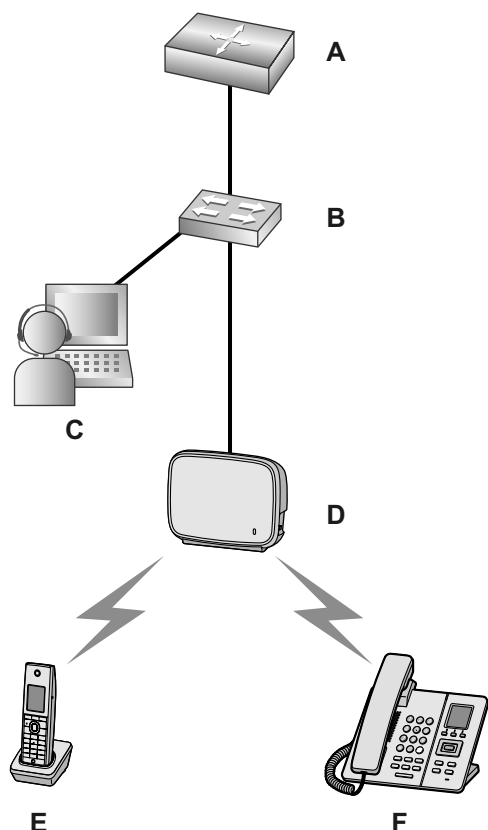

- A. Router
- B. Switching Hub
- C. PC
- D. KX-TGP600
- E. KX-TPA60
- F. KX-TPA65

1.1.6.1 Password for Web User Interface Programming

To program the unit via the Web user interface, a login account is required. There are 2 types of accounts, and each has different access privileges.

- **User:** User accounts are for use by end users. Users can change the settings that are specific to the unit.
- **Administrator:** Administrator accounts are for use by administrators to manage the system configuration. Administrators can change all the settings, including the network settings, in addition to the settings that can be changed from a User account.

A separate password is assigned to each account.

For details, see **Access Levels (IDs and Passwords)** in **1.1.6.3 Before Accessing the Web User Interface**.

Notice

- You should manage the passwords carefully, and change them regularly.

1.1.6.2 Changing the Language for Web User Interface Programming

When accessing the unit via the Web user interface on a PC connected to the same network, various menus and settings are displayed. You can change the language used for displaying these setting items. Because the language setting for the Web user interface is not synchronized with those of the unit, you must set the languages for each independently.

For details, see **4.4.2 Language Settings**.

1.1.6.3 Before Accessing the Web User Interface

Recommended Environment

This unit supports the following specifications:

HTTP Version	HTTP/1.0 (RFC 1945), HTTP/1.1 (RFC 2616)
Authentication Method	Digest

The Web user interface will operate correctly in the following environments:

Operating System	Microsoft® Windows® 7 or Windows 8 operating system
Web Browser	Windows Internet Explorer® 7, Windows Internet Explorer 8, Windows Internet Explorer 9, Windows Internet Explorer 10, Windows Internet Explorer 11 web browser, Firefox® (32.0.3), Google Chrome™ (37.0.2062.103)
Language (recommended)	English

Opening/Closing the Web Port

To access the Web user interface, you must open the unit's Web port beforehand. For details, refer to the Operating Instructions on the Panasonic Web site (→ see **Introduction**).

Configuring Settings from the Unit

To open the unit's Web port

1.  / **MENU**
2. **[▲]/[▼]/[◀]/[▶]**:  → **OK**
3. **[▲]/[▼]**: "Other Option" → **OK**
4. **[▲]/[▼]**: "Embedded Web" → **OK**
5. **[▲]/[▼]**: "On" for "Embedded Web" → **OK**

To close the unit's Web port

1.  / MENU
2. [▲]/[▼]/[◀]/[▶]:  → OK
3. [▲]/[▼]: "Other Option" → OK
4. [▲]/[▼]: "Embedded Web" → OK
5. [▲]/[▼]: "Off" for "Embedded Web" → OK

Configuring Settings from the Web User Interface**To close the unit's Web port**

1. In the Web user interface, click **[Web Port Close]**.
2. Click **OK**.

Note

- The Web port of the unit will be closed automatically in the following conditions:
 - 3 consecutive unsuccessful login attempts occur.
- The Web port can be set to stay open continuously, through Configuration file programming (→ see "HTTPD_PORTOPEN_AUTO" in **5.3.9 HTTPD/WEB Settings**). However, please recognize the possibility of unauthorized access to the unit by doing so.

Access Levels (IDs and Passwords)

2 accounts with different access privileges are provided for accessing the Web user interface: User and Administrator. Each account has its own ID and password, which are required to log in to the Web user interface.

Account	Target User	ID (default)	Password (default)	Password Restrictions
User	End users	user	-blank-(NULL)	• When logged in as User, you can change the password for the User account (→ see 4.4.3 User Password Settings). • The password can consist of 6 to 64 ASCII characters (case-sensitive) (→ see Entering Characters in 1.1.6.4 Accessing the Web User Interface).
Administrator	Network administrators, etc.	admin	adminpass	• When logged in as Administrator, you can change the password for both the User and Administrator accounts (→ see 4.4.4 Admin Password Settings). • The password can consist of 6 to 64 ASCII characters (case-sensitive) (→ see Entering Characters in 1.1.6.4 Accessing the Web User Interface).

Notice

- Only one account can be logged in to the Web user interface at a time. If you try to access the Web user interface while someone is logged in, you will be denied access.
- You cannot log in to the Web user interface even under the same account as someone who is already logged in.
- The user password is required to change the settings.
- The IDs can be changed through configuration file programming (→ see "ADMIN_ID" and "USER_ID" in **5.3.9 HTTPD/WEB Settings**).
- If you forget your account IDs or passwords, consult your phone system dealer/service provider.

1.1.6.4 Accessing the Web User Interface

The unit can be configured from the Web user interface.

To access the Web user interface

1. Open your Web browser, and then enter "http://" followed by the unit's IP address into the address field of your browser.
 - a. When the IP address is 192.168.0.1 (IPv4), access the following URL.
http://192.168.0.1/
 - b. When the IP address is 2001:db8:1f70::999:de8:7648:6e8 (IPv6), access the following URL. With IPv6, the IP address is enclosed in square brackets "[" and "]".
http://[2001:db8:1f70::999:de8:7648:6e8]/

Note


- To determine the unit's IP address, perform the following operations on the unit:
 1.  / **MENU**
 2. **[▲]/[▼]/[◀]/[▶]**:  → **OK**
 3. **[▲]/[▼]**: "Status" → **OK**
 4. **[▲]/[▼]**: "IPv4 Settings"/"IPv6 Settings" → **OK**
 5. **[▲]/[▼]**: "IP Address".
 6. 
2. For authentication, enter your ID (username) and password, and then click **OK**.

Notice

- The default ID for the User account is "user", and the default password is blank. The ID cannot be changed from the Web user interface, but it can be changed through configuration file programming.
 - When you log in as User to the Web user interface for the first time, the **[User Password Settings]** screen (→ see **4.4.3 User Password Settings**) will be displayed. Enter a new password, and then perform authentication again with the new password to log in to the Web user interface.
 - The default ID for the Administrator account is "admin", and the default password is "adminpass". The ID cannot be changed from the Web user interface, but it can be changed through configuration file programming.
3. The Web user interface window is displayed. Configure the settings for the unit as desired.
 4. You can log out from the Web user interface at any time by clicking **[Web Port Close]**.

Controls on the Window

The Web user interface window contains various controls for navigating and configuring settings. The following figure shows the controls that are displayed on the **[Basic Network Settings]** screen as an example:

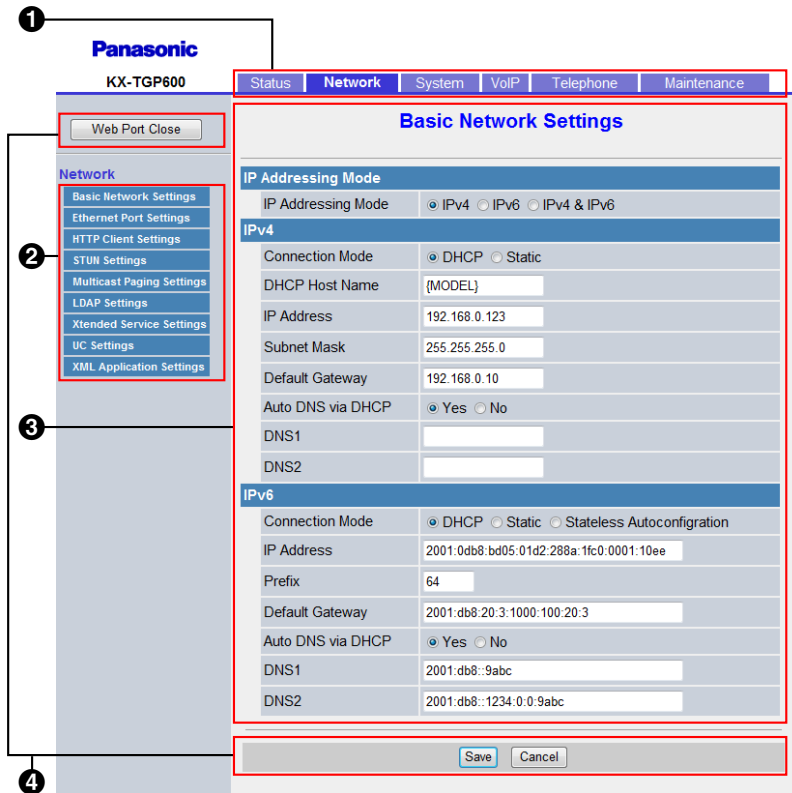

Note

- Actual default values may vary depending on your phone system dealer/service provider.
- When you log in to the Web user interface with the User account, the languages of messages displayed on the configuration screen may differ depending on the country/area of use.

1 Tabs

Tabs are the top categories for classifying settings. When you click a tab, the corresponding menu items and the configuration screen of the first menu item appear. There are 6 tabs for the Administrator account and 3 tabs for the User account. For details about the account types, see **Access Levels (IDs and Passwords)** in this section.

2 Menu

The menu displays the sub-categories of the selected tab.

3 Configuration Screen

Clicking a menu displays the corresponding configuration screen, which contains the actual settings, grouped into sections. For details, see **4.2 Status to 4.7.7 Restart**.

4 Buttons

The following standard buttons are displayed in the Web user interface:

Button	Function
Web Port Close	Closes the Web port of the unit and logs you out of the Web user interface after a confirmation message is displayed.

Button	Function
Save	Applies changes and displays a result message (→ see Result Messages in this section).
Cancel	Discards changes. The settings on the current screen will return to the values they had before being changed.
Refresh	Updates the status information displayed on the screen. This button is displayed in the upper-right area of the [Network Status] and [VoIP Status] screens.

Entering Characters

In the Web user interface, when specifying a name, message, password, or other text item, you can enter any of the ASCII characters displayed in the following table with a white background.

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
20	SP	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	

However, there are additional limitations for certain types of fields as follows:

- Number field
 - You may only enter a sequence of numeric characters.
- IP Address field
 - You can enter the IP address using dotted-decimal notation (i.e., "n.n.n.n" where n=0–255).
- FQDN field
 - You can enter the IP address using dotted-decimal notation (i.e., "n.n.n.n" where n=0–255).
 - With IPv6, the IP address is enclosed in square brackets ("[" and "]").
Example: http://[2001:db8:1f70::999:de8:7648:6e8]/
- Display Name field (→ see **[Display Name]** in **4.6.3.1 Call Features**)
 - This is the only field in which you can enter Unicode characters.

Result Messages

When you click **[Save]** after changing the settings on the current configuration screen, one of the following messages will appear in the upper-left area of the current configuration screen:

Result Message	Description	Applicable Screens
Complete	The operation has successfully completed.	All screens except 4.6.7 Export Phonebook
Failed (Parameter Error)	The operation failed because: Some specified values are out of range or invalid.	All screens
Failed (Memory Access Failure)	The operation failed because: Access error to the flash memory occurred while reading or writing the data.	All screens
Failed (Transfer Failure)*1	The operation failed because: A network error occurred during the data transmission.	All screens
Failed (Busy)	The operation failed because: The unit is in an operation that accesses the flash memory of the unit.	All screens
	- When attempting to import/export the phonebook data, the unit is on a call. - While transferring the phonebook data, a call arrived at the unit.	4.6.6 Import Phonebook 4.6.7 Export Phonebook
	When updating the firmware, the unit is on a call.	4.7.3 Upgrade Firmware
Failed (Canceled)	The operation failed because: While transferring the phonebook data, the connection with the unit was interrupted.	4.6.6 Import Phonebook 4.6.7 Export Phonebook
Failed (Invalid File)	The operation failed because: Analysis of the received data failed.	4.6.6 Import Phonebook
	The firmware file is corrupted or invalid.	4.7.3 Upgrade Firmware
Failed (File Size Error)	The operation failed because: The size of the imported phonebook is too large.	4.6.6 Import Phonebook
	The size of the firmware file is insufficient.	4.7.3 Upgrade Firmware
Failed (No Handset, or Busy)	The operation failed because: The specified Cordless Handset is not registered. (It cannot be found in an Cordless Handset search via Base Unit synchronization.)	4.6.6 Import Phonebook
	The specified Cordless Handset cannot be connected to.	4.6.6 Import Phonebook
Failed (No Reception)	The operation failed because: The connection to the specified Cordless Handset suddenly cuts out (becomes out of range).	4.6.6 Import Phonebook

1.2.1 Firmware Update

Result Message	Description	Applicable Screens
Failed (Charge Battery)	The operation failed because: The battery needs to be charged.	4.6.7 Export Phonebook
No Data	The operation failed because: The imported phonebook file contains no valid phonebook entries.	4.6.6 Import Phonebook
	No phonebook entry is registered in the export source the unit.	4.6.7 Export Phonebook


*1 "Failed (Transfer Failure)" may not be displayed depending on your Web browser.

1.2 Firmware Update

1.2.1 Firmware Update

You can update the unit's firmware to improve the unit's operation. You can configure the unit so that it automatically downloads the new firmware file from a specified location. The firmware update will be executed when the unit is restarted.

For details, see **Section 7 Firmware Update**.

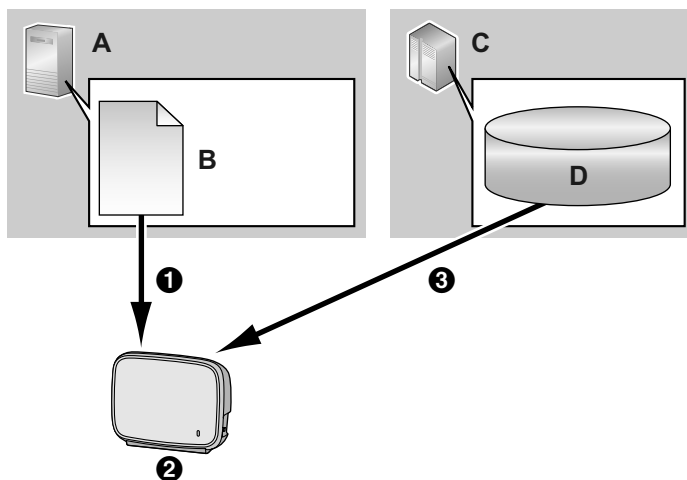

- A. Provisioning server
- B. Configuration file
- C. Firmware server
- D. Firmware

- ① Download
- ② Check for update
- ③ Firmware download and update

Section 2

General Information on Provisioning

This section provides an overview of the configuration file programming procedures for the unit, including pre-provisioning and provisioning.

2.1 Pre-provisioning

2.1.1 What is Pre-provisioning?

Pre-provisioning is an auto-provisioning mechanism that automatically obtains the server address saved in the configuration file administered by the carrier or distributor.

There are two methods for automatically obtaining the server address saved in the configuration file.

1. SIP PnP
The phone multicasts a SIP SUBSCRIBE message and obtains a provisioning server address via a SIP NOTIFY message.
2. DHCP options
The phone obtains a provisioning server address via the DHCP option information. DHCP options 66, 159 and 160 will be used when the phone's IP address mode is IPv4, and DHCP option 17 will be used when the phone's IP address mode is IPv6.

2.1.2 How to Obtain a Pre-provisioning Server Address

Upon startup, the phone will attempt to obtain a pre-provisioning server address as follows.

1. When the phone's IP address mode is IPv4
The phone will attempt to obtain a pre-provisioning server address using SIP PnP, but when it cannot, it will attempt to do so from DHCPv4 options.
2. When the phone's IP address mode is IPv6
The phone will attempt to obtain a pre-provisioning server address from DHCPv6 options.
3. When the phone's IP address mode is IPv4/v6 Dual
The phone will attempt to obtain a pre-provisioning server address using SIP PnP, but when it cannot, it will attempt to do so from DHCPv4 options. When this is not possible, it will attempt to do so from DHCPv6 options.

Note

- The SIP PnP function is enabled in the initial state. It can be enabled or disabled from the configuration parameter "SIPPNP_PROV_ENABLE".

2.1.3 Server Address Formats

1. Basic format
Format: <scheme>://<user>:<password>@<host>:<port>/<url-path>/<file name>
* The server name (<host>) may be the IP address or the domain.
* Maximum length: 384 characters
2. Macros used with file names

Macro Format {XXXX}	Macro Expansion
{MAC}	If the URL contains {MAC}, it will be replaced with the device's MAC address in uppercase letters. Example: {MAC} → 0080F0C571EB
{mac}	If the URL contains {mac}, it will be replaced with the device's MAC address in lowercase letters. Example: {mac} → 0080f0c571eb

Macro Format {XXXX}	Macro Expansion
{MODEL}	If the URL contains {MODEL}, it will be replaced with the device's model name. Example: {MODEL} → KX-TGP600
{fwver}	If the URL contains {fwver}, it will be replaced with the device's firmware version. Example: {fwver} → 01.000


Note

- Macros distinguish between uppercase and lowercase letters.
- Macros not specified above will be treated as strings of characters.

2.1.4 Obtaining a Provisioning Server Address via SIP PnP

1. Basic Sequence

At startup, the phone will multicast a SIP SUBSCRIBE message for the ua-profile event, receive a SIP NOTIFY message from the PnP server and obtain a pre-provisioning server address. It will then obtain a provisioning server address from the pre-provisioning server.

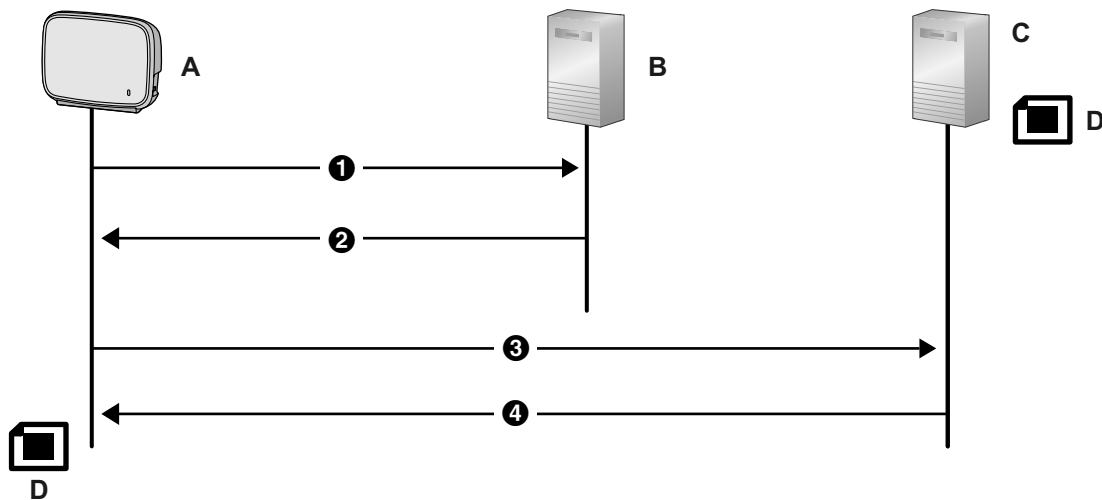

- A. KX-TGP600
 B. PnP Server
 C. Pre-provisioning Server
 D. xxxxxxxxxxxx.cfg

- ① SUBSCRIBE (multicast)
 ② NOTIFY (unicast)
 Body http://server/{MODEL}.cfg
 ③ HTTP GET {MODEL}.cfg
 ④ 200OK

Obtain provisioning server information

2.1.5 Obtaining a Provisioning Server Address from DHCP Options

CFG_STANDARD_FILE_PATH
CFG_PRODUCT_FILE_PATH
CFG_MASTER_FILE_PATH

2. Provisioning server URL formats

Format: <scheme>://<user>:<password>@<host>:<port>/<url-path>/<file name>

<scheme>	Mandatory	Protocol (TFTP/FTP/HTTP/HTTPS)
<user>	Optional	User name
<password>	Optional	Password
<host>	Mandatory	IP Address or Domain
<port>	Optional	Port number
<url-path>	Optional	Full path of the resource
<file name>	Mandatory	File name

1. Case 1: Protocol, server name and file name
http://10.0.0.1/{MODEL}.cfg
http://prov.com/{MODEL}.cfg
2. Case 2: Protocol, server name, path and file name
http://10.0.0.1/pana/{MODEL}.cfg
http://prov.com/pana/{MODEL}.cfg
3. Case 3 Protocol, user name, password, server name and file name
http://id:pass@10.0.0.1/{MAC}.cfg
http://id:pass@prov.com/{MAC}.cfg

2.1.5 Obtaining a Provisioning Server Address from DHCP Options

1. DHCPv4


a. Basic Sequence

In a DHCPv4 environment, the phone will transmit a DHCP DISCOVER message for DHCP options (66, 67, 159 and 160), receive a DHCP OFFER message, obtain a pre-provisioning server address and obtain a provisioning server address from the pre-provisioning server.

Note

- DHCP options (66, 159 and 160) are enabled in the initial state and can be enabled and disabled from the configuration parameters.

DHCP options	Configuration parameter	Priority
Option 66	OPTION66_ENABLE	3
Option 159	OPTION159_PROV_ENABLE	2
Option 160	OPTION160_PROV_ENABLE	1

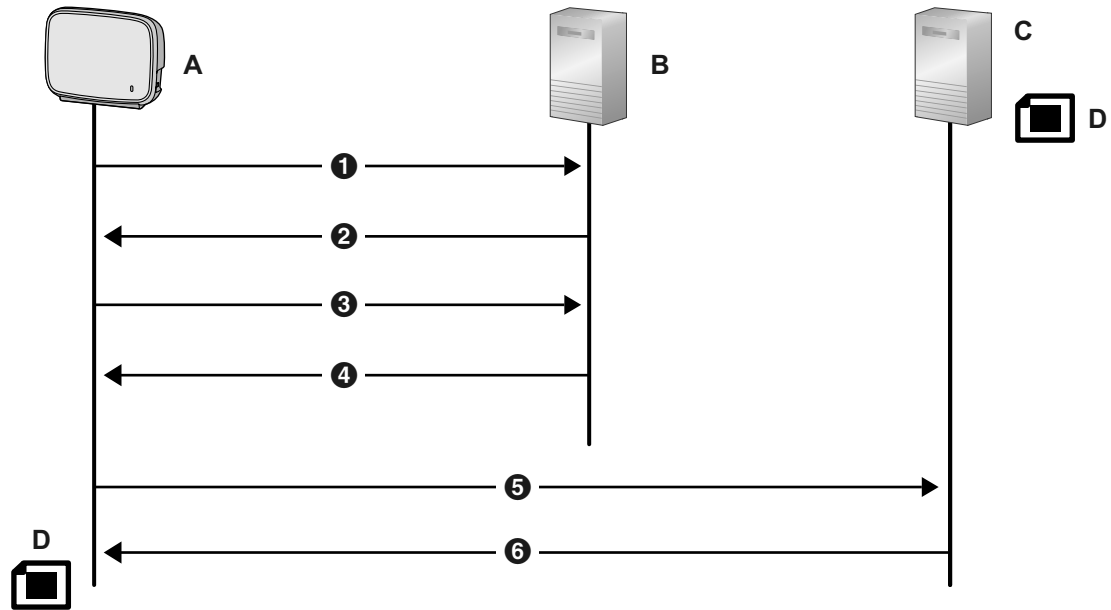

- A. KX-TGP600
 B. DHCP Server
 C. Pre-provisioning Server
 D. KX-TGP600.cfg

- ① DHCP DISCOVER
 ② DHCP OFFER
 ③ DHCP REQUEST
 ④ DHCP ACK
 ⑤ TFTP {MODEL}.cfg
 ⑥ 200OK

Obtain provisioning server information

CFG_STANDARD_FILE_PATH
 CFG_PRODUCT_FILE_PATH
 CFG_MASTER_FILE_PATH

- b. Format for pre-provisioning files obtained from DHCP option 67

Format: <path>/<file name>

<path>	Optional	path
<file name>	Mandatory	file name

1. Case 1: File name only
 {MODEL}.cfg
 2. Case 2: Path and file name
 pana/{MODEL}.cfg

- c. Format for pre-provisioning server address obtained from DHCP options 159 and 160

Format: <scheme>://<user>:<password>@<host>:<port>/<url-path>

<scheme>	Mandatory	Protocol (TFTP/FTP/HTTP/HTTPS)
----------	-----------	--------------------------------

2.1.5 Obtaining a Provisioning Server Address from DHCP Options

<user>	Optional	User name
<password>	Optional	Password
<host>	Mandatory	IP Address or Domain
<port>	Optional	Port number
<url-path>	Optional	Full path of the resource

The obtained file is the <path>/<file name> set in DHCP option 67.

If DHCP option 67 is not set, {MODEL}.cfg is obtained.

The examples in parentheses below are when {MODEL}.cfg is set for DHCP option 67.

1. Case 1: Protocol and server name
http://10.0.0.1 (http://10.0.0.1/{MODEL}.cfg)
http://prov.com (http://prov.com/{MODEL}.cfg)
2. Case 2: Protocol, server name and path
http://10.0.0.1/pana (http://10.0.0.1/pana/{MODEL}.cfg)
http://prov.com/pana (http://prov.com/pana/{MODEL}.cfg)
3. Case 3: Protocol, user name, password and server name
http://id:pass@10.0.0.1 (http://id:pass@10.0.0.1/{MODEL}.cfg)
http://id:pass@prov.com (http://id:pass@prov.com/{MODEL}.cfg)

d. Format for pre-provisioning server address obtained from DHCP option 66

Format: <scheme>://<user>:<password>@<host>:<port>/<url-path>

<scheme>	Optional	Protocol (TFTP/FTP/HTTP/HTTPS)
<user>	Optional	User name
<password>	Optional	Password
<host>	Mandatory	IP Address or Domain
<port>	Optional	Port number
<url-path>	Optional	Full path of the resource

The obtained file is the <path>/<file name> set in DHCP option 67.

If DHCP option 67 is not set, {MODEL}.cfg is obtained.

The examples in parentheses below are when {MODEL}.cfg is set for DHCP option 67.


1. Case 1: Protocol and server name
http://10.0.0.1 (http://10.0.0.1/{MODEL}.cfg)
http://prov.com (http://prov.com/{MODEL}.cfg)
2. Case 2: Protocol, server name and path
http://10.0.0.1/pana (http://10.0.0.1/pana/{MODEL}.cfg)
http://prov.com/pana (http://prov.com/pana/{MODEL}.cfg)
3. Case 3: Protocol, user name, password and server name
http://id:pass@10.0.0.1 (http://id:pass@10.0.0.1/{MODEL}.cfg)
http://id:pass@prov.com (http://id:pass@prov.com/{MODEL}.cfg)
4. Case 4: Server name
tftp://10.0.0.1 (tftp://10.0.0.1/{MODEL}.cfg)
tftp://prov.com (tftp://prov.com/{MODEL}.cfg)

2. DHCPv6

- a. In a DHCPv6 environment, the phone will transmit a DHCPv6 REQUEST message for DHCP option 17, receive a DHCPv6 REPLY message, obtain a pre-provisioning server address and obtain a provisioning server address from the pre-provisioning server.

Note

- DHCP option 17 is enabled in the initial state and can be enabled and disabled from the configuration parameters ("DHCPV6_OPTION17_PROV_ENABLE").

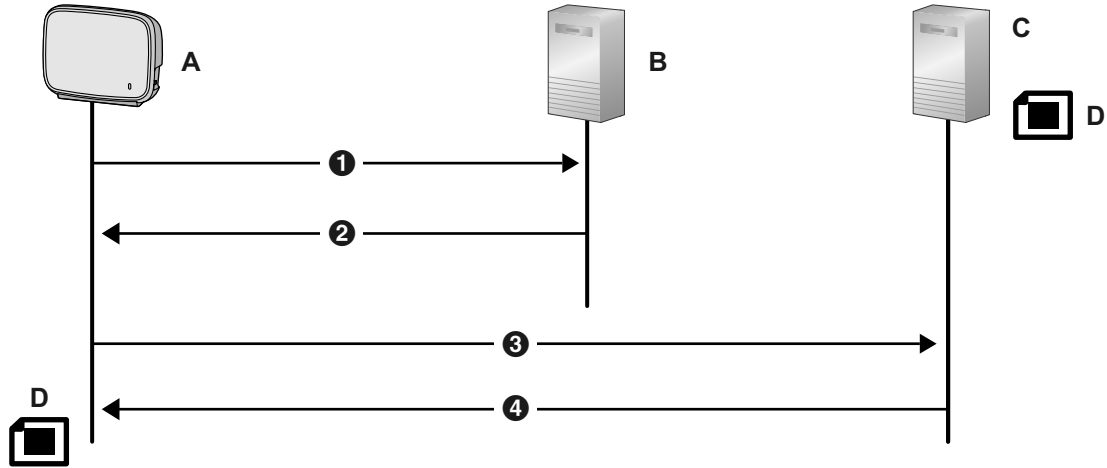

- A. KX-TGP600
 B. DHCP Server
 C. Pre-provisioning Server
 D. KX-TGP600.cfg

- ① DHCPv6 REQUEST
 ② DHCPv6 REPLY
 ③ TFTP {MODEL}.cfg
 ④ 200OK

Obtain provisioning server information

CFG_STANDARD_FILE_PATH

CFG_PRODUCT_FILE_PATH

CFG_MASTER_FILE_PATH

- b. Format for pre-provisioning addresses obtained from DHCPv6 option 17

Format: <scheme>://<user>:<password>@<host>:<port>/<url-path>

<scheme>	Mandatory	Protocol (TFTP/FTP/HTTP/HTTPS)
<user>	Optional	User name
<password>	Optional	Password
<host>	Mandatory	IP Address or Domain
<port>	Optional	Port number
<url-path>	Optional	Full path of the resource
<file name>	Mandatory	File name

- Case 1: Protocol, server name, and file name
[http://\[2001:0db8:bd05:01d2:288a:1fc0:0001:10ee\]/{MODEL}.cfg](http://[2001:0db8:bd05:01d2:288a:1fc0:0001:10ee]/{MODEL}.cfg)
<http://prov.com/{MODEL}.cfg>
- Case 2: Protocol, server name, path and file name

http://[2001:db8::1234:0:0:9abc]/pana/{MODEL}.cfg
http://prov.com/pana/{MODEL}.cfg

3. Case 3: Protocol, user name, password, server name and file name
http://id:pass@[2001:db8::9abc]/{MAC}.cfg
http://id:pass@prov.com/{MAC}.cfg

2.2 Provisioning

2.2.1 What is Provisioning?

After pre-provisioning has been performed (→ see **2.1 Pre-provisioning**), you can set up the unit automatically by downloading the configuration file stored on the provisioning server into the unit. This is called "provisioning".

2.2.2 Protocols for Provisioning

Provisioning can be performed over HTTP, HTTPS, FTP, and TFTP. The protocol you should use differs depending on how you will perform provisioning. Normally, HTTP, HTTPS, or FTP is used for provisioning. If you are transmitting encrypted configuration files, it is recommended that you use HTTP. If you are transmitting unencrypted configuration files, it is recommended that you use HTTPS. You may not be able to use FTP depending on the conditions of the network router or the network to be used.

2.2.3 Configuration File

This section gives concrete examples of the functions of the configuration file and how to manage it. The configuration file is a text file that contains the various settings that are necessary for operating the unit. The files are normally stored on a server maintained by your phone system dealer/service provider, and will be downloaded to the units as required. All configurable settings can be specified in the configuration file. You can ignore settings that already have the desired values. Only change parameters as necessary. For details about setting parameters and their descriptions, see **Section 5 Configuration File Programming**.

Using 3 Types of Configuration Files

The unit can download up to 3 configuration files. One way to take advantage of this is by classifying the configuration files into the following 3 types:

Type	Usage
Master configuration file	Configure settings that are common to all units, such as the SIP server address, and the IP addresses of the DNS and NTP (Network Time Protocol) servers managed by your phone system dealer/service provider. This configuration file is used by all the units. Example of the configuration file's URL: http://prov.example.com/Panasonic/ConfigCommon.cfg

Type	Usage
Product configuration file	Configure settings that are required for a particular model, such as the default setting of the privacy mode. This configuration file is used by all the units that have the same model name. The same number of configuration files as models being used on the network are stored on the provisioning server, and units with the same model name download the corresponding configuration file. Example of the configuration file's URL: http://prov.example.com/Panasonic/Config{MODEL}.cfg Note When a unit requests the configuration file, "{MODEL}" is replaced by the model name of the unit.
Standard configuration file	Configure settings that are unique to each unit, such as the phone number, user ID, password, etc. The same number of configuration files as units are stored on the provisioning server, and each unit downloads the corresponding standard configuration file. Example of the configuration file's URL: http://prov.example.com/Panasonic/Config{MAC}.cfg Note When a unit requests the configuration file, "{MAC}" is replaced by the MAC address of the unit.

Depending on the situation, you can use all 3 types of configuration files, and can also use only a standard configuration file.

The above example shows only one possible way to use configuration files. Depending on the requirements of your phone system dealer/service provider, there are a number of ways to use configuration files effectively.

Using 2 Types of Configuration Files

The following table shows an example of using 2 types of configuration files: a master configuration file to configure settings common to all units, and product configuration files to configure settings common to particular groups.

Using Product Configuration Files According to the Position Groups

You can use product configuration files for different groups or for multiple users within the same group.

Department Name	URL of Product Configuration File
Sales	http://prov.example.com/Panasonic/ConfigSales.cfg
Planning	http://prov.example.com/Panasonic/ConfigPlanning.cfg

2.2.4 Downloading Configuration Files

Downloading a Configuration File via the Web User Interface

The following procedure describes how to enable downloading a configuration file via the Web User Interface to be used for programming the unit.

1. Confirm that the provisioning server's IP address/FQDN and directory are correct, and store the configuration files in the directory (e.g., `http://provisioning.example.com/Panasonic/Config_Sample.cfg`).
2. Enter the IP address of the unit into the PC's Web browser (→ see **1.1.6.3 Before Accessing the Web User Interface**).
3. Log in as the administrator (→ see **Access Levels (IDs and Passwords)** in **1.1.6.3 Before Accessing the Web User Interface**).
4. Click the **[Maintenance]** tab, and then select **[Provisioning Maintenance]**.
5. Enter the URL set up in Step 1 in **[Standard File URL]**.
6. Click **[Save]**.


Timing of Downloading

A unit downloads configuration files when it starts up, at regular intervals, and when directed to do so by the server.

Download Timing	Explanation
Startup	The configuration files are downloaded when the unit starts up.

Download Timing	Explanation
At regular intervals of time	The configuration files are downloaded at specified intervals of time, set in minutes. In the example below, the unit has been programmed to download configuration files from the provisioning server every 3 days (4320 minutes). CFG_CYCLIC_INTVL="4320" A B 1 2 3 A. KX-TGP600 B. Provisioning Server 1 Power on 2 3 days later 3 6 days later ---▶ : Check ◀--- : Download The configuration files are downloaded periodically under the following conditions: • In the configuration file, add the line, <code>CFG_CYCLIC="Y"</code>. – Set an interval (minutes) by specifying "<code>CFG_CYCLIC_INTVL</code>". • In the Web user interface: – Click the [Maintenance] tab, click [Provisioning Maintenance], and then select [Yes] for [Cyclic Auto Resync]. – Enter an interval (minutes) in [Resync Interval]. Note • The interval may be determined by your phone system dealer/ service provider. A maximum interval of 28 days (40320 minutes) can be set on the unit.

2.2.4 Downloading Configuration Files

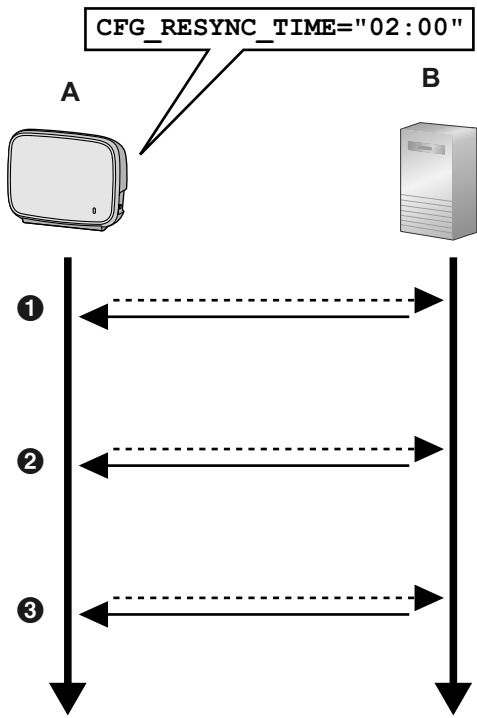Download Timing	Explanation
At a specified time each day	After the unit is powered on, it will download configuration files once per day at the specified time.  A. KX-TGP600 B. Provisioning Server ① power on at 12:00 ② 02:00 ③ 02:00 ---▶ : Check ◀--- : Download - In the configuration file: - Set a time by specifying "CFG_RESYNC_TIME". - In the Web user interface: - Click the [Maintenance] tab, click [Provisioning Maintenance], and then enter the time in [Time Resync]. Note - The time is specified using a 24-hour clock ("00:00" to "23:59").

Download Timing	Explanation
When directed	When a setting needs to be changed immediately, units can be directed to download the configuration files by sending them a NOTIFY message that includes a special event from the SIP server. - In the configuration file: - Specify the special event text in "CFG_RESYNC_FROM_SIP". - In the Web user interface: - Click the [Maintenance] tab, click [Provisioning Maintenance], and then enter the special event text in [Header Value for Resync Event]. Generally, "check-sync" or "resync" is set as the special event text.

2.2.5 Provisioning Server Setting Example

This section gives an example of how to set up the units and provisioning server when configuring 2 units with configuration files. The standard configuration files and the master configuration file are used in this example.

Conditions

Item	Description/Setting
Provisioning server FQDN	prov.example.com
Units' MAC addresses	0080F0111111 0080F0222222
URL of the configuration files	Configure the following 2 settings either by pre-provisioning or through the Web user interface. The values of both settings must be the same. - CFG_STANDARD_FILE_PATH="http://prov.example.com/Panasonic/Config{MAC}.cfg" - CFG_MASTER_FILE_PATH="http://prov.example.com/Panasonic/ConfigCommon.cfg"
Directory on the provisioning server containing the configuration files	Create the "Panasonic" directory just under the HTTP root directory of the provisioning server.
File name of configuration files	Store the following configuration files in the "Panasonic" directory. - Contains the common settings for the 2 units: - ConfigCommon.cfg - Contains the settings unique to each unit: - Config0080F0111111.cfg - Config0080F0222222.cfg

To set up the provisioning server

1. Connect the units to the network, and turn them on.
 - a. The unit with the MAC address 0080F0111111 accesses the following URLs:
 - http://prov.example.com/Panasonic/ConfigCommon.cfg
 - http://prov.example.com/Panasonic/Config0080F0111111.cfg
 - b. The unit with the MAC address 0080F0222222 accesses the following URLs:
 - http://prov.example.com/Panasonic/ConfigCommon.cfg
 - http://prov.example.com/Panasonic/Config0080F0222222.cfg

Example Provisioning Direction from the Server

The following figure shows an example NOTIFY message from the server, directing the units to perform provisioning. The text "check-sync" is specified for "CFG_RESYNC_FROM_SIP".

```
NOTIFY sip:1234567890@sip.example.com SIP/2.0
Via: SIP/2.0/UDP xxx.xxx.xxx.xxx:5060;branch=abcdef-ghijkl
From: sip:prov@sip.example.com
To: sip:1234567890@sip.example.com
Date: Wed, 1 Jan 2014 01:01:01 GMT
Call-ID: 123456-1234567912345678
CSeq: 1 NOTIFY
Contact: sip:xxx.xxx.xxx.xxx:5060
Event: check-sync
Content-Length: 0
```


2.2.6 Encryption

Secure Provisioning Methods

In order to perform provisioning securely, there are 2 methods for transferring configuration files securely between the unit and the server.

Which method is used depends on the environment and equipment available from the phone system.

Method 1: Transferring Encrypted Configuration Files

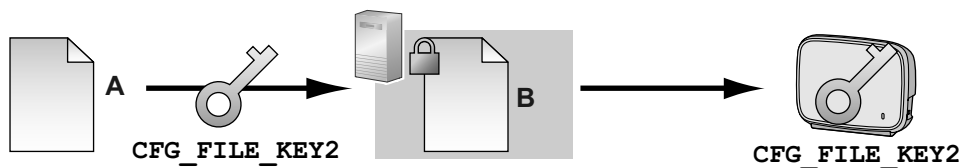

A. Unencrypted configuration file

B. Encrypted configuration file

To use this method, an encryption key is required to encrypt and decrypt the configuration files. A preset encryption key unique to each unit, an encryption key set by your phone system dealer/service provider, etc., is used for the encryption. When the unit downloads an encrypted configuration file, it will decrypt the file using the same encryption key, and then configure the settings automatically.

Method 2: Transferring Configuration Files Using HTTPS

This method uses SSL, which is commonly used on the Internet, to transfer configuration files between the unit and server. For more secure communication, you can use a root certificate.

Notice

- To avoid redundant data transfer over the network, important data, such as the encryption key used to encrypt the configuration files and the root certificate for SSL, should be configured through pre-provisioning as much as possible.
- It is recommended that you encrypt the data in order to keep the communication secure when transferring configuration files.
However, if you are using the units within a secure environment, such as within an intranet, it is not necessary to encrypt the data.

To decrypt configuration files, the unit uses the encryption key registered to it beforehand. The unit determines the encryption status by checking the extension of the downloaded configuration file.

For details about encrypting configuration files, contact the appropriate person in your organization.

Extension of Configuration File	Configuration File Parameters Used for Decrypting
".e2c"	CFG_FILE_KEY2
".e3c"	CFG_FILE_KEY3
Other than ".e2c", and ".e3c"	Processed as unencrypted configuration files. The extension ".cfg" should be used for unencrypted configuration files.

Comparison of the 2 Methods

The following table compares the characteristics for the 2 transfer methods.

	Transferring Encrypted Configuration Files	Transferring Configuration Files Using HTTPS
Provisioning server load	Light	Heavy (The server encrypts data for each transmission.)
Operation load	Necessary to encrypt data beforehand.	Unnecessary to encrypt data beforehand.
Management of configuration files	Files must be decrypted and re-encrypted for maintenance.	It is easy to manage files because they are not encrypted on the server.
Security of data on the server when operating	High	Low (Configuration files are readable by anyone with access to the server.)

Moreover, there is another method: configuration files are not encrypted while stored on the server, and then, using the encryption key registered to the unit beforehand, they are encrypted when they are transferred. This method is particularly useful when several units are configured to download a common configuration file using different encryption keys. However, as when downloading an unencrypted configuration file using HTTPS, the server will be heavily burdened when transferring configuration files.

2.3 Priority of Setting Methods

The same settings can be configured by different configuration methods: provisioning, Web user interface programming, etc. This section explains which value is applied when the same setting is specified by multiple methods.

The following table shows the priority with which settings from each method are applied (lower numbers indicate higher priority):

Priority	Setting Method
3	The factory default settings for the unit
2	Pre-provisioning with the configuration file

2.4 Configuration File Specifications

Priority	Setting Method	
1	1-1	Provisioning with the standard configuration file
	1-2	Provisioning with the product configuration file
	1-3	Provisioning with the master configuration file
	Settings configured from the Web user interface or the phone user interface	

According to the table, settings configured later override previous settings (i.e., settings listed lower in the table have a higher priority).

Notice

- Make sure to perform Reset to Factory Default before connecting the unit to a different phone system. Contact your phone system dealer/service provider for further information.

2.4 Configuration File Specifications

The specifications of the configuration files are as follows:

File Format

The configuration file is in plain text format.

Lines in Configuration Files

A configuration file consists of a sequence of lines, with the following conditions:

- Each line must end with "<CR><LF>".

Note

<CR> or <LF> alone may be acceptable under certain conditions.

- Lines that begin with "#" are considered comments.
- Configuration files must start with a comment line containing the following designated character sequence (44 bytes):
Panasonic SIP Phone Standard Format File
The hexadecimal notation of this sequence is:
23 20 50 61 6E 61 73 6F 6E 69 63 20 53 49 50 20
50 68 6F 6E 65 20 53 74 61 6E 64 61 72 64 20 46
6F 72 6D 61 74 20 46 69 6C 65 20 23
- To prevent the designated character sequence being altered by chance, it is recommended that the configuration file starts with the comment line shown below:
Panasonic SIP Phone Standard Format File # DO NOT CHANGE THIS LINE!
- Configuration files must end with an empty line.
- Each parameter line is written in the form of XXX="yyy" (XXX: parameter name, yyy: parameter value). The value must be enclosed by double quotation marks.
- A parameter line written over multiple lines is not allowed. It will cause an error on the configuration file, resulting in invalid provisioning.

Configuration Parameters

- The unit supports multiple telephone lines. For some parameters, the value for each line must be specified independently. A parameter name with the suffix "_1" is the parameter for line 1; "_2" for line 2, and so on. Examples of setting the line (phone number) for accessing a voice mail server:
"VM_NUMBER_1": for line 1,

"VM_NUMBER_2": for line 2, ...,

"VM_NUMBER_8": for line 8

Note

- The number of lines available varies depending on the phone being used, as follows:
 - KX-TGP600: 1–8
- Some parameter values can be specified as "empty" to set the parameter values to empty.
Example:
`NTP_ADDR=""`
- The parameters have no order.
- If the same parameter is specified in a configuration file more than once, the value specified first is applied.
- All configurable settings can be specified in the configuration file. You can ignore settings that already have the desired values. Only change parameters as necessary.
- Boolean parameters (BOOLEAN) accept all of the following configurations.
"Y": "Y", "y", "Yes", "YES", "yes"
"N": "N", "n", "No", "NO", "no"

Parameter Extensions

You can use parameter extensions to specify parameters as Read-Only or Carrier Default.

Read-Only Specification

- When "?R" or "?r" is specified, the phone user interface and Web user interface for the parameter in question is restricted to Read-Only.
 - * Restricting the phone user interface to Read-Only
The Read-Only parameter settings menu appears, but an error occurs during registration.
 - * Restricting the Web user interface to Read-Only
The Read-Only parameter settings menu appears grayed out and nothing can be entered.

Note

- Parameters that can be configured from the device and from the Web can be confirmed from footnotes 1-3 on the parameter names in "5.1 Configuration File Parameter List".
- When "?R" or "?r" is not specified, the phone user interface and Web user interface are both readable and writable.
 - * Optional specifications for "?R" and "?r" are enabled when the last parameter in question is configured.
Example:
(1) Import XXX?R="111" from the Web as a standard file.
 - XXX: Read-Only
 - XXX operational information: 111
 - (2) Import XXX="222" from the Web as a product file.
 - XXX : Read/Write
 - XXX operational information: 222
 - * When configurations in (1) and (2) are used, the higher priority standard file will be enabled and the value for XXX in Read-Only mode will be 111.

Carrier Default Specification

- When "?! " is specified, applicable parameter values are managed as carrier default values when applied to operational information.
 - * Carrier default values are applied once a reset to carrier defaults is executed. Carrier defaults will also be initialized when a reset to device defaults is executed.
 - * Once "?! " is specified, the parameter in question will be designated as a carrier default even if said parameter is configured without "?! ". (This setting will remain in place until restored to factory default.)

Specification of Multiple Parameter Extensions

2.5.1 Examples of Codec Settings

- One parameter can be assigned multiple extensions.
Example: XXX?R?!="" / XXX?!?r=""

Parameter Extension Configuration Example

1. In the configuration file, set IP Addressing Mode to IPv4 and Read-Only
Example parameter: IP_ADDR_MODE?R="0" ("0": IPv4)
2. If an error occurs when attempting to set the IP Mode to IPv6 using the KX-TPA60, see **To configure IP Mode (IPv4, IPv6, IPv4&IPv6)** in **Configuring the Network Settings of the Unit**.

2.5 Configuration File Examples

The following examples of configuration files are provided on the Panasonic Web site (→ see **Introduction**).

- Simplified Example of the Configuration File
- Comprehensive Example of the Configuration File

2.5.1 Examples of Codec Settings

Setting the Codec Priority to (1)G.729A, (2)G.722.2, (3)PCMU, (4)G.722

```
## Codec Settings
# Enable G.722.2 (AMR-WB)
CODEC_G722AMR_ENABLE="Y"
# Enable G722
CODEC_ENABLE0_1="Y"
CODEC_PRIORITY0_1="4"
# Disable PCMA
CODEC_ENABLE1_1="N"
# Enable G.722.2
CODEC_ENABLE2_1="Y"
CODEC_PRIORITY2_1="2"
# Enable G729A
CODEC_ENABLE3_1="Y"
CODEC_PRIORITY3_1="1"
# Enable PCMU
CODEC_ENABLE4_1="Y"
CODEC_PRIORITY4_1="3"
WIDEBAND_AUDIO_ENABLE="Y"
```

Setting Narrow-band Codecs (PCMA and G.729A)

```
## Codec Settings
# Disable G.722.2 (AMR-WB)
CODEC_G722AMR_ENABLE="N"
# Disable G722
CODEC_ENABLE0_1="N"
# Enable PCMA
CODEC_ENABLE1_1="Y"
CODEC_PRIORITY1_1="1"
# Disable G.722.2
CODEC_ENABLE2_1="N"
```

```
# Enable G729A
CODEC_ENABLE3_1="Y"
CODEC_PRIORITY3_1="1"
# Disable PCMU
CODEC_ENABLE4_1="N"
```

Setting the G.729A Codec Only

```
## Codec Settings
# Disable G.722.2 (AMR-WB)
CODEC_G722AMR_ENABLE="N"
# Disable G722
CODEC_ENABLE0_1="N"
# Disable PCMA
CODEC_ENABLE1_1="N"
# Disable G.722.2
CODEC_ENABLE2_1="N"
# Enable G729A
CODEC_ENABLE3_1="Y"
CODEC_PRIORITY3_1="1"
# Disable PCMU
CODEC_ENABLE4_1="N"
```

2.5.2 Example with Incorrect Descriptions

The following listing shows an example of a configuration file that contains incorrect formatting:

- ❶ An improper description is entered in the first line. A configuration file must start with the designated character sequence `# Panasonic SIP Phone Standard Format File #`.
- ❷ Comment lines start in the middle of the lines.

Incorrect Example

```
# This is a simplified sample configuration file. —❶

#####
# Configuration Setting #
#####

CFG_STANDARD_FILE_PATH="http://config.example.com/0123456789AB.cfg"
                        # URL of this configuration file

#####
# SIP Settings #
# Suffix "_1" indicates this parameter is for "line 1". #
#####

SIP_RGSTR_ADDR_1="registrar.example.com" # IP Address or FQDN of SIP registrar server
SIP_PRXY_ADDR_1="proxy.example.com"     # IP Address or FQDN of proxy server —❷
```

2.5.2 Example with Incorrect Descriptions

Section 3

Phone User Interface Programming

This section explains how to configure the unit by entering direct commands through the phone user interface.

3.1 Phone User Interface Programming

This section provides information about the features that can be configured directly from the unit, but that are not mentioned in the Operating Instructions.

3.1.1 Opening/Closing the Web Port

To access the Web user interface, you must open the unit's Web port beforehand.

To open the unit's Web port

1.  / **MENU**
2. **[▲]/[▼]/[◀]/[▶]**:  → **OK**
3. **[▲]/[▼]**: "Other Option" → **OK**
4. **[▲]/[▼]**: "Embedded Web" → **OK**
5. **[▲]/[▼]**: "On" for "Embedded Web" → **OK**

To close the unit's Web port

1.  / **MENU**
2. **[▲]/[▼]/[◀]/[▶]**:  → **OK**
3. **[▲]/[▼]**: "Other Option" → **OK**
4. **[▲]/[▼]**: "Embedded Web" → **OK**
5. **[▲]/[▼]**: "Off" for "Embedded Web" → **OK**

Section 4

Web User Interface Programming

This section provides information about the settings available in the Web user interface.

4.1 Web User Interface Setting List

The following tables show all the settings that you can configure from the Web user interface and the access levels. For details about each setting, see the reference pages listed.

For details about setting up Web user interface programming, see **1.1.6 Web User Interface Programming**.

Status

Menu Item	Section Title	Setting	Access Level ¹		Ref.
			U	A	
Version Information	Base Unit	Model	✓	✓	Page 72
		Operating Bank	✓	✓	Page 72
		IPL Version	✓	✓	Page 72
		Firmware Version	✓	✓	Page 72
	Handset	Model	✓	✓	Page 73
		Firmware Version	✓	✓	Page 73
Handset Information	Handset Information	Handset 1–8 (Model)	✓	✓	Page 73
		Handset 1–8 (Firmware Version)	✓	✓	Page 73

Menu Item	Section Title	Setting	Access Level ^{*1}		Ref.
			U	A	
Network Status	Network Common	MAC Address	✓	✓	Page 74
		Ethernet Link Status	✓	✓	Page 74
		IP Address Mode	✓	✓	Page 74
	IPv4	Connection Mode	✓	✓	Page 75
		IP Address	✓	✓	Page 75
		Subnet Mask	✓	✓	Page 75
		Default Gateway	✓	✓	Page 75
		DNS1	✓	✓	Page 75
		DNS2	✓	✓	Page 76
	IPv6	Connection Mode	✓	✓	Page 76
		IP Address	✓	✓	Page 76
		Prefix	✓	✓	Page 76
		Default Gateway	✓	✓	Page 76
		DNS1	✓	✓	Page 77
		DNS2	✓	✓	Page 77
	VLAN	Setting Mode	✓	✓	Page 77
		VLAN ID	✓	✓	Page 77
		VLAN Priority	✓	✓	Page 77
VoIP Status	VoIP Status	Line No.	✓	✓	Page 78
		Phone Number	✓	✓	Page 78
		VoIP Status	✓	✓	Page 78

^{*1} The access levels are abbreviated as follows:
 U: User; A: Administrator
 A check mark indicates that the setting is available for that access level.

Network

Menu Item	Section Title	Setting	Access Level ¹		Ref.
			U	A	
Basic Network Settings	IP Addressing Mode	IP Addressing Mode ²		✓	Page 80
	IPv4	Connection Mode ²		✓	Page 80
		DHCP Host Name ³		✓	Page 81
		IP Address ²		✓	Page 81
		Subnet Mask ²		✓	Page 81
		Default Gateway ²		✓	Page 82
		Auto DNS via DHCP ²		✓	Page 82
		DNS1 ²		✓	Page 82
		DNS2 ²		✓	Page 82
	IPv6	Connection Mode ²		✓	Page 83
		IP Address ²		✓	Page 83
		Prefix ²		✓	Page 83
		Default Gateway ²		✓	Page 83
		Auto DNS via DHCP ²		✓	Page 84
		DNS1 ²		✓	Page 84
		DNS2 ²		✓	Page 84
Ethernet Port Settings	Link Speed/Duplex Mode	LAN Port ²		✓	Page 85
	LLDP	Enable LLDP ²		✓	Page 86
		Packet Interval ³		✓	Page 86
	VLAN	Enable VLAN ²		✓	Page 86
		VLAN ID ²		✓	Page 87
		Priority ²		✓	Page 87
HTTP Client Settings	HTTP Client	HTTP Version ³		✓	Page 87
		HTTP User Agent ³		✓	Page 88
		Authentication ID ²		✓	Page 88
		Authentication Password ²		✓	Page 88
	Proxy Server	Enable Proxy ³		✓	Page 89
		Proxy Server Address ³		✓	Page 89
		Proxy Server Port ³		✓	Page 89

Menu Item	Section Title	Setting	Access Level ¹		Ref.
			U	A	
STUN Settings	STUN	Server Address ^{*3}		✓	Page 90
		Port ^{*3}		✓	Page 90
		Binding Interval ^{*3}		✓	Page 90
Multicast Paging Settings	Multicast Paging	Group 1–5	–	–	–
		- IPv4 Address ^{*3}		✓	Page 91
		- IPv6 Address ^{*3}		✓	Page 91
		- Port ^{*3}		✓	Page 92
		- Priority ^{*3} (Group 1–3 only)		✓	Page 92
		- Label ^{*3}		✓	Page 92
		- Enable Transmission ^{*3}		✓	Page 92
LDAP Settings	LDAP	Enable LDAP ^{*3}		✓	Page 93
		Server Address ^{*3}		✓	Page 93
		Port ^{*3}		✓	Page 93
		User ID ^{*3}		✓	Page 94
		Password ^{*3}		✓	Page 94
		Max Hits ^{*3}		✓	Page 94
		Name Filter ^{*3}		✓	Page 94
		Number Filter ^{*3}		✓	Page 94
		Name Attributes ^{*3}		✓	Page 95
		Number Attributes ^{*3}		✓	Page 95
		Display Name ^{*3}		✓	Page 95
		Enable DNS SRV lookup ^{*3}		✓	Page 95

4.1 Web User Interface Setting List

Menu Item	Section Title	Setting	Access Level ^{*1}		Ref.
			U	A	
Xtended Service Settings	Xtended Service	Enable Xtended Service ^{*3}		✓	Page 96
		Server Address ^{*3}		✓	Page 96
		Port ^{*3}		✓	Page 97
		Protocol ^{*3}		✓	Page 97
		Line 1–8	–	–	–
		- User ID ^{*2}		✓	Page 97
		- Password ^{*2}		✓	Page 97
		- Enable Phonebook ^{*3}		✓	Page 97
		- Phonebook Type ^{*3}		✓	Page 98
		- Enable Call Log ^{*3}		✓	Page 98
UC Settings	Presence Feature	Enable UC ^{*3}		✓	Page 99
		Server Address ^{*3}		✓	Page 99
		Local XMPP Port ^{*3}		✓	Page 99
		Handset 1–8	–	–	–
		- User ID ^{*2}		✓	Page 99
		- Password ^{*2}		✓	Page 99
XML Application Settings	XML Application	Enable XMLAPP ^{*3}		✓	Page 100
		User ID ^{*3}		✓	Page 100
		Password ^{*3}		✓	Page 100
		Local XML Port ^{*3}		✓	Page 101
	XML Phonebook	LDAP URL ^{*3}		✓	Page 101
		User ID ^{*3}		✓	Page 101
		Password ^{*3}		✓	Page 101
		Max Hits ^{*3}		✓	Page 101

^{*1} The access levels are abbreviated as follows:

U: User; A: Administrator

A check mark indicates that the setting is available for that access level.

^{*2} This setting can also be configured through other programming methods (phone user interface programming or configuration file programming).

^{*3} This setting can also be configured through configuration file programming.

System

Menu Item	Section Title	Setting	Access Level ¹		Ref.
			U	A	
System Settings	System	Enable Multi Number ^{*3}		✓	Page 102
		Enable Repeater Mode ^{*3}		✓	Page 102
Language Settings	Selectable Language	Handset ^{*3}		✓	Page 103
		Web ^{*3}		✓	Page 104
	Web Language	Web Language ^{*3}	✓	✓	Page 105
User Password Settings	User Password	Current Password	✓	✓	Page 107
		New Password ^{*3}	✓	✓	Page 107
		Confirm New Password	✓	✓	Page 107
Admin Password Settings	Admin Password	Current Password		✓	Page 108
		New Password ^{*3}		✓	Page 108
		Confirm New Password		✓	Page 108
Time Adjust Settings	Synchronization	Server Address ^{*3}		✓	Page 109
		Synchronization Interval ^{*3}		✓	Page 109
	Time Zone	Time Zone ^{*3}		✓	Page 110
	Daylight Saving Time (Summer Time)	Enable DST (Enable Summer Time) ^{*3}		✓	Page 110
		DST Offset (Summer Time Offset) ^{*3}		✓	Page 110
	Start Day and Time of DST (Start Day and Time of Summer Time)	Month ^{*3}		✓	Page 110
		Day of Week		✓	Page 111
		Time ^{*3}		✓	Page 112
	End Day and Time of DST (End Day and Time of Summer Time)	Month ^{*3}		✓	Page 112
		Day of Week		✓	Page 112
		Time ^{*3}		✓	Page 113
Handset Basic Settings	Handset x	Handset Name ^{*2}	✓	✓	Page 114
		Language ^{*3}	✓	✓	Page 114

4.1 Web User Interface Setting List

Menu Item	Section Title	Setting	Access Level ^{*1}		Ref.
			U	A	
Handset Advanced Settings	Soft Key during IDLE Status	Soft Key A (Left) ^{*3}		✓	Page 115
		Soft Key B (Center) ^{*3}		✓	Page 115
		Soft Key C (Right) ^{*3}		✓	Page 116
	Handset x	Enable Admin Ability ^{*3}		✓	Page 116
		Enable Handset Lock ^{*3}		✓	Page 116
		Password for Unlocking ^{*3}		✓	Page 117
Parallel Mode Settings	Parallel Mode	Slave Handset Number ^{*2}		✓	Page 117
		Mode ^{*2}		✓	Page 117

^{*1} The access levels are abbreviated as follows:

U: User; A: Administrator

A check mark indicates that the setting is available for that access level.

^{*2} This setting can also be configured through other programming methods (phone user interface programming or configuration file programming).

^{*3} This setting can also be configured through configuration file programming.

VoIP

Menu Item	Section Title	Setting	Access Level ^{*1}		Ref.
			U	A	
SIP Settings	User Agent	User Agent ^{*3}		✓	Page 118
	NAT Identity	Enable Rport (RFC 3581) ^{*3}		✓	Page 119
		Enable Port Punching for SIP ^{*3}		✓	Page 119
		Enable Port Punching for RTP ^{*3}		✓	Page 119

Menu Item	Section Title	Setting	Access Level ¹		Ref.
			U	A	
SIP Settings [Line 1]–[Line 8]	Basic	Phone Number ^{*3}		✓	Page 120
		Registrar Server Address ^{*3}		✓	Page 121
		Registrar Server Port ^{*3}		✓	Page 121
		Proxy Server Address ^{*3}		✓	Page 121
		Proxy Server Port ^{*3}		✓	Page 121
		Presence Server Address ^{*3}		✓	Page 121
		Presence Server Port ^{*3}		✓	Page 122
		Outbound Proxy Server Address ^{*3}		✓	Page 122
		Outbound Proxy Server Port ^{*3}		✓	Page 122
		Service Domain ^{*3}		✓	Page 122
		Authentication ID ^{*3}		✓	Page 122
		Authentication Password ^{*3}		✓	Page 123
	Advanced	SIP Packet QoS (DSCP) ^{*3}		✓	Page 123
		Enable DNS SRV lookup ^{*3}		✓	Page 123
		SRV lookup Prefix for UDP ^{*3}		✓	Page 123
		SRV lookup Prefix for TCP ^{*3}		✓	Page 124
		SRV lookup Prefix for TLS ^{*3}		✓	Page 124
		Local SIP Port ^{*3}		✓	Page 124
		SIP URI ^{*3}		✓	Page 125
		T1 Timer ^{*3}		✓	Page 125
		T2 Timer ^{*3}		✓	Page 125
		REGISTER Expires Timer ^{*3}		✓	Page 126
		Enable Session Timer (RFC 4028) ^{*3}		✓	Page 126
		Session Timer Method ^{*3}		✓	Page 126
		Enable 100rel (RFC 3262) ^{*3}		✓	Page 126
		Enable SSAF (SIP Source Address Filter) ^{*3}		✓	Page 127
		Enable c=0.0.0.0 Hold (RFC 2543) ^{*3}		✓	Page 127
		Transport Protocol ^{*3}		✓	Page 127
		TLS Mode ^{*3}		✓	Page 127

4.1 Web User Interface Setting List

Menu Item	Section Title	Setting	Access Level ^{*1}		Ref.
			U	A	
VoIP Settings	RTP	RTP Packet Time ^{*3}		✓	Page 128
		Minimum RTP Port Number ^{*3}		✓	Page 128
		Maximum RTP Port Number ^{*3}		✓	Page 128
		Telephone-event Payload Type ^{*3}		✓	Page 129
	Voice Quality Report	Server Address ^{*3}		✓	Page 129
		Port ^{*3}		✓	Page 129
		Enable PUBLISH ^{*3}		✓	Page 129
		Alert Report Trigger ^{*3}		✓	Page 130
		Threshold MOS-LQ (Critical) ^{*3}		✓	Page 130
		Threshold MOS-LQ (Warning) ^{*3}		✓	Page 130
		Threshold Delay (Critical) ^{*3}		✓	Page 130
		Threshold Delay (Warning) ^{*3}		✓	Page 130

Menu Item	Section Title	Setting	Access Level ^{*1}		Ref.
			U	A	
VoIP Settings [Line1]–[Line8]	Basic	G.722 ^{*4}	–	–	–
		- Enable ^{*3*4}		✓	Page 131
		- Priority ^{*3*4}		✓	Page 131
		PCMA	–	–	–
		- Enable ^{*3}		✓	Page 132
		- Priority ^{*3}		✓	Page 132
		G.722.2 (AMR-WB) ^{*4}	–	–	–
		- Enable ^{*3*4}		✓	Page 132
		- Priority ^{*3*4}		✓	Page 132
		G.729A	–	–	–
		- Enable ^{*3}		✓	Page 133
		- Priority ^{*3}		✓	Page 133
		PCMU	–	–	–
		- Enable ^{*3}		✓	Page 133
		- Priority ^{*3}		✓	Page 133
		DTMF Type		✓	Page 133
	Advanced	RTP Packet QoS (DSCP) ^{*3}		✓	Page 134
		RTCP Packet QoS (DSCP) ^{*3}		✓	Page 134
		Enable RTCP ^{*3}		✓	Page 134
		Enable RTCP-XR ^{*3}		✓	Page 134
		RTCP&RTCP-XR Interval ^{*3}		✓	Page 135
		SRTP Mode ^{*3}		✓	Page 135
		Enable Mixed SRTP & RTP by Conference ^{*3}		✓	Page 135
		Enable Mixed SRTP & RTP by Transfer ^{*3}		✓	Page 135

^{*1} The access levels are abbreviated as follows:

U: User; A: Administrator

A check mark indicates that the setting is available for that access level.

^{*2} This setting can also be configured through other programming methods (phone user interface programming or configuration file programming).

^{*3} This setting can also be configured through configuration file programming.

^{*4} This setting is not displayed by default.

Telephone

Menu Item	Section Title	Setting	Access Level ¹		Ref.
			U	A	
Multi Number Settings	Group Handset / Handset select for receiving call	Line ²	✓	✓	Page 136
		Phone Number	✓	✓	Page 137
		Handset Number	✓	✓	Page 137
		Paging ³	✓	✓	Page 137
	Handset and Line Number select for making call	Handset	✓	✓	Page 137
		Line Number ²	✓	✓	Page 137
		Default ²	✓	✓	Page 138
Call Control	Call Control	Send SUBSCRIBE to Voice Mail Server ³		✓	Page 138
		Conference Server URI ³		✓	Page 139
		First-digit Timeout ³		✓	Page 139
		Inter-digit Timeout ³		✓	Page 139
		Timer for Dial Plan ³		✓	Page 139
		Enable # Key as delimiter ³		✓	Page 140
		International Call Prefix ³		✓	Page 140
		Country Calling Code ³		✓	Page 140
		National Access Code ³		✓	Page 140
		Call Park Number ³		✓	Page 140
		Enable Call Park Key ³		✓	Page 141
		Park Retrieve Number ³		✓	Page 141
		Park Retrieve Soft Key ³		✓	Page 141
	Emergency Call Phone Numbers	1–5 ³		✓	Page 141

Menu Item	Section Title	Setting	Access Level ¹		Ref.
			U	A	
Call Control [Line 1]–[Line 8]	Call Features	Display Name ^{*3}		✓	Page 142
		Voice Mail Access Number ^{*3}		✓	Page 143
		Enable Anonymous Call ^{*2}		✓	Page 143
		Enable Block Anonymous Call ^{*2}		✓	Page 143
		Enable Do Not Disturb ^{*2}		✓	Page 143
		Enable Call Waiting ^{*3}		✓	Page 143
		Enable Call Forwarding Always ^{*2}		✓	Page 144
		Forwarding Number (Always) ^{*2}		✓	Page 144
		Enable Call Forwarding Busy ^{*2}		✓	Page 144
		Forwarding Number (Busy) ^{*2}		✓	Page 144
		Enable Call Forwarding No Answer ^{*2}		✓	Page 144
		Forwarding Number (No Answer) ^{*2}		✓	Page 145
		Ring Counts (No Answer) ^{*2}		✓	Page 145
		Enable Shared Call ^{*3}		✓	Page 145
		Enable Key Synchronization ^{*3}		✓	Page 145
		Enable Call Park Notification ^{*3}		✓	Page 146
		Enable Click to Call ^{*3}		✓	Page 146
		MoH Server URI ^{*3}		✓	Page 146
	Dial Plan	Dial Plan (max 1000 columns) ^{*3}		✓	Page 146
		Call Even If Dial Plan Does Not Match ^{*3}		✓	Page 147
	Call Rejection Phone Numbers	1–20 ^{*2}		✓	Page 147
Hotline Settings	Hotline	Handset 1–8	–	–	–
		- Enable ^{*3}		✓	Page 148
		- Hotline Number ^{*3}		✓	Page 148
		Hotline Delay ^{*3}		✓	Page 149

4.1 Web User Interface Setting List

Menu Item	Section Title	Setting	Access Level ^{*1}		Ref.
			U	A	
Tone Settings	Dial Tone	Tone Frequencies		✓	Page 149
		Tone Timings ^{*3}		✓	Page 150
	Busy Tone	Tone Frequencies		✓	Page 150
		Tone Timings ^{*3}		✓	Page 150
	Ringing Tone	Tone Frequencies		✓	Page 151
		Tone Timings ^{*3}		✓	Page 151
	Stutter Tone	Tone Frequencies		✓	Page 151
		Tone Timings		✓	Page 152
	Reorder Tone	Tone Frequencies		✓	Page 152
		Tone Timings ^{*3}		✓	Page 152
Import Phonebook	Import Phonebook	Handset Number	✓	✓	Page 153
		File Name	✓	✓	Page 154
Export Phonebook	Export Phonebook	Handset Number	✓	✓	Page 155

^{*1} The access levels are abbreviated as follows:

U: User; A: Administrator

A check mark indicates that the setting is available for that access level.

^{*2} This setting can also be configured through other programming methods (phone user interface programming or configuration file programming).

^{*3} This setting can also be configured through configuration file programming.

Maintenance

Menu Item	Section Title	Setting	Access Level ^{*1}		Ref.
			U	A	
Provisioning Maintenance	Provisioning Maintenance	Standard File URL ^{*3}		✓	Page 155
		Product File URL ^{*3}		✓	Page 156
		Master File URL ^{*3}		✓	Page 156
		Cyclic Auto Resync ^{*3}		✓	Page 156
		Resync Interval ^{*3}		✓	Page 156
		Time Resync ^{*3}		✓	Page 157
		Header Value for Resync Event ^{*3}		✓	Page 157

Menu Item	Section Title	Setting	Access Level ^{*1}		Ref.
			U	A	
Firmware Maintenance	Firmware Maintenance	Enable Firmware Update ^{*3}		✓	Page 157
		Firmware File URL ^{*3}		✓	Page 158
Upgrade Firmware	Upgrade Firmware	File Name		✓	Page 158
Import Wallpaper	Import Wallpaper	Gradation Type		✓	Page 159
		File Name		✓	Page 159
Export Logging File	Export Logging File	Logging File Type		✓	Page 160
Reset to Defaults	Reset to Carrier Defaults	The following settings will be reset to carrier default values when you click [Reset to Carrier Defaults] .		✓	Page 160
Restart	Restart	Click [Restart] to proceed. Restarting will take a few moments.		✓	Page 161

^{*1} The access levels are abbreviated as follows:

U: User; A: Administrator

A check mark indicates that the setting is available for that access level.

^{*2} This setting can also be configured through other programming methods (phone user interface programming or configuration file programming).


^{*3} This setting can also be configured through configuration file programming.

4.2 Status

This section provides detailed descriptions about all the settings classified under the **[Status]** tab.

4.2.1 Version Information

This screen allows you to view the current version information such as the model number and the firmware version of the unit.

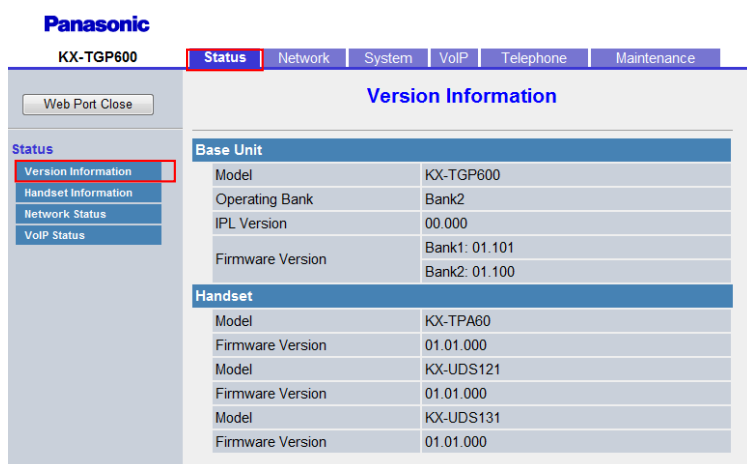

4.2.1.1 Base Unit

Model

Description	Indicates the model number of the unit (reference only).
Value Range	Model number

Operating Bank

Description	Indicates the storage area of the firmware that is currently operating (reference only).
Value Range	- Bank1 - Bank2

IPL Version

Description	Indicates the version of the IPL (Initial Program Load) that runs when starting the unit (reference only).
Value Range	nn.nnn

Firmware Version

Description	Indicates the version of the firmware that is currently installed on the unit (reference only).
Value Range	Bank1 (Bank2): Firmware version ("nn.nnn" [n=0–9])

4.2.1.2 Handset

Model


Description	Indicates the model number of the handset (reference only).
Value Range	Model number

Firmware Version

Description	Indicates the version of the firmware that is currently installed on the Handset (reference only).
Value Range	Model Name Firmware version ("nn.nnn" [n=0–9])

4.2.2 Handset Information

This screen allows you to view the current version information such as the model number and the firmware of the Linked Handset.

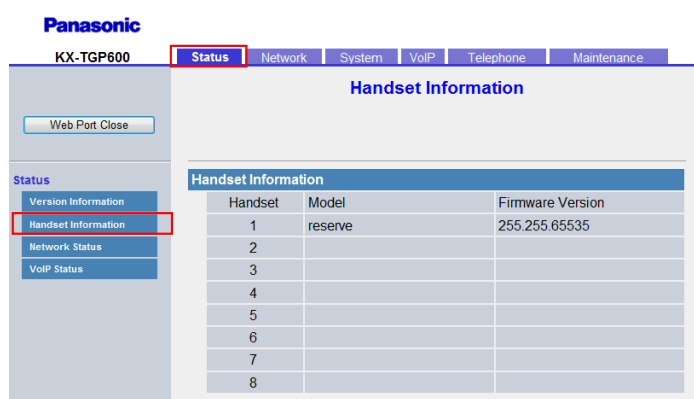

4.2.2.1 Handset Information

Handset 1–8 (Model)

Description	Indicates the model number of the handset (reference only).
Value Range	Model number

Handset 1–8 (Firmware Version)

Description	Indicates the version of the firmware that is currently installed on the handset (reference only).
Value Range	nn.nn.nnn

4.2.3 Network Status

This screen allows you to view the current network information of the unit, such as the MAC address, IP address, Ethernet port status, etc.

Clicking **[Refresh]** updates the information displayed on the screen.



4.2.3.1 Network Common

MAC Address

Description	Indicates the MAC address of the unit (reference only).
Value Range	Not applicable.

Ethernet Link Status

Description	Indicates the current connection status of the Ethernet LAN port (reference only).
Value Range	Connected

IP Address Mode

Description	Indicates the current IP Address Mode.
--------------------	--

Value Range	- IPv4 - IPv6 - IPv4&IPv6
--------------------	---

4.2.3.2 IPv4

Connection Mode

Description	Indicates whether the IP address of the unit is assigned automatically (DHCP) or manually (static) (reference only).
Value Range	- DHCP - Static

IP Address

Description	Indicates the currently assigned IP address of the unit (reference only).
Value Range	IP address

Subnet Mask

Description	Indicates the specified subnet mask for the unit (reference only).
Value Range	Subnet mask

Default Gateway

Description	Indicates the specified IP address of the default gateway for the network (reference only). Note If the default gateway address is not specified, this field will be left blank.
Value Range	IP address of the default gateway

DNS1

Description	Indicates the specified IP address of the primary DNS server (reference only). Note If the primary DNS server address is not specified, this field will be left blank.
Value Range	IP address of the primary DNS server

DNS2

Description	Indicates the specified IP address of the secondary DNS server (reference only). Note If the secondary DNS server address is not specified, this field will be left blank.
Value Range	IP address of the secondary DNS server

4.2.3.3 IPv6

Connection Mode

Description	Indicates whether the IP address of the unit is assigned automatically (DHCP) or manually (static) (reference only).
Value Range	- Static - DHCP - Stateless Autoconfiguration (RA)

IP Address

Description	Indicates the currently assigned IP address of the unit (reference only).
Value Range	IP address

Prefix

Description	Indicates the prefix for IPv6.
Value Range	0–128

Default Gateway

Description	Indicates the specified IP address of the default gateway for the network (reference only). Note If the default gateway address is not specified, this field will be left blank.
Value Range	IP address of the default gateway

DNS1

Description	Indicates the specified IP address of the primary DNS server (reference only). Note If the primary DNS server address is not specified, this field will be left blank.
Value Range	IP address of the primary DNS server

DNS2

Description	Indicates the specified IP address of the secondary DNS server (reference only). Note If the secondary DNS server address is not specified, this field will be left blank.
Value Range	IP address of the secondary DNS server

4.2.3.4 VLAN

Setting Mode

Description	Indicates the specified VLAN feature (reference only).
Value Range	- Disable - LLDP - Manual

VLAN ID

Description	Indicates the VLAN ID (reference only).
Value Range	0–4094

VLAN Priority


Description	Indicates the priority number (reference only).
Value Range	0–7

4.2.4 VoIP Status

This screen allows you to view the current VoIP status of each line's unit.

4.2.4 VoIP Status

Clicking **[Refresh]** updates the information displayed on the screen.

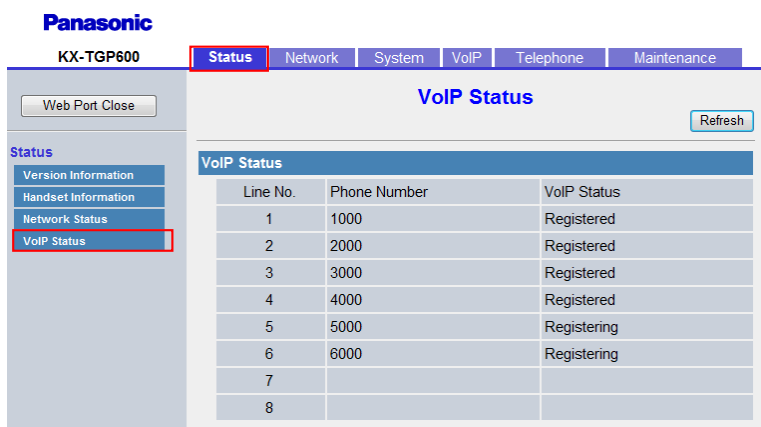

4.2.4.1 VoIP Status

Line No. (1–8)

Description	Indicates the line number to which a phone number is assigned (reference only).
Value Range	Line 1–Line 8

Phone Number

Description	Indicates the currently assigned phone numbers (reference only). Note The corresponding field is blank if a line has not yet been leased or if the unit has not been configured.
Value Range	Max. 32 digits

VoIP Status

Description	Indicates the current VoIP status of each line (reference only).
-------------	--

Value Range	- Registered: The unit has been registered to the SIP server, and the line can be used. - Registering: The unit is being registered to the SIP server, and the line cannot be used. - Blank: The line has not been leased, the unit has not been configured yet, or a SIP authentication failure has occurred. Note - Immediately after starting up the unit, the phone numbers of the lines will be displayed, but the status of the line may not be displayed because the unit is still being registered to the SIP server. To display the status, wait about 30 to 60 seconds, and then click [Refresh] to obtain updated status information.
--------------------	---

4.3 Network

This section provides detailed descriptions about all the settings classified under the **[Network]** tab.

4.3.1 Basic Network Settings

This screen allows you to change basic network settings such as whether to use a DHCP server, and the IP address of the unit.

Note

- Changes to the settings on this screen are applied when the message "Complete" appears after clicking **[Save]**. Because the IP address of the unit will probably be changed if you change these settings, you will not be able to continue using the Web user interface. To continue configuring the unit from the Web user interface, log in to the Web user interface again after confirming the newly assigned IP address of the unit using the phone user interface. In addition, if the IP address of the PC from which you try to access the Web user interface has been changed, close the Web port once by selecting "off" for

4.3.1 Basic Network Settings

"Embedded Web" on the unit (→ see **Opening/Closing the Web Port** in 1.1.6.3 **Before Accessing the Web User Interface**).

The screenshot shows the Panasonic KX-TGP600 web interface. At the top, there are tabs for Status, Network (highlighted), System, VoIP, Telephone, and Maintenance. Below the tabs, the title 'Basic Network Settings' is displayed. On the left, a sidebar lists various settings: Basic Network Settings (highlighted), Ethernet Port Settings, HTTP Client Settings, STUN Settings, Multicast Paging Settings, LDAP Settings, Extended Service Settings, UC Settings, and XML Application Settings. The main content area is divided into sections for IP Addressing Mode, IPv4, and IPv6. The IP Addressing Mode section has a dropdown menu with options IPv4, IPv6, and IPv4 & IPv6. The IPv4 section includes fields for Connection Mode (DHCP or Static), DHCP Host Name, IP Address, Subnet Mask, Default Gateway, Auto DNS via DHCP (Yes or No), DNS1, and DNS2. The IPv6 section includes fields for Connection Mode (DHCP, Static, or Stateless Autoconfiguration), IP Address, Prefix, Default Gateway, Auto DNS via DHCP (Yes or No), DNS1, and DNS2. At the bottom, there are 'Save' and 'Cancel' buttons.

4.3.1.1 IP Addressing Mode

IP Addressing Mode

Description	Selects the IP addressing mode.
Value Range	• IPv4 • IPv6 • IPv4&IPv6
Default Value	IPv4
Configuration File Reference	IP_ADDR_MODE (Page 184)

4.3.1.2 IPv4

Connection Mode

Description	Selects the IP address setting mode for IPv4.
Value Range	• Static • DHCP
Default Value	DHCP

Configuration File Reference	CONNECTION_TYPE (Page 184)
------------------------------	----------------------------

DHCP Host Name

Description	Specifies the host name to option12 in DHCPv4 or option15 in DHCPv6. Note This setting is available only when [Connection Mode] is set to [DHCP].
Value Range	Max. 64 characters
Default Value	{MODEL}
Configuration File Reference	DHCP_HOST_NAME (Page 187)

IP Address

Description	Specifies the IP address for IPv4. Note This setting is available only when [Connection Mode] is set to [Static].
Value Range	Max. 15 characters n.n.n.n [n=0–255]
Default Value	Not stored.
Configuration File Reference	STATIC_IP_ADDRESS (Page 185)

Subnet Mask

Description	Specifies the subnet mask for IPv4. Note This setting is available only when [Connection Mode] is set to [Static].
Value Range	Max. 15 characters n.n.n.n [n=0–255]
Default Value	Not stored.
Configuration File Reference	STATIC_SUBNET (Page 185)

Default Gateway

Description	Specifies the default gateway for IPv4. Note This setting is available only when [Connection Mode] is set to [Static].
Value Range	Max. 15 characters n.n.n.n [n=0–255]
Default Value	Not stored.
Configuration File Reference	STATIC_GATEWAY (Page 185)

Auto DNS via DHCP

Description	Selects whether to enable or disable the DNS server obtained by DHCPv4. Note This setting is available only when [Connection Mode] is set to [DHCP].
Value Range	- Yes: Use DNS obtained by DHCPv4 - No: Not use (use static DNS)
Default Value	Yes
Configuration File Reference	DHCP_DNS_ENABLE (Page 186)

DNS1

Description	Specifies the IP address of primary DNS server for IPv4.
Value Range	Max. 15 characters n.n.n.n [n=0–255]
Default Value	Not stored.
Configuration File Reference	USER_DNS1_ADDR (Page 186)

DNS2

Description	Specifies the IP address of secondary DNS server for IPv4.
Value Range	Max. 15 characters n.n.n.n [n=0–255]
Default Value	Not stored.
Configuration File Reference	USER_DNS2_ADDR (Page 186)

4.3.1.3 IPv6

Connection Mode

Description	Selects the IP address setting mode for IPv6.
Value Range	• Static • DHCP • Stateless Autoconfiguration
Default Value	DHCP
Configuration File Reference	CONNECTION_TYPE_IPV6 (Page 187)

IP Address

Description	Specifies the IP address for IPv6. Note • This setting is available only when [Connection Mode] is set to [Static].
Value Range	Max. 39 characters n:n:n:n:n:n:n [n=0-FFFF, abbreviation available]
Default Value	Not stored.
Configuration File Reference	STATIC_IP_ADDRESS_IPV6 (Page 188)

Prefix

Description	Specifies the prefix for IPv6. Note • This setting is available only when [Connection Mode] is set to [Static].
Value Range	0–128
Default Value	64
Configuration File Reference	PREFIX_IPV6 (Page 188)

Default Gateway

Description	Specifies the default gateway for IPv6. Note • This setting is available only when [Connection Mode] is set to [Static].
Value Range	Max. 39 characters n:n:n:n:n:n:n [n=0-FFFF, abbreviation available]

4.3.2 Ethernet Port Settings

Default Value	Not stored.
Configuration File Reference	STATIC_GATEWAY_IPV6 (Page 188)

Auto DNS via DHCP

Description	Selects whether to enable or disable the DNS server obtained by DHCPv6. Note This setting is available only when [Connection Mode] is set to [DHCP].
Value Range	- Yes: Use DNS obtained by DHCPv6 - No: Not use (use static DNS)
Default Value	Yes
Configuration File Reference	DHCP_DNS_ENABLE_IPV6 (Page 189)

DNS1

Description	Specifies the IP address of primary DNS server for IPv6.
Value Range	Max. 39 characters n:n:n:n:n:n:n [n=0-FFFF, abbreviation available]
Default Value	Not stored.
Configuration File Reference	USER_DNS1_ADDR_IPV6 (Page 188)

DNS2

Description	Specifies the IP address of secondary DNS server for IPv6.
Value Range	Max. 39 characters n:n:n:n:n:n:n [n=0-FFFF, abbreviation available]
Default Value	Not stored.
Configuration File Reference	USER_DNS2_ADDR_IPV6 (Page 188)

4.3.2 Ethernet Port Settings

This screen allows you to change the connection mode of the Ethernet ports, LLDP and the VLAN settings.

Note

- When you change the settings on this screen and click **[Save]**, after the message "Complete" has been displayed, the unit will restart automatically with the new settings applied. If a unit is on a call when "Complete" has been displayed, the unit will restart after the unit returns to idle.

Panasonic
KX-TGP600

Status **Network** System VoIP Telephone Maintenance

Ethernet Port Settings

Web Port Close

Network

- Basic Network Settings
- Ethernet Port Settings**
- HTTP Client Settings
- STUN Settings
- Multicast Paging Settings
- LDAP Settings
- Extended Service Settings
- UC Settings
- XML Application Settings

Link Speed/Duplex Mode

LAN Port Auto Negotiation

LLDP

Enable LLDP ☒ Yes ☐ No

Packet Interval 30 seconds [1-3600]

VLAN

Enable VLAN ☐ Yes ☒ No

VLAN ID 2 [0-4094]

Priority 7

The phone reboots automatically if you change the settings on this screen.

Save Cancel

4.3.2.1 Link Speed/Duplex Mode

LAN Port

Description	Selects the connection mode (link speed and duplex mode) of the LAN port.
Value Range	- Auto Negotiation 100Mbps/Full Duplex 100Mbps/Half Duplex 10Mbps/Full Duplex 10Mbps/Half Duplex
Default Value	Auto Negotiation
Configuration File Reference	PHY_MODE_LAN (Page 189)

4.3.2.2 LLDP

Enable LLDP

Description	Selects whether to enable or disable the LLDP-MED feature. Note - You should specify "Yes" for only one of "Enable LLDP", or "Enable VLAN". - If "Yes" is specified for two or more of the parameters above, the settings are prioritized as follows: "Enable VLAN" > "Enable LLDP". Therefore, if "Yes" is specified for both "Enable VLAN" and "Enable LLDP", the VLAN-related settings are used.
Value Range	- Yes - No
Default Value	Yes
Configuration File Reference	LLDP_ENABLE (Page 190)

Packet Interval

Description	Specifies the interval, in seconds, between sending each LLDP frame.
Value Range	1–3600
Default Value	30
Configuration File Reference	LLDP_INTERVAL (Page 191)

4.3.2.3 VLAN

Enable VLAN

Description	Selects whether to use the VLAN feature to perform VoIP communication securely. Note - You should specify "Yes" for only one of "Enable LLDP", or "Enable VLAN". - If "Yes" is specified for two or more of the parameters above, the settings are prioritized as follows: "Enable VLAN" > "Enable LLDP". Therefore, if "Yes" is specified for both "Enable VLAN" and "Enable LLDP", the VLAN-related settings are used.
Value Range	- Yes - No
Default Value	No

Configuration File Reference	VLAN_ENABLE (Page 189)
-------------------------------------	------------------------

VLAN ID

Description	Specifies the VLAN ID.
Value Range	0–4094
Default Value	2
Configuration File Reference	VLAN_ID_IP_PHONE (Page 190)

Priority

Description	Selects the priority number.
Value Range	0–7
Default Value	7
Configuration File Reference	VLAN_PRI_IP_PHONE (Page 190)

4.3.3 HTTP Client Settings

This screen allows you to change the HTTP client settings for the unit in order to access the HTTP server of your phone system and download configuration files.

Panasonic
KX-TGP600

Status **Network** System VoIP Telephone Maintenance

HTTP Client Settings

Web Port Close

Network

- Basic Network Settings
- Ethernet Port Settings
- HTTP Client Settings**
- STUN Settings
- Multicast Paging Settings
- LDAP Settings
- Extended Service Settings
- UC Settings
- XML Application Settings

HTTP Client

HTTP Version: ☒ HTTP/1.0 ☐ HTTP/1.1

HTTP User Agent: Panasonic_{MODEL}/(fwver) ((mac))

Authentication ID:

Authentication Password:

Proxy Server

Enable Proxy: ☐ Yes ☒ No

Proxy Server Address:

Proxy Server Port: 8080 [1-65535]

Save Cancel

4.3.3.1 HTTP Client

HTTP Version

Description	Selects which version of the HTTP protocol to use for HTTP communication.
--------------------	---

4.3.3 HTTP Client Settings

Value Range	• HTTP/1.0 • HTTP/1.1 Note • For this unit, it is strongly recommended that you select [HTTP/1.0]. However, if the HTTP server does not function well with HTTP/1.0, try changing the setting [HTTP/1.1].
Default Value	HTTP/1.0
Configuration File Reference	HTTP_VER (Page 198)

HTTP User Agent

Description	Specifies the text string to send as the user agent in the header of HTTP requests.
Value Range	Max. 64 characters Note • If "{mac}" is included in this parameter, it will be replaced with the unit's MAC address in lower-case. • If "{MAC}" is included in this parameter, it will be replaced with the unit's MAC address in upper-case. • If "{MODEL}" is included in this parameter, it will be replaced with the unit's model name. • If "{fwver}" is included in this parameter, it will be replaced with the firmware version of the unit.
Default Value	Panasonic_{MODEL}/{fwver} ({mac})
Configuration File Reference	HTTP_USER_AGENT (Page 198)

Authentication ID

Description	Specifies the ID for the User account. If set, this name must be entered to access the Web user interface at the User access level.
Value Range	Max. 128 characters
Default Value	Not stored.
Configuration File Reference	HTTP_AUTH_ID (Page 199)

Authentication Password

Description	Specifies the password for the User account. If set, this password must be entered to access the Web user interface at the User access level.
Value Range	Max. 128 characters
Default Value	Not stored.
Configuration File Reference	HTTP_AUTH_PASS (Page 199)

4.3.3.2 Proxy Server

Enable Proxy

Description	Selects whether to enable or disable the HTTP proxy feature.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	HTTP_PROXY_ENABLE (Page 199)

Proxy Server Address

Description	Specifies the IP address or FQDN of the proxy server.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	HTTP_PROXY_ADDR (Page 199)

Proxy Server Port

Description	Specifies the port number of the proxy server.
Value Range	1–65535
Default Value	8080
Configuration File Reference	HTTP_PROXY_PORT (Page 200)

4.3.4 STUN Settings

This screen allows you to change the STUN Settings.

Panasonic
KX-TGP600

Status **Network** System VoIP Telephone Maintenance

STUN Settings

Web Port Close

Network

- Basic Network Settings
- Ethernet Port Settings
- HTTP Client Settings
- STUN Settings**
- Multicast Paging Settings
- LDAP Settings
- Extended Service Settings
- UC Settings
- XML Application Settings

STUN

Server Address

Port [1-65535]

Binding Interval seconds [60-86400]

4.3.4.1 STUN

STUN: Simple Traversal of UDP through NATs

Server Address

Description	Specifies the host name or IP address of the STUN server for the CPE to send Binding Requests.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	STUN_SERV_ADDR (Page 231)

Port

Description	Specifies the port number of the STUN server for the CPE to send Binding Requests.
Value Range	1–65535
Default Value	3478
Configuration File Reference	STUN_SERV_PORT (Page 232)

Binding Interval

Description	Specifies the interval of the sending binding request.
Value Range	60–86400
Default Value	300
Configuration File Reference	STUN_INTVL (Page 232)

4.3.5 Multicast Paging Settings

This screen allows you to change the Multicast Paging Settings for each channel Group.

Panasonic
KX-TGP600

Status **Network** System VoIP Telephone Maintenance

Web Port Close

Multicast Paging Settings

Network

- Basic Network Settings
- Ethernet Port Settings
- HTTP Client Settings
- STUN Settings
- Multicast Paging Settings**
- LDAP Settings
- Extended Service Settings
- UC Settings
- XML Application Settings

Multicast Paging

Group	IPv4 Address	IPv6 Address	Port	Label	Enable Transmission
Group 5	[224.0.0.0-239.255.255.255]	[FF00::/8]	0 [0-65535, 0:Disable]		☐ Yes ☒ No
Group 4	[224.0.0.0-239.255.255.255]	[FF00::/8]	0 [0-65535, 0:Disable]		☐ Yes ☒ No
Group 3	[224.0.0.0-239.255.255.255]	[FF00::/8]	0 [0-65535, 0:Disable]		☐ Yes ☒ No

4.3.5.1 Multicast Paging

IPv4 Address (Group 1–5)

Description	Specifies the address for multi-cast paging for each channel group. {Priority: Group 5 > Group 4 > Group 3, Group2, Group1 (depending on the configuration)}
Value Range	224.0.0.0–239.255.255.255
Default Value	Not stored.
Configuration File Reference	MPAGE_ADDRm (Page 220)

IPv6 Address (Group 1–5)

Description	Specifies the IPv6 address for multi-cast paging for each channel group. {Priority: Group 5 > Group 4 > Group 3, Group2, Group1 (depending on the configuration)}
Value Range	FF00::/8
Default Value	Not stored.
Configuration File Reference	MPAGE_IPV6_ADDRm (Page 220)

Port (Group 1–5)

Description	Specifies the port number for multi-cast paging for each channel group.
Value Range	1–65535 0: Disable
Default Value	0
Configuration File Reference	MPAGE_PORTm (Page 221)

Priority (Group 1–3)

Description	Selects the priority of the low priority channel group. The priority of multi-cast paging group1-3 is lower than the talking. Priority 4 is higher than Priority 5.
Value Range	4, 5
Default Value	5
Configuration File Reference	MPAGE_PRIORITYm (Page 221)

Label (Group 1–5)

Description	Specifies a label for each channel group.
Value Range	Max. 24 characters
Default Value	Not stored.
Configuration File Reference	MPAGE_LABELm (Page 221)

Enable Transmission (Group 1–5)

Description	Selects the sending multi-cast paging.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	MPAGE_SEND_ENABLEm (Page 221)

4.3.6 LDAP Settings

This screen allows you to change the LDAP Settings.

Panasonic
KX-TGP600

Status | **Network** | System | VoIP | Telephone | Maintenance

LDAP Settings

Web Port Close

Network

- Basic Network Settings
- Ethernet Port Settings
- HTTP Client Settings
- STUN Settings
- Multicast Paging Settings
- LDAP Settings**
- Extended Service Settings
- UC Settings
- XML Application Settings

LDAP

Enable LDAP	☐ Yes ☒ No
Server Address	
Port	389 [1-65535]
User ID	
Password	
Max Hits	20 [20-500]
Name Filter	((cn=%)(sn=%))
Number Filter	((telephoneNumber=%)(mobile=%)(homePhone=
Name Attributes	cn,sn
Number Attributes	telephoneNumber,mobile,homePhone
Display Name	
Enable DNS SRV lookup	☐ Yes ☒ No

Save Cancel

4.3.6.1 LDAP

Enable LDAP

Description	Selects whether to enable or disable the LDAP service.
Value Range	- Yes - No
Default Value	No
Configuration File Reference	LDAP_ENABLE (Page 214)

Server Address

Description	Specifies the server host of LDAP.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	LDAP_SERVER (Page 214)

Port

Description	Specifies the port of server.
Value Range	1–65535
Default Value	389

Configuration File Reference	LDAP_SERVER_PORT (Page 215)
-------------------------------------	-----------------------------

User ID

Description	Specifies the authentication ID required to access the LDAP server.
Value Range	Max. 128 characters
Default Value	Not stored.
Configuration File Reference	LDAP_USERID (Page 215)

Password

Description	Specifies the authentication password required to access the LDAP server.
Value Range	Max. 128 characters
Default Value	Not stored.
Configuration File Reference	LDAP_PASSWORD (Page 216)

Max Hits

Description	Specifies the maximum number of search results to be returned by the LDAP server.
Value Range	20–500
Default Value	20
Configuration File Reference	LDAP_MAXRECORD (Page 215)

Name Filter

Description	Specifies the name filter which is the search criteria for name look up.
Value Range	Max. 256 characters
Default Value	((cn=*)(sn=*))
Configuration File Reference	LDAP_NAME_FILTER (Page 216)

Number Filter

Description	Specifies the number filter which is the search criteria for number look up.
Value Range	Max. 256 characters
Default Value	((telephoneNumber=*)(mobile =*)(homePhone =*))

Configuration File Reference	LDAP_NUMB_FILTER (Page 216)
-------------------------------------	-----------------------------

Name Attributes

Description	Specifies the name attributes of each record which are to be returned in the LDAP search result.
Value Range	Max. 256 characters
Default Value	cn,sn
Configuration File Reference	LDAP_NAME_ATTRIBUTE (Page 216)

Number Attributes

Description	Specifies the number attributes of each record which are to be returned in the LDAP search result.
Value Range	Max. 256 characters
Default Value	telephoneNumber,mobile,homePhone
Configuration File Reference	LDAP_NUMB_ATTRIBUTE (Page 217)

Display Name

Description	Specifies the entry information on the screen.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	LDAP_BASEDN (Page 217)

Enable DNS SRV lookup

Description	Selects whether to request the DNS server to translate domain names into IP addresses using the SRV record.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	LDAP_DNSSRV_ENABLE (Page 214)

4.3.7 Xtended Service Settings

This screen allows you to change the Xtended Service Settings.

Panasonic
KX-TGP600

Status | **Network** | System | VoIP | Telephone | Maintenance

Web Port Close

Network

- Basic Network Settings
- Ethernet Port Settings
- HTTP Client Settings
- STUN Settings
- Multicast Paging Settings
- LDAP Settings
- Xtended Service Settings**
- UC Settings
- XML Application Settings

Xtended Service

Enable Xtended Service		☐ Yes ☒ No
Server Address		
Port		80 [1-65535]
Protocol		☒ HTTP ☐ HTTPS
Line 1	User ID	
	Password	
	Enable Phonebook	☐ Yes ☒ No
	Phonebook Type	Group
Line 2	Enable Call Log	☐ Yes ☒ No
	User ID	
	Password	
	Enable Phonebook	☐ Yes ☒ No
Line 3	Phonebook Type	Group
	Enable Call Log	☐ Yes ☒ No
	User ID	
	Password	
Line 4	Enable Phonebook	☐ Yes ☒ No
	Phonebook Type	Group
	Enable Call Log	☐ Yes ☒ No
	User ID	

4.3.7.1 Xtended Service

Enable Xtended Service

Description	Selects whether to enable or disable the Xsi service.
Value Range	- Yes - No
Default Value	No
Configuration File Reference	XSI_ENABLE (Page 209)

Server Address

Description	Specifies the IP address or FQDN of the Xsi server.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	XSI_SERVER (Page 210)

Port

Description	Specifies the port of the Xsi server.
Value Range	1–65535
Default Value	80
Configuration File Reference	XSI_SERVER_PORT (Page 210)

Protocol

Description	Selects the type of the Xsi server.
Value Range	HTTP, HTTPS
Default Value	HTTP
Configuration File Reference	XSI_SERVER_TYPE (Page 210)

User ID (Line 1–8)

Description	Specifies the authentication ID required to access the Xsi server.
Value Range	Max. 128 characters
Default Value	Not stored.
Configuration File Reference	XSI_USERID_n (Page 210)

Password (Line 1–8)

Description	Specifies the authentication password required to access the Xsi server.
Value Range	Max. 128 characters
Default Value	Not stored.
Configuration File Reference	XSI_PASSWORD_n (Page 211)

Enable Phonebook (Line 1–8)

Description	Selects whether to enable or disable the Xsi phonebook service.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	XSI_PHONEBOOK_ENABLE_n (Page 211)

Phonebook Type (Line 1–8)

Description	Selects the type of Xsi phonebook.
Value Range	• Group • GroupCommon • Enterprise • EnterpriseCommon • Personal
Default Value	Group
Configuration File Reference	XSI_PHONEBOOK_TYPE_n (Page 211)

Enable Call Log (Line 1–8)

Description	Selects whether to enable or disable the Xsi call log service.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	XSI_CALLLOG_ENABLE_n (Page 211)

4.3.8 UC Settings

This screen allows you to change the UC Settings.

Panasonic
KX-TGP600

Status **Network** System VoIP Telephone Maintenance

UC Settings

Web Port Close

Network

- Basic Network Settings
- Ethernet Port Settings
- HTTP Client Settings
- STUN Settings
- Multicast Paging Settings
- LDAP Settings
- Extended Service Settings
- UC Settings**
- XML Application Settings

Presence Feature

Enable UC ☐ Yes ☒ No

Server Address

Local XMPP Port 5222 [1-65535]

Handset 1	User ID	
	Password	
Handset 2	User ID	
	Password	
Handset 3	User ID	
	Password	
Handset 4	User ID	
	Password	
Handset 5	User ID	
	Password	
Handset 6	User ID	
	Password	
Handset 7	User ID	
	Password	
Handset 8	User ID	
	Password	

4.3.8.1 Presence Feature

Enable UC

Description	Selects whether to enable the UC service.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	UC_ENABLE (Page 212)

Server Address

Description	Specifies the IP address or FQDN of the XMPP server.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	XMPP_SERVER (Page 213)

Local XMPP Port

Description	Specifies the local XMPP port.
Value Range	1–65535
Default Value	5222
Configuration File Reference	XMPP_PORT (Page 213)

Handset 1–8 (User ID)

Description	Specifies the authentication ID required to access the UC server.
Value Range	Max. 128 characters
Default Value	Not stored.
Configuration File Reference	UC_USERID_HSy (Page 212)

Handset 1–8 (Password)

Description	Specifies the authentication password required to access the UC server.
Value Range	Max. 128 characters
Default Value	Not stored.
Configuration File Reference	UC_PASSWORD_HSy (Page 212)

4.3.9 XML Application Settings

This screen allows you to configure the various URLs used with the XML application feature.

The screenshot displays the Panasonic KX-TGP600 web interface. The 'Network' tab is selected in the top navigation bar. On the left sidebar, 'XML Application Settings' is highlighted. The main content area is titled 'XML Application Settings' and contains two sections: 'XML Application' and 'XML Phonebook'. In the 'XML Application' section, 'Enable XMLAPP' is set to 'No'. The 'User ID' and 'Password' fields are empty. The 'Local XML Port' is set to 6666. In the 'XML Phonebook' section, the 'LDAP URL' is empty, and 'User ID' and 'Password' are also empty. The 'Max Hits' is set to 20. At the bottom, there are 'Save' and 'Cancel' buttons.

4.3.9.1 XML Application

Enable XMLAPP

Description	Selects whether to enable or disable the XML application feature.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	XMLAPP_ENABLE (Page 207)

User ID

Description	Specifies the authentication ID required to access the XML application server.
Value Range	Max. 128 characters
Default Value	Not stored.
Configuration File Reference	XMLAPP_USERID (Page 207)

Password

Description	Specifies the authentication password used to access the XML application server.
Value Range	Max. 128 characters
Default Value	Not stored.

Configuration File Reference	XMLAPP_USERPASS (Page 208)
-------------------------------------	----------------------------

Local XML Port

Description	Specifies the local HTTP port for XML application.
Value Range	1–65535
Default Value	6666
Configuration File Reference	XML_HTTPD_PORT (Page 209)

4.3.9.2 XML Phonebook

LDAP URL

Description	Specifies the URL that is accessed when the phonebook is accessed, to check for XML data.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	XMLAPP_LDAP_URL (Page 208)

User ID

Description	Specifies the authentication ID required to access the LDAP server.
Value Range	Max. 128 characters
Default Value	Not stored.
Configuration File Reference	XMLAPP_LDAP_USERID (Page 208)

Password

Description	Specifies the authentication password used to access the LDAP server.
Value Range	Max. 128 characters
Default Value	Not stored.
Configuration File Reference	XMLAPP_LDAP_USERPASS (Page 208)

Max Hits

Description	Specifies the maximum number of search results to be returned by the LDAP server.
Value Range	20–500

4.4.1 System Settings


Default Value	20
Configuration File Reference	XMLAPP_LDAP_MAXRECORD (Page 209)

4.4 System

This section provides detailed descriptions about all the settings classified under the **[System]** tab.

4.4.1 System Settings

This screen allows you to perform system settings on IP terminals.

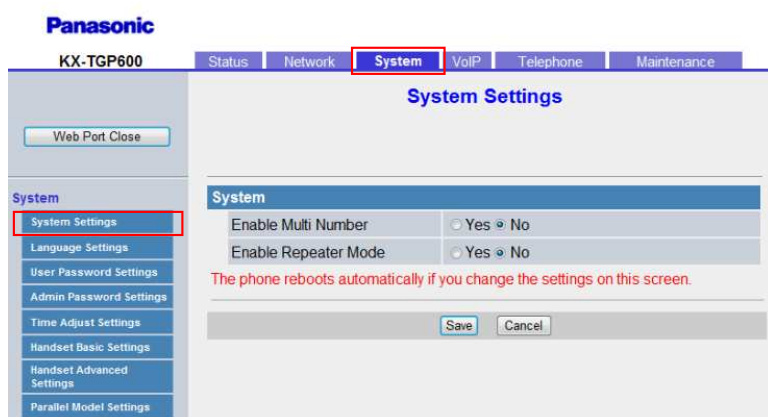

4.4.1.1 System

Enable Multi Number

Description	Specifies whether to enable or disable the multi number mode.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	MULTI_NUMBER_ENABLE (Page 182)

Enable Repeater Mode

Description	Specifies whether to turn the repeater mode on or off.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	REPEATER_MODE (Page 278)

4.4.2 Language Settings

This screen allows you to select the language used for the Web user interface. The language setting is only applicable when you log in to the Web user interface as User.

Note

- If you change the language while logged in to the Web user interface with the User account, the language will be changed after the message "Complete" is displayed. If you are logged in with the Administrator account, the language will be changed when a user logs in to the Web user interface as User.
- The language used for the Web user interface for the Administrator account is always English.
- The language used for the unit remains unchanged even if the language for the Web user interface is changed.

Panasonic
KX-TGP600

Status | Network | **System** | VoIP | Telephone | Maintenance

Language Settings

Web Port Close

System

- System Settings
- Language Settings**
- User Password Settings
- Admin Password Settings
- Time Adjust Settings
- Handset Basic Settings
- Handset Advanced Settings
- Parallel Model Settings

Selectable Language

Handset	en,es,fr	RFC3066 code
Web	en,es,fr	RFC3066 code

Web Language

Web Language: en

Save Cancel

4.4.2.1 Selectable Language

Handset

Description	Specifies the selectable language on the handset. Up to 10 languages separated by commas can be registered. (e.g., "en,es,fr,de,it,nl,pt")
--------------------	---

4.4.2 Language Settings

Value Range	• en: English • es: Spanish • fr: French • de: German • it: Italian • da: Danish • nl: Dutch • sv: Swedish • fi: Finnish • el: Greek • hu: Hungarian • pt: Portuguese • pl: Polish • sk: Slovakian • cs: Czech • sh: Croatian • ru: Russian • uk: Ukrainian • tr: Turkish • no: Norwegian • ro: Romanian • ct: Custom • kk: Kazakh • me: Montenegrin
Default Value	Depends on the country or area.
Configuration File Reference	AVAILABLE_LANGUAGE_HS (Page 229)

Web

Description	Specifies the selectable language on the Web. Up to 10 languages separated by commas can be registered. (e.g., "en,es,fr,de,it,nl,pt")
--------------------	---

Value Range	• en: English • es: Spanish • fr: French • de: German • it: Italian • nl: Dutch • el: Greek • hu: Hungarian • pt: Portuguese • pl: Polish • sk: Slovakian • cs: Czech • sh: Croatian • ru: Russian • uk: Ukrainian • tr: Turkish • ro: Romanian • ct: Custom • kk: Kazakh • me: Montenegrin
Default Value	Depends on the country or area.
Configuration File Reference	AVAILABLE_LANGUAGE_WEB (Page 230)

4.4.2.2 Web Language

Web Language

Description	Selects the default language on the web. You can select a language from the languages set in Web in 4.4.2.1 Selectable Language.
--------------------	--

4.4.3 User Password Settings

Value Range	• en: English • es: Spanish • fr: French • de: German • it: Italian • nl: Dutch • el: Greek • hu: Hungarian • pt: Portuguese • pl: Polish • sk: Slovakian • cs: Czech • sh: Croatian • ru: Russian • uk: Ukrainian • tr: Turkish • ro: Romanian • ct: Custom • kk: Kazakh • me: Montenegrin
Default Value	en
Configuration File Reference	WEB_LANGUAGE (Page 231)

4.4.3 User Password Settings

This screen allows you to change the password used to authenticate the User account when logging in to the Web user interface.

Note

- For security reasons, the characters entered for the password are masked by special characters, which differ depending on the Web browser.
- After you change the user password, the next time you access the Web user interface, the authentication dialog box appears. Three consecutive login failures will result in an error ("401 Unauthorized"). This restriction only applies the first time you attempt to log in after changing the password. In all other circumstances, an error occurs after 3 unsuccessful login attempts.

The screenshot displays the Panasonic KX-TGP600 Web User Interface. At the top, the 'System' tab is selected in the navigation bar. The left sidebar shows a list of settings categories, with 'User Password Settings' highlighted. The main content area is titled 'User Password Settings' and contains a 'User Password' section with three input fields: 'Current Password', 'New Password' (with a '6-64 characters' hint), and 'Confirm New Password'. Below these fields are 'Save' and 'Cancel' buttons. A 'Web Port Close' button is visible in the top left of the main area.

4.4.3.1 User Password

Current Password

Description	Specifies the current password to use to authenticate the User account when logging in to the Web user interface.
Value Range	6–64 characters (except !, ", #, \$, %, &, ', (,), *, +, ,, /, :, ;, <, =, >, ?, [,], ^, `, {, , }, ~, \ and space)
Default Value	Not stored.

New Password

Description	Specifies the new password to use to authenticate the User account when logging in to the Web user interface.
Value Range	6–64 characters (except !, ", #, \$, %, &, ', (,), *, +, ,, /, :, ;, <, =, >, ?, [,], ^, `, {, , }, ~, \ and space)
Default Value	Not stored. Note When a user logs in to the Web user interface for the first time, after clicking OK on the authentication dialog box, the [Initial User Password Settings] screen is displayed automatically to make the user set a password.
Configuration File Reference	USER_PASS (Page 201)

Confirm New Password

Description	Specifies the same password that you entered in [New Password] for confirmation.
Value Range	6–64 characters (except !, ", #, \$, %, &, ', (,), *, +, ,, /, :, ;, <, =, >, ?, [,], ^, `, {, , }, ~, \ and space)
Default Value	Not stored.

4.4.4 Admin Password Settings

This screen allows you to change the password used to authenticate the Administrator account when logging in to the Web user interface.

Note

- For security reasons, the characters entered for the password are masked by special characters, which differ depending on the Web browser.
- After you change the administrator password, the next time you access the Web user interface, the authentication dialog box appears. Three consecutive login failures will result in an error ("401

4.4.4 Admin Password Settings

Unauthorized"). This restriction only applies the first time you attempt to log in after changing the password. In all other circumstances, an error occurs after 3 unsuccessful login attempts.

The screenshot shows the Panasonic KX-TGP600 web interface. The top navigation bar includes 'Status', 'Network', 'System' (selected), 'VoIP', 'Telephone', and 'Maintenance'. The 'System' section is expanded, showing 'Admin Password Settings' as the active page. The page title is 'Admin Password Settings'. On the left sidebar, 'System' is selected, and 'Admin Password Settings' is highlighted. The main content area has a 'Web Port Close' button at the top. Below it, the 'Admin Password' section contains three input fields: 'Current Password', 'New Password' (with a note '6-64 characters'), and 'Confirm New Password'. At the bottom of this section are 'Save' and 'Cancel' buttons.

4.4.4.1 Admin Password

Current Password

Description	Specifies the current password to use to authenticate the Administrator account when logging in to the Web user interface.
Value Range	6–64 characters (except !, ", #, \$, %, &, ', (,), *, +, ,, /, :, ;, <, =, >, ?, [,], ^, `, {, , }, ~, \ and space)
Default Value	adminpass

New Password

Description	Specifies the new password to use to authenticate the Administrator account when logging in to the Web user interface.
Value Range	6–64 characters (except !, ", #, \$, %, &, ', (,), *, +, ,, /, :, ;, <, =, >, ?, [,], ^, `, {, , }, ~, \ and space)
Default Value	Not stored.
Configuration File Reference	ADMIN_PASS (Page 202)

Confirm New Password

Description	Specifies the same password that you entered in [New Password] for confirmation.
Value Range	6–64 characters (except !, ", #, \$, %, &, ', (,), *, +, ,, /, :, ;, <, =, >, ?, [,], ^, `, {, , }, ~, \ and space)
Default Value	Not stored.

4.4.5 Time Adjust Settings

This screen allows you to enable automatic clock adjustment using an NTP server and configure the settings for DST (Daylight Saving Time), also known as Summer Time.

4.4.5.1 Synchronization

Server Address

Description	Specifies the IP address or FQDN of NTP server.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	NTP_ADDR (Page 223)

Synchronization Interval

Description	Specifies the interval, in seconds, between synchronizations with the NTP server.
Value Range	10–86400
Default Value	43200
Configuration File Reference	TIME_QUERY_INTVL (Page 223)

4.4.5.2 Time Zone

Time Zone

Description	Selects your time zone.
Value Range	GMT -12:00–GMT +13:00
Default Value	GMT
Configuration File Reference	TIME_ZONE (Page 224)

4.4.5.3 Daylight Saving Time (Summer Time)

Enable DST (Enable Summer Time)

Description	Selects whether to enable Daylight Saving Time (Summer Time).
Value Range	• Yes • No
Default Value	No
Configuration File Reference	DST_ENABLE (Page 225)

DST Offset (Summer Time Offset)

Description	Specifies the amount of time, in minutes, to change the time when "DST_ENABLE" is set to "Y".
Value Range	0–720 (min)
Default Value	60
Configuration File Reference	DST_OFFSET (Page 225)

4.4.5.4 Start Day and Time of DST (Start Day and Time of Summer Time)

Month

Description	Selects the month in which DST (Summer Time) starts.
--------------------	--

Value Range	• January • February • March • April • May • June • July • August • September • October • November • December
Default Value	March
Configuration File Reference	DST_START_MONTH (Page 226)

Day of Week

Using the 2 following settings, specify on which day of the selected month DST (Summer Time) starts. For example, to specify the second Sunday, select **[Second]** and **[Sunday]**.

Description	Selects the number of the week on which DST (Summer Time) starts.
Value Range	• First • Second • Third • Fourth • Last
Default Value	Second
Configuration File Reference	DST_START_ORDINAL_DAY (Page 226)

Description	Selects the day of the week on which DST (Summer Time) starts.
Value Range	• Sunday • Monday • Tuesday • Wednesday • Thursday • Friday • Saturday
Default Value	Sunday
Configuration File Reference	DST_START_DAY_OF_WEEK (Page 226)

Time

Description	Specifies the start time of DST (Summer Time) in minutes after 12:00 AM.
Value Range	0–1439 (min)
Default Value	120
Configuration File Reference	DST_START_TIME (Page 227)

4.4.5.5 End Day and Time of DST (End Day and Time of Summer Time)

Month

Description	Selects the month in which DST (Summer Time) ends.
Value Range	• January • February • March • April • May • June • July • August • September • October • November • December
Default Value	October
Configuration File Reference	DST_STOP_MONTH (Page 227)

Day of Week

Using the 2 following settings, specify on which day of the selected month DST (Summer Time) ends. For example, to specify the second Sunday, select **[Second]** and **[Sunday]**.

Description	Selects the number of the week on which DST (Summer Time) ends.
Value Range	• First • Second • Third • Fourth • Last
Default Value	Second
Configuration File Reference	DST_STOP_ORDINAL_DAY (Page 228)

Description	Selects the day of the week on which DST (Summer Time) ends.
--------------------	--

Value Range	• Sunday • Monday • Tuesday • Wednesday • Thursday • Friday • Saturday
Default Value	Sunday
Configuration File Reference	DST_STOP_DAY_OF_WEEK (Page 228)

Time

Description	Specifies the end time of DST (Summer Time) in minutes after 12:00 AM.
Value Range	0–1439 (min)
Default Value	120
Configuration File Reference	DST_STOP_TIME (Page 228)

4.4.6 Handset Basic Settings

This screen allows you to change the Handset Name and Language for each Handset.

Panasonic
KX-TGP600

Status | Network | **System** | VoIP | Telephone | Maintenance

Handset Basic Settings

Web Port Close

System

- System Settings
- Language Settings
- User Password Settings
- Admin Password Settings
- Time Adjust Settings
- Handset Basic Settings**
- Handset Advanced Settings
- Parallel Model Settings

Handset 1

Handset Name: Handset 1
Language: en

Handset 2

Handset Name: Handset 2
Language: en

Handset 3

Handset Name: Handset 3
Language: en

Handset 4

Handset Name: Handset 4
Language: en

Handset 5

Handset Name: Handset 5
Language: en

Handset 6

Handset Name: Handset 6
Language: en

Handset 7

Handset Name: Handset 7
Language: en

Handset 8

4.4.6.1 Handset 1–8

Handset Name

Description	Specifies the handset name.
Value Range	Max. 16 characters
Default Value	HANDSET_NAME_HS1="Handset 1" HANDSET_NAME_HS2="Handset 2" HANDSET_NAME_HS3="Handset 3" HANDSET_NAME_HS4="Handset 4" HANDSET_NAME_HS5="Handset 5" HANDSET_NAME_HS6="Handset 6" HANDSET_NAME_HS7="Handset 7" HANDSET_NAME_HS8="Handset 8"
Configuration File Reference	HANDSET_NAME_HSy (Page 296)

Language

Description	Selects the default language on the handset. You can select a language from the languages set in Handset in 4.4.2.1 Selectable Language .
Value Range	en, es, fr, de, it, da, nl, sv, fi, el, hu, pt, pl, sk, cs, sh, ru, uk, tr, no, ro, ct, kk → see Handset in 4.4.2.1 Selectable Language
Default Value	en
Configuration File Reference	DEFAULT_LANGUAGE_HSy (Page 230)

4.4.7 Handset Advanced Settings

This screen allows you to change the Soft Key function settings.

Panasonic
KX-TGP600

Status | Network | **System** | VoIP | Telephone | Maintenance

Web Port Close

System

- System Settings
- Language Settings
- User Password Settings
- Admin Password Settings
- Time Adjust Settings
- Handset Basic Settings
- Handset Advanced Settings**
- Parallel Model Settings

Handset Advanced Settings

Soft Key during IDLE Status

Soft Key A (Left) Phonebook

Soft Key B (Center) Menu

Soft Key C (Right) Outgoing Call Log

Handset 1

Enable Admin Ability ☒ Yes ☐ No

Enable Handset Lock ☐ Yes ☒ No

Password for Unlocking [0000-9999]

Handset 2

Enable Admin Ability ☒ Yes ☐ No

Enable Handset Lock ☐ Yes ☒ No

Password for Unlocking [0000-9999]

Handset 3

Enable Admin Ability ☒ Yes ☐ No

Enable Handset Lock ☐ Yes ☒ No

Password for Unlocking [0000-9999]

Handset 4

Enable Admin Ability ☒ Yes ☐ No

Enable Handset Lock ☐ Yes ☒ No

Password for Unlocking [0000-9999]

Handset 5

4.4.7.1 Soft Key during IDLE Status

Soft Key A (Left)

Description	Selects soft key (A) during IDLE state.
Value Range	- Phonebook - Menu - Outgoing Call Log - Incoming Call Log - Redial - Page (Used when performing Multicast Paging)
Default Value	Phonebook
Configuration File Reference	IDLE_SOFT_KEY_A (Page 295)

Soft Key B (Center)

Description	Selects soft key (B) during IDLE state.
--------------------	---

4.4.7 Handset Advanced Settings

Value Range	• Phonebook • Menu • Outgoing Call Log • Incoming Call Log • Redial • Page (Used when performing Multicast Paging)
Default Value	Menu
Configuration File Reference	IDLE_SOFT_KEY_B (Page 295)

Soft Key C (Right)

Description	Selects soft key (C) during IDLE state.
Value Range	• Phonebook • Menu • Outgoing Call Log • Incoming Call Log • Redial • Page (Used when performing Multicast Paging)
Default Value	Outgoing Call Log
Configuration File Reference	IDLE_SOFT_KEY_C (Page 296)

4.4.7.2 Handset 1–8

Enable Admin Ability

Description	Selects whether to enable admin rights for handset.
Value Range	• Yes • No
Default Value	Yes
Configuration File Reference	ADMIN_ABILITY_ENABLE_HSy (Page 296)

Enable Handset Lock

Description	Selects whether to enable locking handset.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	SYS_LOCK_ENABLE_HSy (Page 279)

Password for Unlocking

Description	Specifies the password for unlocking handset.
Value Range	Null, 4 digits (0–9)
Default Value	Not stored.
Configuration File Reference	SYS_LOCK_PASSWORD_HSy (Page 279)

4.4.8 Parallel Mode Settings

This screen allows you to change the Parallel Mode settings that are Linking the desk phone and handset due to have the relation with master and slave. (→ see **6.6 Pairing (Parallel Mode)**)

Panasonic
KX-TGP600

Status | Network | **System** | VoIP | Telephone | Maintenance

Parallel Mode Settings

Web Port Close

System

- System Settings
- Language Settings
- User Password Settings
- Admin Password Settings
- Time Adjust Settings
- Handset Basic Settings
- Handset Advanced Settings
- Parallel Mode Settings**

Parallel Mode
Linking the desk phone and handset due to have the relation with master and slave.

Master Desk Phone Number	Slave Handset Number	Mode
1	-	Take Over Call
2	-	Take Over Call
3	-	Take Over Call
4	-	Take Over Call
5	-	Take Over Call
6	-	Take Over Call
7	-	Take Over Call
8	-	Take Over Call

Save Cancel

4.4.8.1 Parallel Mode

Slave Handset Number (Master Desk Phone Number 1–8)

Description	Selects handset number for the cordless desktop handset (KX-TPA65) when paired handsets are connected in parallel.
Value Range	-: Off, Handset 1–8
Default Value	-
Configuration File Reference	PARALLEL_HSNOM (Page 302)

Mode (Master Desk Phone Number 1–8)

Description	Selects the behavior of paired extensions when going off-hook during a call.
Value Range	- Busy - Take Over Call

4.5.1 SIP Settings

Default Value	Take Over Call
Configuration File Reference	PARALLEL_MODEm (Page 302)

4.5 VoIP

This section provides detailed descriptions about all the settings classified under the **[VoIP]** tab.

4.5.1 SIP Settings

This screen allows you to change the SIP settings that are common to all lines.

Panasonic
KX-TGP600

Status | Network | System | **VoIP** | Telephone | Maintenance

SIP Settings

Web Port Close

VoIP

- SIP Settings
- Line 1
- Line 2
- Line 3
- Line 4
- Line 5
- Line 6
- Line 7
- Line 8

VoIP Settings

- Line 1
- Line 2
- Line 3
- Line 4
- Line 5
- Line 6
- Line 7
- Line 8

User Agent

User Agent: Panasonic_(MODEL)/((fwer)) ((mac))

NAT Identity

Enable Rport (RFC 3581): ☒ Yes ☐ No

Enable Port Punching for SIP: 0 seconds [10-300, 0: Disable]

Enable Port Punching for RTP: 0 seconds [10-300, 0: Disable]

Save Cancel

4.5.1.1 User Agent

User Agent

Description	Specifies the text string to send as the user agent in the headers of SIP messages.
-------------	---

Value Range	Max. 64 characters Note • If "{mac}" is included in this field, it will be replaced with the unit's MAC address in lower-case. • If "{MAC}" is included in this field, it will be replaced with the unit's MAC address in upper-case. • If "{MODEL}" is included in this field, it will be replaced with the unit's model name. • If "{fwver}" is included in this field, it will be replaced with the firmware version of the unit.
Default Value	Panasonic-{MODEL}/{fwver} ({mac})
Configuration File Reference	SIP_USER_AGENT (Page 233)

4.5.1.2 NAT Identity

Enable Rport (RFC 3581)

Description	Selects whether to add the 'rport' parameter to the top Via header field value of requests generated.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	SIP_ADD_RPORT (Page 232)

Enable Port Punching for SIP

Description	Specifies the interval, in seconds, between transmissions of the Keep Alive packet in order to maintain the NAT binding information for SIP packet.
Value Range	0, 10–300 0: Disable
Default Value	0
Configuration File Reference	PORT_PUNCH_INTVL (Page 233)

Enable Port Punching for RTP

Description	Specifies the interval, in seconds, between transmissions of the Keep Alive packet in order to maintain the NAT binding information for RTP packet.
Value Range	0, 10–300 0: Disable
Default Value	0

4.5.2 SIP Settings [Line 1]–[Line 8]

Configuration File Reference

RTP_PORT_PUNCH_INTVL (Page 233)

4.5.2 SIP Settings [Line 1]–[Line 8]

This screen allows you to change the SIP settings that are specific to each line.

4.5.2.1 Basic

Phone Number

Description	Specifies the phone number to use as the user ID required for registration to the SIP registrar server. Note When registering using a user ID that is not a phone number, you should use the [SIP URI] setting.
Value Range	Max. 32 characters
Default Value	Not stored.
Configuration File Reference	PHONE_NUMBER_n (Page 234)

Registrar Server Address

Description	Specifies the IP address or FQDN of the SIP registrar server.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	SIP_RGSTR_ADDR_n (Page 234)

Registrar Server Port

Description	Specifies the port number to use for communication with the SIP registrar server.
Value Range	1–65535
Default Value	5060
Configuration File Reference	SIP_RGSTR_PORT_n (Page 235)

Proxy Server Address

Description	Specifies the IP address or FQDN of the SIP proxy server.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	SIP_PRXY_ADDR_n (Page 235)

Proxy Server Port

Description	Specifies the port number to use for communication with the SIP proxy server.
Value Range	1–65535
Default Value	5060
Configuration File Reference	SIP_PRXY_PORT_n (Page 235)

Presence Server Address

Description	Specifies the IP address or FQDN of the SIP presence server.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	SIP_PRSNC_ADDR_n (Page 235)

Presence Server Port

Description	Specifies the port number to use for communication with the SIP presence server.
Value Range	1–65535
Default Value	5060
Configuration File Reference	SIP_PRSNC_PORT_n (Page 236)

Outbound Proxy Server Address

Description	Specifies the IP address or FQDN of the SIP outbound proxy server.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	SIP_OUTPROXY_ADDR_n (Page 236)

Outbound Proxy Server Port

Description	Specifies the port number to use for communication with the SIP outbound proxy server.
Value Range	1–65535
Default Value	5060
Configuration File Reference	SIP_OUTPROXY_PORT_n (Page 236)

Service Domain

Description	Specifies the domain name provided by your phone system dealer/service provider. The domain name is the part of the SIP URI that comes after the "@" symbol.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	SIP_SVCDOMAIN_n (Page 237)

Authentication ID

Description	Specifies the authentication ID required to access the SIP server.
Value Range	Max. 128 characters
Default Value	Not stored.
Configuration File Reference	SIP_AUTHID_n (Page 237)

Authentication Password

Description	Specifies the authentication password used to access the SIP server.
Value Range	Max. 128 characters
Default Value	Not stored.
Configuration File Reference	SIP_PASS_n (Page 237)

4.5.2.2 Advanced

SIP Packet QoS (DSCP)

Description	Specifies the DSCP (Differentiated Services Code Point) level of DiffServ applied to SIP packets.
Value Range	0–63
Default Value	0
Configuration File Reference	DSCP_SIP_n (Page 238)

Enable DNS SRV lookup

Description	Selects whether to request the DNS server to translate domain names into IP addresses using the SRV record.
Value Range	• Yes • No Note • If you select [Yes], the unit will perform a DNS SRV lookup for a SIP registrar server, SIP proxy server, SIP outbound proxy server, or SIP presence server. If you select [No], the unit will not perform a DNS SRV lookup for a SIP registrar server, SIP proxy server, SIP outbound proxy server, or SIP presence server.
Default Value	Yes
Configuration File Reference	SIP_DNSSRV_ENA_n (Page 238)

SRV lookup Prefix for UDP

Description	Specifies a prefix to add to the domain name when performing a DNS SRV lookup using UDP. Note • This setting is available only when [Enable DNS SRV lookup] is set to [Yes].
Value Range	Max. 32 characters

Default Value	_sip._udp.
Configuration File Reference	SIP_UDP_SRV_PREFIX_n (Page 239)

SRV lookup Prefix for TCP

Description	Specifies a prefix to add to the domain name when performing a DNS SRV lookup using TCP. Note This setting is available only when [Enable DNS SRV lookup] is set to [Yes].
Value Range	Max. 32 characters
Default Value	_sip._tcp.
Configuration File Reference	SIP_TCP_SRV_PREFIX_n (Page 239)

SRV lookup Prefix for TLS

Description	Specifies a prefix to add to the domain name when performing a DNS SRV lookup using TLS. Note This setting is available only when [Enable DNS SRV lookup] is set to [Yes].
Value Range	Max. 32 characters
Default Value	_sips._tls.
Configuration File Reference	SIP_TLS_SRV_PREFIX_n (Page 258)

Local SIP Port

Description	Specifies the source port number used by the unit for SIP communication.
Value Range	1024–49151
Default Value	5060 (for Line 1) 5070 (for Line 2) 5080 (for Line 3) 5090 (for Line 4) 5100 (for Line 5) 5110 (for Line 6) 5120 (for Line 7) 5130 (for Line 8)
Configuration File Reference	SIP_SRC_PORT_n (Page 237)

SIP URI

Description	Specifies the unique ID used by the SIP registrar server, which consists of "sip:", a user part, the "@" symbol, and a host part, for example, "sip:user@example.com", "2405551111_1". Note - When registering using a user ID that is not a phone number, you should use this setting. - In a SIP URI, the user part ("user" in the example above) can contain up to 63 characters, and the host part ("example.com" in the example above) can contain up to 316 characters.
Value Range	Max. 384 characters
Default Value	Not stored.
Configuration File Reference	SIP_URI_n (Page 234)

T1 Timer

Description	Specifies the default interval, in milliseconds, between transmissions of SIP messages.
Value Range	250 500 1000 2000 4000
Default Value	500
Configuration File Reference	SIP_TIMER_T1_n (Page 241)

T2 Timer

Description	Specifies the maximum interval, in seconds, between transmissions of SIP messages.
Value Range	2 4 8 16 32
Default Value	4
Configuration File Reference	SIP_TIMER_T2_n (Page 242)

REGISTER Expires Timer

Description	Specifies the length of time, in seconds, that the registration remains valid. This value is set in the "Expires" header of the REGISTER request.
Value Range	1–4294967295
Default Value	3600
Configuration File Reference	REG_EXPIRE_TIME_n (Page 239)

Enable Session Timer (RFC 4028)

Description	Specifies the length of time, in seconds, that the unit waits before terminating SIP sessions when no reply to repeated requests is received.
Value Range	0, 60–65535
Default Value	0
Configuration File Reference	SIP_SESSION_TIME_n (Page 241)

Session Timer Method

Description	Selects the refreshing method of SIP sessions.
Value Range	• INVITE • UPDATE • INVITE/UPDATE
Default Value	INVITE
Configuration File Reference	SIP_SESSION_METHOD_n (Page 241)

Enable 100rel (RFC 3262)

Description	Specifies whether to add the option tag 100rel to the "Supported" header of the INVITE message.
Value Range	• Yes • No Note • If you select [Yes], the Reliability of Provisional Responses function will be enabled. The option tag 100rel will be added to the "Supported" header of the INVITE message and to the "Require" header of the "1xx" provisional message. If you select [No], the option tag 100rel will not be used.
Default Value	Yes
Configuration File Reference	SIP_100REL_ENABLE_n (Page 244)

Enable SSAF (SIP Source Address Filter)

Description	Selects whether to enable SSAF for the SIP servers (registrar server, proxy server, and presence server).
Value Range	• Yes • No
Default Value	No
Configuration File Reference	SIP_DETECT_SSAF_n (Page 247)

Enable c=0.0.0.0 Hold (RFC 2543)

Description	Selects whether to enable the RFC 2543 Call Hold feature on this line.
Value Range	• Yes • No Note • If you select [Yes], the "c=0.0.0.0" syntax will be set in SDP when sending a re-INVITE message to hold the call. If you select [No], the "c=x.x.x.x" syntax will be set in SDP.
Default Value	Yes
Configuration File Reference	RFC2543_HOLD_ENABLE_n (Page 254)

Transport Protocol

Description	Selects which transport layer protocol to use for sending SIP packets.
Value Range	• UDP • TCP • TLS
Default Value	UDP
Configuration File Reference	SIP_TRANSPORT_n (Page 257)

TLS Mode

Description	Select the secure SIP protocol.
Value Range	• SIPS • SIP-TLS
Default Value	SIPS
Configuration File Reference	SIP_TLS_MODE_n (Page 258)

4.5.3 VoIP Settings

This screen allows you to change the VoIP settings that are common to all lines.

Panasonic
KX-TGP600

Status | Network | System | **VoIP** | Telephone | Maintenance

Web Port Close

VoIP

SIP Settings

- Line 1
- Line 2
- Line 3
- Line 4
- Line 5
- Line 6
- Line 7
- Line 8
- VoIP Settings**
- Line 1
- Line 2
- Line 3
- Line 4
- Line 5
- Line 6
- Line 7
- Line 8

VoIP Settings

RTP

RTP Packet Time: 20 milliseconds

Minimum RTP Port Number: 16000 [1024-48750: Even Number Only]

Maximum RTP Port Number: 20000 [1424-49150: Even Number Only]

Telephone-event Payload Type: 101 [96-127]

Voice Quality Report

Server Address: []

Port: 5060 [1-65535]

Enable PUBLISH: Disable

Alert Report Trigger: ☒ Warning ☐ Critical

Threshold MOS-LQ (Critical): 20 [15-40]

Threshold MOS-LQ (Warning): 20 [15-40]

Threshold Delay (Critical): 0 milliseconds [10-2000]

Threshold Delay (Warning): 0 milliseconds [10-2000]

Save Cancel

4.5.3.1 RTP

RTP Packet Time

Description	Selects the interval, in milliseconds, between transmissions of RTP packets.
Value Range	• 20 • 30 • 40
Default Value	20
Configuration File Reference	RTP_PTIME (Page 265)

Minimum RTP Port Number

Description	Specifies the lowest port number that the unit will use for RTP packets.
Value Range	1024–59598 (even number only)
Default Value	16000
Configuration File Reference	RTP_PORT_MIN (Page 264)

Maximum RTP Port Number

Description	Specifies the highest port number that the unit will use for RTP packets.
--------------------	---

Value Range	1424–59998 (even number only)
Default Value	20000
Configuration File Reference	RTP_PORT_MAX (Page 264)

Telephone-event Payload Type

Description	Specifies the RFC 2833 payload type for DTMF tones. Note This setting is available only when [DTMF Type] is set to [Outband].
Value Range	96–127
Default Value	101
Configuration File Reference	TELEVENT_PAYLOAD (Page 255)

4.5.3.2 Voice Quality Report

Server Address

Description	Specifies the IP address or FQDN of the collector server.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	VQREPORT_COLLECTOR_ADDRESS (Page 268)

Port

Description	Specifies the port of the collector server.
Value Range	1–65535
Default Value	5060
Configuration File Reference	VQREPORT_COLLECTOR_PORT (Page 268)

Enable PUBLISH

Description	Selects the sending type of the VQ report using PUBLISH.
Value Range	- Disable - End of Session Report Using PUBLISH - Interval report Using PUBLISH - Alert Report Using PUBLISH
Default Value	Disable

Configuration File Reference	VQREPORT_SEND (Page 268)
-------------------------------------	--------------------------

Alert Report Trigger

Description	Selects the trigger to notify the VQ report.
Value Range	- Warning - Critical
Default Value	Warning
Configuration File Reference	ALERT_REPORT_TRIGGER (Page 269)

Threshold MOS-LQ (Critical)

Description	Specifies the criteria (critical) to send the VQ report when the MOSQ occurs.
Value Range	0–40
Default Value	0
Configuration File Reference	ALERT_REPORT_MOSQ_CRITICAL (Page 269)

Threshold MOS-LQ (Warning)

Description	Specifies the criteria (warning) to send the VQ report when the MOSQ occurs.
Value Range	0–40
Default Value	0
Configuration File Reference	ALERT_REPORT_MOSQ_WARNING (Page 269)

Threshold Delay (Critical)

Description	Specifies the criteria (critical) to send the VQ report when a delay occurs.
Value Range	0–2000
Default Value	0
Configuration File Reference	ALERT_REPORT_DELAY_CRITICAL (Page 269)

Threshold Delay (Warning)

Description	Specifies the criteria (warning) to send the VQ report when a delay occurs.
Value Range	0–2000

Default Value	0
Configuration File Reference	ALERT_REPORT_DELAY_WARNING (Page 270)

4.5.4 VoIP Settings [Line 1]–[Line 8]

This screen allows you to change the VoIP settings that are specific to each line.

G.722 is available only when "WIDEBAND_AUDIO_ENABLE"="Y" is set. G.722.2 (AMR-WB) is available only when "WIDEBAND_AUDIO_ENABLE"="Y" and "CODEC_G722AMR_ENABLE"="Y" are both set. (→ see 5.3.1 System Settings).

4.5.4.1 Basic

G.722 (Enable)

Description	Selects whether to enable the G.722 codec for voice data transmission.
Value Range	- Yes - No
Default Value	Yes
Configuration File Reference	CODEC_ENABLEx_n (Page 260)

G.722 (Priority)

Description	Specifies the numerical order usage priority for the G.722 codec.
-------------	---

Value Range	1–255
Default Value	1
Configuration File Reference	CODEC_PRIORITYx_n (Page 260)

PCMA (Enable)

Description	Selects whether to enable the PCMA codec for voice data transmission.
Value Range	• Yes • No
Default Value	Yes
Configuration File Reference	CODEC_ENABLEx_n (Page 260)

PCMA (Priority)

Description	Specifies the numerical order usage priority for the PCMA codec.
Value Range	1–255
Default Value	1
Configuration File Reference	CODEC_PRIORITYx_n (Page 260)

G.722.2 (AMR-WB) (Enable)

Description	Selects whether to enable the G.722.2 (AMR-WB) codec for voice data transmission.
Value Range	• Yes • No
Default Value	Yes
Configuration File Reference	CODEC_ENABLEx_n (Page 260)

G.722.2 (AMR-WB) (Priority)

Description	Specifies the numerical order usage priority for the G.722.2 (AMR-WB) codec.
Value Range	1–255
Default Value	1
Configuration File Reference	CODEC_PRIORITYx_n (Page 260)

G.729A (Enable)

Description	Selects whether to enable the G.729A codec for voice data transmission.
Value Range	• Yes • No
Default Value	Yes
Configuration File Reference	CODEC_ENABLEx_n (Page 260)

G.729A (Priority)

Description	Specifies the numerical order usage priority for the G.729A codec.
Value Range	1–255
Default Value	1
Configuration File Reference	CODEC_PRIORITYx_n (Page 260)

PCMU (Enable)

Description	Selects whether to enable the PCMU codec for voice data transmission.
Value Range	• Yes • No
Default Value	Yes
Configuration File Reference	CODEC_ENABLEx_n (Page 260)

PCMU (Priority)

Description	Specifies the numerical order usage priority for the PCMU codec.
Value Range	1–255
Default Value	1
Configuration File Reference	CODEC_PRIORITYx_n (Page 260)

DTMF Type

Description	Selects the method for transmitting DTMF (Dual Tone Multi-Frequency) tones.
--------------------	---

Value Range	• RFC2833 • Inband • SIP INFO Note • RFC2833 refers to Outband DTMF. • Inband refers to Inband DTMF.
Default Value	RFC2833
Configuration File Reference	DTMF_METHOD_n (Page 261)

4.5.4.2 Advanced

RTP Packet QoS (DSCP)

Description	Specifies the DSCP level of DiffServ applied to RTP packets.
Value Range	0–63
Default Value	0
Configuration File Reference	DSCP_RTP_n (Page 262)

RTCP Packet QoS (DSCP)

Description	Specifies the DSCP level of DiffServ applied to RTCP/RTCP-XR packets.
Value Range	0–63
Default Value	0
Configuration File Reference	DSCP_RTCP_n (Page 263)

Enable RTCP

Description	Selects whether to enable or disable RTCP.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	RTCP_ENABLE_n (Page 265)

Enable RTCP-XR

Description	Selects whether to enable or disable RTCP-XR.
Value Range	• Yes • No

Default Value	No
Configuration File Reference	RTCPXR_ENABLE_n (Page 266)

RTCP&RTCP-XR Interval

Description	Specifies the interval, in seconds, between RTCP/RTCP-XR packets.
Value Range	5–65535
Default Value	5
Configuration File Reference	RTCP_INTVL_n (Page 265)

SRTP Mode

Description	Selects the mode of SRTP feature.
Value Range	• SRTP • RTP/SRTP Note • When RTP/SRTP is selected, operation is in RTP mode.
Default Value	RTP/SRTP
Configuration File Reference	SRTP_CONNECT_MODE_n (Page 267)

Enable Mixed SRTP & RTP by Conference

Description	Selects whether to allow conferences where each participant can use either SRTP or RTP.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	SRTP_MIX_CONFERENCE_ENABLE_n (Page 267)

Enable Mixed SRTP & RTP by Transfer

Description	Selects whether to allow call transfers between a user who is using SRTP and a user who is using RTP.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	SRTP_MIX_TRANSFER_ENABLE_n (Page 267)

4.6 Telephone

This section provides detailed descriptions about all the settings classified under the **[Telephone]** tab.

4.6.1 Multi Number Settings

This screen allows you to assign phone numbers for incoming and outgoing calls to the base unit and handsets. A maximum of 8 phone numbers can be assigned for each unit. A maximum of 8 handsets can be registered to the base unit. For details, see **6.1 Line Settings**.

This setting is available only when "**MULTI_NUMBER_ENABLE**"="Y" is set. (→see **5.3.1 System Settings**)

Panasonic
KX-TGP600

Status Network System VoIP **Telephone** Maintenance

Multi Number Settings

Web Port Close

Telephone

Multi Number Settings

Call Control

- Line 1

- Line 2

- Line 3

- Line 4

- Line 5

- Line 6

- Line 7

- Line 8

Hotline Settings

Tone Settings

Import Phonebook

Export Phonebook

Group Handset / Handset select for receiving call

Line	Phone Number	Handset Number								Paging
		1	2	3	4	5	6	7	8	
1	160	☒	☐	☐	☐	☐	☐	☐	☐	HS1 ▾
2	161	☐	☒	☐	☐	☐	☐	☐	☐	HS1 ▾
3		☐	☐	☒	☐	☐	☐	☐	☐	HS1 ▾
4		☐	☐	☐	☒	☐	☐	☐	☐	HS1 ▾
5		☐	☐	☐	☐	☒	☐	☐	☐	HS1 ▾
6		☐	☐	☐	☐	☐	☒	☐	☐	HS1 ▾
7		☐	☐	☐	☐	☐	☐	☒	☐	HS1 ▾
8		☐	☐	☐	☐	☐	☐	☐	☒	HS1 ▾

Handset and Line Number select for making call

Handset	Line Number								Default
	1	2	3	4	5	6	7	8	
1	☒	☒	☒	☒	☒	☒	☒	☒	1 ▾
2	☒	☒	☒	☒	☒	☒	☒	☒	1 ▾
3	☒	☒	☒	☒	☒	☒	☒	☒	1 ▾
4	☒	☒	☒	☒	☒	☒	☒	☒	1 ▾
5	☒	☒	☒	☒	☒	☒	☒	☒	1 ▾
6	☒	☒	☒	☒	☒	☒	☒	☒	1 ▾
7	☒	☒	☒	☒	☒	☒	☒	☒	1 ▾
8	☒	☒	☒	☒	☒	☒	☒	☒	1 ▾

Save Cancel

4.6.1.1 Group Handset / Handset select for receiving call

Line (1–8)

Description	Indicates the line number (1–8) to which a phone number is assigned (reference only).
Value Range	Line 1–Line 8
Default Value	Not applicable.
Configuration File Reference	INCOMING_CALL_GROUP_n (Page 290)

Phone Number

Description	Indicates the currently assigned phone numbers (reference only).
Value Range	Max. 32 digits
Default Value	Not applicable.
Configuration File Reference	INCOMING_CALL_GROUP_n (Page 290)

Handset Number (1–8)

Description	Selects the handsets (1–8) that calls will arrive at for each line.
Value Range	Selected, Not selected
Default Value	Selected (all)
Configuration File Reference	INCOMING_CALL_GROUP_n (Page 290)

Paging

Description	Selects the handsets (1–8) that calls will arrive (auto answer) at for each line.
Value Range	HS1–HS8
Default Value	HS1
Configuration File Reference	PAGING_ENABLE_HANDSET_n (Page 290)

4.6.1.2 Handset and Line Number select for making call

Handset

Description	Indicates the handsets (1–8) that can be used to make a call (reference only).
Value Range	Handset 1 – Handset 8
Default Value	Not applicable.

Line Number

Description	Selects which lines (1–8) can be seized when going off-hook to make a call for the base unit and each handset.
Value Range	Selected, Not selected
Default Value	Selected (all)
Configuration File Reference	OUTGOING_CALL_LINE_HSy (Page 289)

Default

Description	Selects which line to seize automatically when going off-hook to make a call for the base unit and each handset.
Value Range	1–8
Default Value	1
Configuration File Reference	DEFAULT_LINE_SELECT_HSy (Page 290)

4.6.2 Call Control

This screen allows you to configure various call features that are common to all lines.

Panasonic
KX-TGP600

Status Network System VoIP **Telephone** Maintenance

Call Control

Web Port Close

Telephone

Multi Number Settings

Call Control

- Line 1

- Line 2

- Line 3

- Line 4

- Line 5

- Line 6

- Line 7

- Line 8

Hotline Settings

Tone Settings

Import Phonebook

Export Phonebook

Call Control

Send SUBSCRIBE to Voice Mail Server ☐ Yes ☒ No

Conference Server URI

First-digit Timeout 30 seconds [1-600]

Inter-digit Timeout 5 seconds [1-15]

Timer for Dial Plan 5 seconds [1-15]

Enable # Key as delimiter ☒ Yes ☐ No

International Call Prefix

Country Calling Code

National Access Code

Call Park Number

Enable Call Park Key ☐ Yes ☒ No

Park Retrieve Number

Park Retrieve Soft Key Not Use

Emergency Call Phone Numbers

1. 2. 3. 4. 5.

Save Cancel

4.6.2.1 Call Control

Send SUBSCRIBE to Voice Mail Server

Description	Selects whether to send the SUBSCRIBE request to a voice mail server. Note Your phone system must support voice mail.
Value Range	- Yes - No

Default Value	No
Configuration File Reference	VM_SUBSCRIBE_ENABLE (Page 292)

Conference Server URI

Description	Specifies the URI for a conference server, which consists of "sip:", a user part, the "@" symbol, and a host part, for example, "sip:conference@example.com". Note Availability depends on your phone system.
Value Range	Max. 256 characters
Default Value	Not stored.
Configuration File Reference	CONFERENCE_SERVER_URI (Page 301)

First-digit Timeout

Description	Specifies the length of time, in seconds, within which the first digits of a dial number must be dialed.
Value Range	1–600 (s)
Default Value	30
Configuration File Reference	FIRSTDIGIT_TIM (Page 273)

Inter-digit Timeout

Description	Specifies the length of time, in seconds, within which subsequent digits of a dial number must be dialed.
Value Range	1–15 (s)
Default Value	5
Configuration File Reference	INTDIGIT_TIM (Page 273)

Timer for Dial Plan

Description	Specifies the length of time, in seconds, that the unit waits when a "T" or "t" has been entered in the dial plan.
Value Range	1–15 (s)
Default Value	5
Configuration File Reference	MACRODIGIT_TIM (Page 294)

Enable # Key as delimiter

Description	Selects whether the # key is treated as a regular dialed digit or a delimiter, when dialed as or after the second digit.
Value Range	- Yes: # is treated as the end of dialing delimiter. - No: # is treated as a regular dialed digit.
Default Value	Yes
Configuration File Reference	POUND_KEY_DELIMITER_ENABLE (Page 273)

International Call Prefix

Description	Specifies the number to be shown in the place of the first "+" symbol when the phone number for incoming international calls contains "+".
Value Range	Max. 8 characters (consisting of 0–9, *, and #)
Default Value	Not stored.
Configuration File Reference	INTERNATIONAL_ACCESS_CODE (Page 294)

Country Calling Code

Description	Specifies the country/area calling code to be used for comparative purposes when dialing a number from the incoming call log that contains a "+" symbol.
Value Range	Max. 8 characters (consisting of 0–9, *, and #)
Default Value	Not stored.
Configuration File Reference	COUNTRY_CALLING_CODE (Page 294)

National Access Code

Description	When dialing a number from the incoming call log that contains a "+" symbol and the country calling code matches, the country calling code is removed and the national access code is added.
Value Range	Max. 8 characters (consisting of 0–9, *, and #)
Default Value	Not stored.
Configuration File Reference	NATIONAL_ACCESS_CODE (Page 295)

Call Park Number

Description	Specifies the call parking number.
Value Range	0–4 digits (0–9, *, #)
Default Value	Not stored.

Configuration File Reference	NUM_PLAN_PARKING (Page 276)
------------------------------	-----------------------------

Enable Call Park Key

Description	Selects whether to display "Call Park" in the Call Parking Func menu.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	CALLPARK_KEY_ENABLE (Page 276)

Park Retrieve Number

Description	Specifies the call park retrieve number.
Value Range	0–4 digits (0–9, *, #)
Default Value	Not stored.
Configuration File Reference	NUM_PLAN_PARK_RETRIEVING (Page 277)

Park Retrieve Soft Key

Description	Selects whether to have soft key for the call park retrieving. Note • This feature is available only when [Enable Call Park Notification] is set to [Yes], and [Park Retrieve Number] is set (→see Enable Call Park Notification, Park Retrieve Number).
Value Range	• Not Use • Soft Key A (Left) • Soft Key B (Center) • Soft Key C (Right)
Default Value	Not Use
Configuration File Reference	IDLE_SOFT_KEY_PARK_RETRIEVING (Page 277)

4.6.2.2 Emergency Call Phone Numbers

1–5

Description	Specifies the phone numbers used for making emergency calls. A user can dial any of the specified phone numbers at any time regardless of any restrictions imposed on the unit. A maximum of 5 phone numbers can be specified.
-------------	--

4.6.3 Call Control [Line 1]–[Line 8]

Value Range	Max. 32 characters (except &, ", ' , : , ; , < , >)
Default Value	Not stored.
Configuration File Reference	EMERGENCY_CALLx (Page 297)

4.6.3 Call Control [Line 1]–[Line 8]

This screen allows you to configure various call features that are specific to each line.

Panasonic
KX-TGP600

Status Network System VoIP **Telephone** Maintenance

Call Control [Line 1]

Web Port Close

Telephone

Multi Number Settings

Call Control

- Line 1
- Line 2
- Line 3
- Line 4
- Line 5
- Line 6
- Line 7
- Line 8

Hotline Settings

Tone Settings

Import Phonebook

Export Phonebook

Call Features

Display Name

Voice Mail Access Number

Enable Anonymous Call ☐ Yes ☒ No

Enable Block Anonymous Call ☐ Yes ☒ No

Enable Do Not Disturb ☐ Yes ☒ No

Enable Call Waiting ☒ Yes ☐ No

Enable Call Forwarding Always ☐ Yes ☒ No

Forwarding Number (Always)

Enable Call Forwarding Busy ☐ Yes ☒ No

Forwarding Number (Busy)

Enable Call Forwarding No Answer ☐ Yes ☒ No

Forwarding Number (No Answer)

Ring Counts (No Answer) 3 counts [0, 2-20]

Enable Shared Call ☐ Yes ☒ No

Enable Key Synchronization ☐ Yes ☒ No

Enable Call Park Notification ☐ Yes ☒ No

Enable Click to Call ☐ Yes ☒ No

4.6.3.1 Call Features

Display Name

Description	Specifies the name to display as the caller on the other party's phone when you make a call.
Value Range	Max. 24 characters Note You can use Unicode characters for this setting.
Default Value	Not stored.
Configuration File Reference	DISPLAY_NAME_n (Page 292)

Voice Mail Access Number

Description	Specifies the phone number used to access the voice mail server. Note Your phone system must support voice mail.
Value Range	Max. 32 characters
Default Value	Not stored.
Configuration File Reference	VM_NUMBER_n (Page 293)

Enable Anonymous Call

Description	Selects whether to make calls without transmitting the phone number to the called party.
Value Range	- Yes - No
Default Value	No
Configuration File Reference	ANONYMOUS_CALL_ENABLE_n (Page 291)

Enable Block Anonymous Call

Description	Selects whether to accept or reject the incoming call without the called party's phone number.
Value Range	- Yes - No
Default Value	No
Configuration File Reference	BLOCK_ANONYMOUS_CALL_ENABLE_n (Page 291)

Enable Do Not Disturb

Description	Selects whether to reject the all incoming calls.
Value Range	- Yes - No
Default Value	No

Enable Call Waiting

Description	Selects whether to enable Call Waiting.
Value Range	- Yes - No

Default Value	Yes
Configuration File Reference	CW_ENABLE_n (Page 301)

Enable Call Forwarding Always

Description	Selects whether to forward all incoming calls to a specified destination.
Value Range	• Yes • No
Default Value	No

Forwarding Number (Always)

Description	Specifies the phone number of the destination to forward all incoming calls to.
Value Range	Max. 32 characters
Default Value	Not stored.

Enable Call Forwarding Busy

Description	Selects whether to forward incoming calls to a specified destination when the line is in use.
Value Range	• Yes • No
Default Value	No

Forwarding Number (Busy)

Description	Specifies the phone number of the destination to forward calls to when the line is in use.
Value Range	Max. 32 characters
Default Value	Not stored.

Enable Call Forwarding No Answer

Description	Selects whether to forward incoming calls to a specified destination when a call is not answered after it has rung a specified number of times.
Value Range	• Yes • No
Default Value	No

Forwarding Number (No Answer)

Description	Specifies the phone number of the destination to forward calls to when a call is not answered after it has rung a specified number of times.
Value Range	Max. 32 characters
Default Value	Not stored.

Ring Counts (No Answer)

Description	Specifies the number of times that an incoming call rings until the call is forwarded.
Value Range	0, 2–20
Default Value	3

Enable Shared Call

Description	Selects whether to enable the Shared Call feature of the SIP server, which is used to share one line among the units. Note Availability depends on your phone system.
Value Range	- Yes - No Note - If you select [Yes], the SIP server will control the line by using a shared-call signaling method. If you select [No], the SIP server will control the line by using a standard signaling method.
Default Value	No
Configuration File Reference	SHARED_CALL_ENABLE_n (Page 298)

Enable Key Synchronization

Description	Selects whether to synchronize the Do Not Disturb and Call Forward settings. Note Even if you select [Yes], this feature may not function properly if your phone system does not support it. Before you configure this setting, consult your phone system dealer/service provider.
Value Range	- Yes - No
Default Value	No

Configuration File Reference	FWD_DND_SYNCHRO_ENABLE_n (Page 299)
------------------------------	-------------------------------------

Enable Call Park Notification

Description	Selects whether to respond to call park notifications from the server.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	CALLPARK_NOTIFICATION_ENABLE_n (Page 298)

Enable Click to Call

Description	Selects whether to enable Click to Dial/Answer/Hold functions.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	CLICKTO_ENABLE_n (Page 297)

MoH Server URI

Description	Specifies MoH server URI for each line.
Value Range	Max. 384 characters
Default Value	Not stored.
Configuration File Reference	MOH_SERVER_URI_n (Page 299)

4.6.3.2 Dial Plan

Dial Plan (max 1000 columns)

Description	Specifies a dial format, such as specific phone numbers, that control which numbers can be dialed or how to handle the call when making a call. For details, see 6.3 Dial Plan .
Value Range	Max. 1000 characters
Default Value	Not stored.
Configuration File Reference	DIAL_PLAN_n (Page 293)

Call Even If Dial Plan Does Not Match

Description	Selects whether to make a call even if the dialed number does not match any of the dial formats specified in [Dial Plan] .
Value Range	• Yes • No Note • If you select [Yes], calls will be made even if the dialed number does not match the dial formats specified in [Dial Plan] (i.e., dial plan filtering is disabled). If you select [No], calls will not be made if the dialed number does not match one of the dial formats specified in [Dial Plan] (i.e., dial plan filtering is enabled).
Default Value	Yes
Configuration File Reference	DIAL_PLAN_NOT_MATCH_ENABLE_n (Page 293)

4.6.3.3 Call Rejection Phone Numbers

1–20

Description	Specifies the phone numbers to reject incoming calls from. A maximum of 20 phone numbers can be specified.
Value Range	Max. 32 characters (except &, ", ' , : , ; , < , >)
Default Value	Not stored.
Configuration File Reference	CALL_REJECTIONx_n (Page 297)

4.6.4 Hotline Settings

Panasonic
KX-TGP600

Status Network System VoIP **Telephone** Maintenance

Web Port Close

Hotline Settings

Telephone

- Multi Number Settings
- Call Control
 - Line 1
 - Line 2
 - Line 3
 - Line 4
 - Line 5
 - Line 6
 - Line 7
 - Line 8
- Hotline Settings**
- Tone Settings
- Import Phonebook
- Export Phonebook

Hotline

Handset 1	Enable	☐ Yes ☒ No
	Hotline Number	
Handset 2	Enable	☐ Yes ☒ No
	Hotline Number	
Handset 3	Enable	☐ Yes ☒ No
	Hotline Number	
Handset 4	Enable	☐ Yes ☒ No
	Hotline Number	
Handset 5	Enable	☐ Yes ☒ No
	Hotline Number	
Handset 6	Enable	☐ Yes ☒ No
	Hotline Number	
Handset 7	Enable	☐ Yes ☒ No
	Hotline Number	
Handset 8	Enable	☐ Yes ☒ No
	Hotline Number	
Hotline Delay	2 seconds [0-10]	

Save Cancel

4.6.4.1 Hotline

Handset 1–8 (Enable)

Description	Selects whether to enable or disable the Hot line feature.
Value Range	- Yes - No
Default Value	No
Configuration File Reference	HOTLINE_ENABLE_HSy (Page 291)

Handset 1–8 (Hotline Number)

Description	Specifies the Hot line number.
Value Range	Max. 32 characters
Default Value	Not stored.
Configuration File Reference	HOTLINE_NUMBER_HSy (Page 292)

Hotline Delay

Description	Specifies a time after off hook for Hot line.
Value Range	0–10 (s)
Default Value	2
Configuration File Reference	HOTLINE_TIM (Page 292)

4.6.5 Tone Settings

This screen allows you to configure the dual-tone frequencies and ringtone patterns of each tone.

Panasonic
KX-TGP600

Status Network System VoIP **Telephone** Maintenance

Web Port Close

Telephone

- Multi Number Settings
- Call Control
 - Line 1
 - Line 2
 - Line 3
 - Line 4
 - Line 5
 - Line 6
 - Line 7
 - Line 8
- Hotline Settings
- Tone Settings**
- Import Phonebook
- Export Phonebook

Tone Settings

Dial Tone

Tone Frequencies: 350,440

Tone Timings: 0,0,0,0

Busy Tone

Tone Frequencies: 480,620

Tone Timings: 500,500,500,500

Ringing Tone

Tone Frequencies: 440,480

Tone Timings: 2000,4000,2000,4000

Stutter Tone

Tone Frequencies: 350,440

Tone Timings: 100,100,100,100,100,100,100,100,100,100,1

Reorder Tone

Tone Frequencies: 0,0

Tone Timings: 0,0,0,0,0,0,0,0

Save Cancel

4.6.5.1 Dial Tone

Tone Frequencies

Description	Specifies the dual-tone frequencies, in hertz, of dial tones using 2 whole numbers separated by a comma.
Value Range	0, 200–2000 (0: No tone)
	Note If the value for this setting is "350,440", the unit will use a mixed signal of a 350 Hz tone and a 440 Hz tone.
Default Value	350,440
Configuration File Reference	DIAL_TONE1_FRQ (Page 281)

Tone Timings

Description	Specifies the pattern, in milliseconds, of dial tones using up to 10 whole numbers (off 1, on 1, off 2, on 2...) separated by commas. Note - The unit will not play the tone for the duration of the first value, play it for the duration of the second value, stop it for the duration of the third value, play it again for the duration of the fourth value, and so on. The whole sequence will then repeat. For example, if the value for this setting is "100,100,100,0", the unit will not play the tone for 100 ms, play it for 100 ms, stop it for 100 ms, and then play it continuously. - It is recommended that you set a value of 60 milliseconds or more for the first value (off 1).
Value Range	0–16000 (0: Infinite time) Note Avoid setting 1–50 for any of the values.
Default Value	60,0
Configuration File Reference	DIAL_TONE1_TIMING (Page 282)

4.6.5.2 Busy Tone

Tone Frequencies

Description	Specifies the dual-tone frequencies, in hertz, of busy tones using 2 whole numbers separated by a comma.
Value Range	0, 200–2000 (0: No tone) Note If the value for this setting is "480,620", the unit will use a mixed signal of a 480 Hz tone and a 620 Hz tone.
Default Value	480,620
Configuration File Reference	BUSY_TONE_FRQ (Page 284)

Tone Timings

Description	Specifies the pattern, in milliseconds, of busy tones using up to 10 whole numbers (off 1, on 1, off 2, on 2...) separated by commas.
Value Range	0–16000 (0: Infinite time) Note Avoid setting 1–50 for any of the values.
Default Value	60,500,440

Configuration File Reference	BUSY_TONE_TIMING (Page 285)
------------------------------	-----------------------------

4.6.5.3 Ringing Tone

Tone Frequencies

Description	Specifies the dual-tone frequencies, in hertz, of ringback tones using 2 whole numbers separated by a comma.
Value Range	0, 200–2000 (0: No tone) Note If the value for this setting is "440,480", the unit will use a mixed signal of a 440 Hz tone and a 480 Hz tone.
Default Value	440,480
Configuration File Reference	RINGBACK_TONE_FRQ (Page 286)

Tone Timings

Description	Specifies the pattern, in milliseconds, of ringback tones using up to 10 whole numbers (off 1, on 1, off 2, on 2...) separated by commas. Note It is recommended that you set a value of 60 milliseconds or more for the first value (off 1).
Value Range	0–16000 (0: Infinite time) Note Avoid setting 1–50 for any of the values.
Default Value	60,2000,3940
Configuration File Reference	RINGBACK_TONE_TIMING (Page 287)

4.6.5.4 Stutter Tone

Tone Frequencies

Description	Specifies the dual-tone frequencies, in hertz, of stutter dial tones to notify that a voice mail is waiting, using 2 whole numbers separated by a comma.
Value Range	0, 200–2000 (0: No tone) Note If the value for this setting is "350,440", the unit will use a mixed signal of a 350 Hz tone and a 440 Hz tone.
Default Value	350,440

Default Value	60,250,190 Note Avoid setting 1–50 for any of the values.
Configuration File Reference	REORDER_TONE_TIMING (Page 286)

4.6.6 Import Phonebook

This screen allows you to import phonebook data from a PC to the specified unit. For details, see **6.2.1 Import/Export Operation**.

Note

- If the existing phonebook data has an entry with the same name and phone number as an imported entry, the imported entry is not added as a new entry.
- When you begin transferring the phonebook data, the "Now Processing File Data" screen is displayed, and the screen is periodically reloaded. Depending on your Web browser, the screen might not reload automatically, and you will need to click the text "HERE" before the timer expires in order for the import operation to function properly.

The screenshot shows the Panasonic KX-TGP600 web interface. At the top, there are tabs for Status, Network, System, VoIP, Telephone, and Maintenance. The 'Telephone' tab is selected. On the left, a sidebar lists various settings: Multi Number Settings, Call Control, Line 1 through Line 8, Hotline Settings, Tone Settings, Import Phonebook (highlighted with a red box), and Export Phonebook. The main content area is titled 'Import Phonebook' and contains a form with two fields: 'Handset Number' (a dropdown menu currently showing 'Handset 1') and 'File Name' (a text input field). Below these fields is an 'Import' button. A small 'Web Port Close' button is visible in the top left of the main area.

4.6.6.1 Import Phonebook

Handset Number

Description	Selects the handset to import the phonebook entries to.
Value Range	- Handset 1 - Handset 2 - Handset 3 - Handset 4 - Handset 5 - Handset 6 - Handset 7 - Handset 8
Default Value	Handset 1

File Name


Description	Specifies the path of the TSV (Tab-separated Value) file to import from the PC.
Value Range	No limitation Note There are no limitations for the field entry. However, it is recommended that paths of less than 256 characters be used: longer paths may cause longer data transfer times and result in an internal error.
Default Value	Not stored.

4.6.7 Export Phonebook

This screen allows you to save the phonebook data stored in the unit as a TSV file on a PC. For details, see **6.2.1 Import/Export Operation**.

Note

- When you begin transferring the phonebook data, the "Now Processing File Data" screen is displayed, and the screen is periodically reloaded. Click the text "HERE" in the message to display the **[Export Phonebook]** screen again. If you do not, the "Now Processing File Data" screen remains displayed even if the export is complete. Depending on your Web browser, the screen might not reload automatically, and you will need to click the text "HERE" before the timer expires in order for the export operation to function properly.
- Depending on the security settings of your Web browser, pop-up menus might be blocked at the time of export. The security warning window may be displayed on another screen even if the Pop-up Blocker settings are set to enable, and the file may not be exported successfully. In this case, try the export operation again or disable the Pop-up Blocker feature of your Web browser.

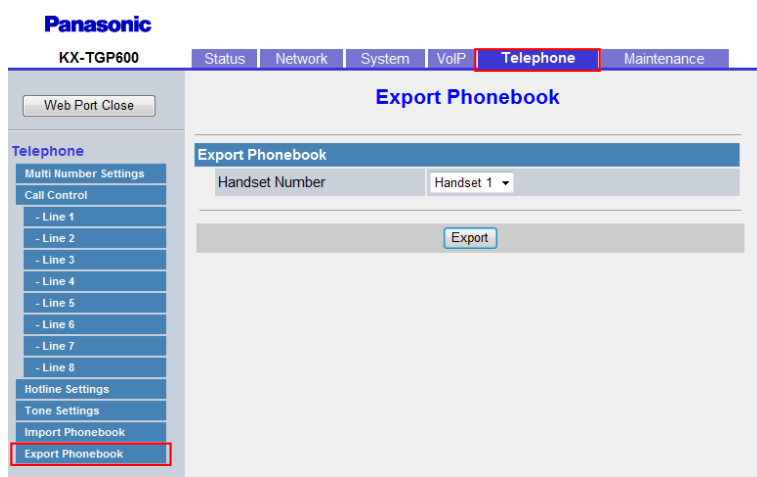

4.6.7.1 Export Phonebook

Handset Number

Description	Selects the handset to export the phonebook data from.
Value Range	• Handset 1 • Handset 2 • Handset 3 • Handset 4 • Handset 5 • Handset 6 • Handset 7 • Handset 8
Default Value	Handset 1

4.7 Maintenance

This section provides detailed descriptions about all the settings classified under the **[Maintenance]** tab.

4.7.1 Provisioning Maintenance

This screen allows you to change the provisioning setup to download the configuration files from the provisioning server of your phone system.

Panasonic
KX-TGP600

Status | Network | System | VoIP | Telephone | **Maintenance**

Web Port Close

Provisioning Maintenance

Maintenance

- Provisioning Maintenance**
- Firmware Maintenance
- Upgrade Firmware
- Import Wallpaper
- Export Logging File
- Reset to Defaults
- Restart

Provisioning Maintenance

Standard File URL	
Product File URL	
Master File URL	
Cyclic Auto Resync	☐ Yes ☒ No
Resync Interval	10080 minutes [1-40320]
Time Resync	[00:00-23:59, NULL: Disable]
Header Value for Resync Event	check-sync

Save Cancel

4.7.1.1 Provisioning Maintenance

Standard File URL

Description	Specifies the URL of the standard configuration file, which is used when every unit needs different settings.
Value Range	Max. 384 characters

Default Value	Not stored.
Configuration File Reference	CFG_STANDARD_FILE_PATH (Page 192)

Product File URL

Description	Specifies the URL of the product configuration file, which is used when all units with the same model number need the same settings.
Value Range	Max. 384 characters
Default Value	Not stored.
Configuration File Reference	CFG_PRODUCT_FILE_PATH (Page 193)

Master File URL

Description	Specifies the URL of the master configuration file, which is used when all units need the same settings.
Value Range	Max. 384 characters
Default Value	Not stored.
Configuration File Reference	CFG_MASTER_FILE_PATH (Page 193)

Cyclic Auto Resync

Description	Selects whether the unit periodically checks for updates of configuration files.
Value Range	• Yes • No
Default Value	No
Configuration File Reference	CFG_CYCLIC (Page 193)

Resync Interval

Description	Specifies the interval, in minutes, between periodic checks for updates of the configuration files.
Value Range	1–40320
Default Value	10080
Configuration File Reference	CFG_CYCLIC_INTVL (Page 193)

Time Resync


Description	Specifies the time (hour:minute) that the unit checks for updates of configuration files.
Value Range	00:00–23:59
Default Value	Not stored.
Configuration File Reference	CFG_RESYNC_TIME (Page 194)

Header Value for Resync Event

Description	Specifies the value of the "Event" header sent from the SIP server to the unit so that the unit can access the configuration files on the provisioning server.
Value Range	Max. 15 characters
Default Value	check-sync
Configuration File Reference	CFG_RESYNC_FROM_SIP (Page 194)

4.7.2 Firmware Maintenance

This screen allows you to perform firmware updates automatically or manually.

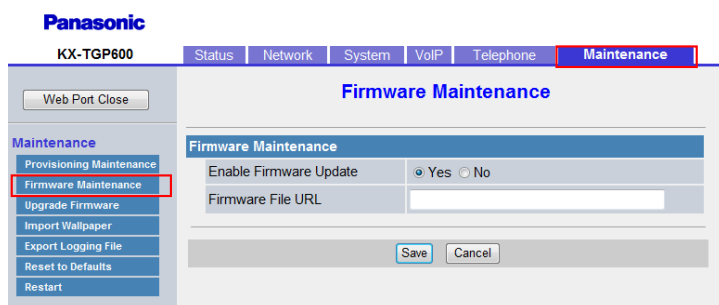

4.7.2.1 Firmware Maintenance

Enable Firmware Update

Description	Selects whether to perform firmware updates when the unit detects a newer version of firmware. Note - Local firmware updates from the Web user interface (→ see 4.7.3 Upgrade Firmware) can be performed regardless of this setting. - Firmware updates using TR-069 can be performed regardless of this setting.
--------------------	--

4.7.3 Upgrade Firmware

Value Range	• Yes • No
Default Value	Yes
Configuration File Reference	FIRM_UPGRADE_ENABLE (Page 197)

Firmware File URL


Description	Specifies the URI where the firmware file is stored. Note • This setting is available only when [Enable Firmware Update] is set to [Yes].
Value Range	Max. 384 characters
Default Value	Not stored.
Configuration File Reference	FIRM_FILE_PATH (Page 197)

4.7.3 Upgrade Firmware

This screen allows you to download the Upgrade Firmware data from a PC.

Note

- After the firmware has been successfully updated, the unit will restart automatically.

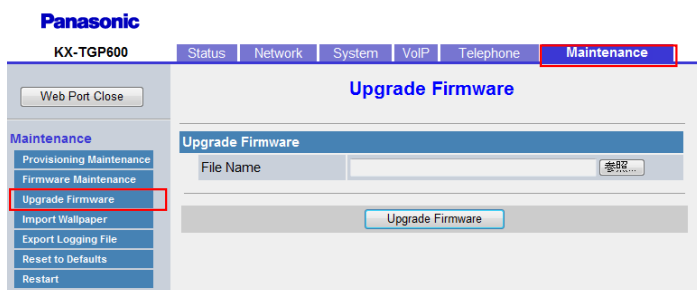

4.7.3.1 Upgrade Firmware


File Name

Description	Specifies the path of the firmware file to be imported.
Value Range	No limitation Note • There are no limitations for the field entry. However, it is recommended that paths of less than 256 characters be used: longer paths may cause longer data transfer times and result in an internal error.

Default Value	Not stored.
---------------	-------------

4.7.4 Import Wallpaper

This screen allows you to import the Wallpaper data from a PC.

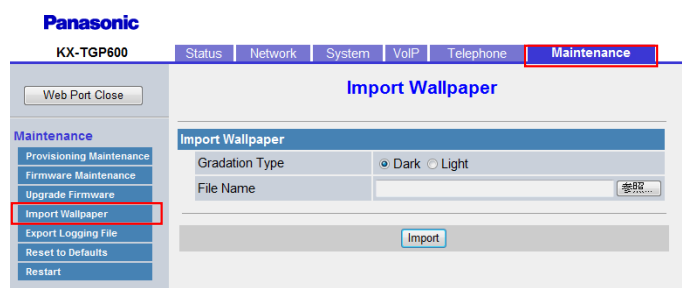

4.7.4.1 Import Wallpaper

Gradation Type

Description	Selects the Gradation Type setting.
Value Range	- Dark - Light
Default Value	Dark


File Name

Description	Specifies the path of the Wallpaper file to import from the PC.
Value Range	No limitation Note There are no limitations for the field entry. However, it is recommended that paths of less than 256 characters be used: longer paths may cause longer data transfer times and result in an internal error.
Default Value	Not stored.

4.7.6 Reset to Defaults

4.7.5 Export Logging File

This screen allows you to specify the Logging File to export when logging.

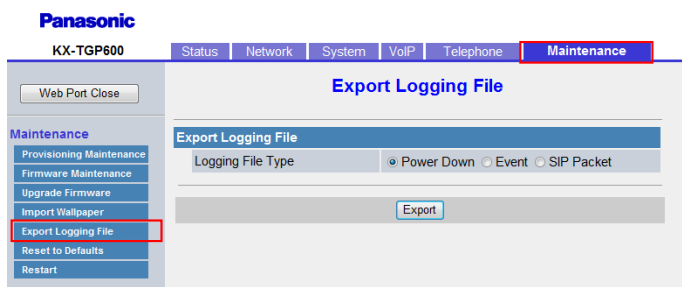

4.7.5.1 Export Logging File

Logging File Type

Description	Selects the Logging File Type setting.
Value Range	• Power Down • Event • SIP Packet Note • The line break code for the log file is <LF>. • If a file is exported when Power Down is selected, the saved file is power.log. • If a file is exported when Event is selected, the saved file is event_log.txt. • If a file is exported when SIP Packet is selected, the saved file is sip_trace_log.txt.
Default Value	Power Down

4.7.6 Reset to Defaults


This screen allows you to reset the carrier default settings made through the Web user interface to their default values by clicking **[Reset to Carrier Defaults]**. After you click this button, a dialog box is displayed, asking whether you want to reset the settings. Click **OK** to reset, or **Cancel** not to.

Notice

- After resetting the settings, the unit will restart even if it is being accessed through the phone user interface, or on calls.

Note

- You can specify carrier default using configuration parameter extensions. Those parameters will be reset to the specified carrier default values. (→see **Parameter Extensions**)

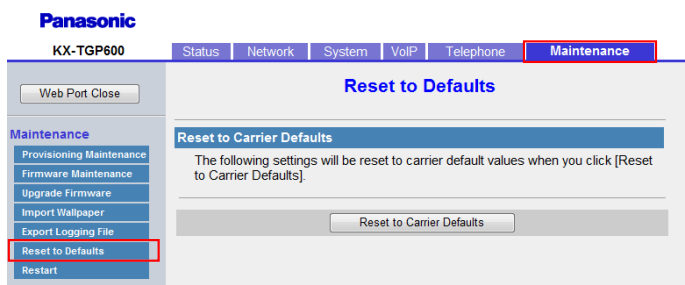


4.7.7 Restart

This screen allows you to restart the unit by clicking **[Restart]**. After you click this button, a dialog box is displayed, asking whether you want to restart the unit. Click **OK** to perform a restart, or **Cancel** not to.

Notice

- The unit will restart even if it is being accessed through the phone user interface, or on calls.

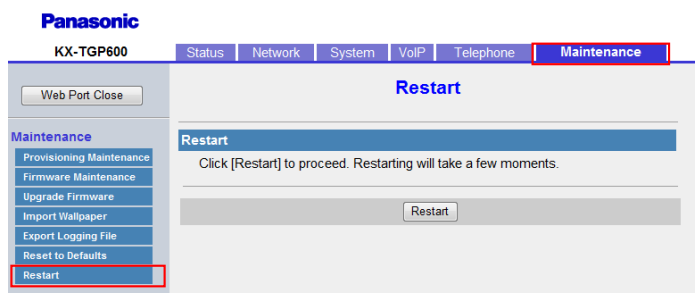

Section 5

Configuration File Programming

This section provides information about the configuration parameters used in the configuration files.

5.1 Configuration File Parameter List

The following tables show all the parameters that can be programmed using configuration file programming. For details about each parameter, see the reference pages listed.

For details about configuration file specifications, see **2.4 Configuration File Specifications**.

System Settings

Parameter Name	Ref.
MULTI_NUMBER_ENABLE	Page 182
WIDEBAND_AUDIO_ENABLE	Page 183
CODEC_G722AMR_ENABLE	Page 183
FACTORY_RESET_ENABLE	Page 183

Handset Registration Settings

Parameter Name	Ref.
IPEI_HSy	Page 183
IPEI_AUTOREGMODE_ENABLE	Page 184
IPEI_RESTRICTION_ENABLE	Page 184

Basic Network Settings

Parameter Name	Ref.
IP_ADDR_MODE ^{*1}	Page 184
CONNECTION_TYPE ^{*1}	Page 184
STATIC_IP_ADDRESS ^{*1}	Page 185
STATIC_SUBNET ^{*1}	Page 185
STATIC_GATEWAY ^{*1}	Page 185
USER_DNS1_ADDR ^{*1}	Page 186
USER_DNS2_ADDR ^{*1}	Page 186
DHCP_DNS_ENABLE ^{*1}	Page 186
DHCP_HOST_NAME ^{*2}	Page 187
DHCP_VENDOR_CLASS	Page 187
CONNECTION_TYPE_IPV6 ^{*1}	Page 187
STATIC_IP_ADDRESS_IPV6 ^{*1}	Page 188

Parameter Name	Ref.
PREFIX_IPV6 ^{*1}	Page 188
STATIC_GATEWAY_IPV6 ^{*1}	Page 188
USER_DNS1_ADDR_IPV6 ^{*1}	Page 188
USER_DNS2_ADDR_IPV6 ^{*1}	Page 188
DHCP_DNS_ENABLE_IPV6 ^{*1}	Page 189

Ethernet Port Settings

Parameter Name	Ref.
PHY_MODE_LAN ^{*1}	Page 189
VLAN_ENABLE ^{*1}	Page 189
VLAN_ID_IP_PHONE ^{*1}	Page 190
VLAN_PRI_IP_PHONE ^{*1}	Page 190
LLDP_ENABLE ^{*1}	Page 190
LLDP_INTERVAL ^{*2}	Page 191

Pre-Provisioning Settings

Parameter Name	Ref.
SIPPNP_PROV_ENABLE	Page 191
OPTION66_ENABLE	Page 191
OPTION159_PROV_ENABLE	Page 192
OPTION160_PROV_ENABLE	Page 192
DHCPV6_OPTION17_PROV_ENABLE	Page 192

Provisioning Settings

Parameter Name	Ref.
CFG_STANDARD_FILE_PATH ^{*2}	Page 192
CFG_PRODUCT_FILE_PATH ^{*2}	Page 193
CFG_MASTER_FILE_PATH ^{*2}	Page 193
CFG_CYCLIC ^{*2}	Page 193
CFG_CYCLIC_INTVL ^{*2}	Page 193
CFG_RESYNC_TIME ^{*2}	Page 194

5.1 Configuration File Parameter List

Parameter Name	Ref.
CFG_RTRY_INTVL	Page 194
CFG_RESYNC_FROM_SIP ²	Page 194
CFG_RESYNC_ACTION	Page 194
CFG_FILE_KEY2	Page 195
CFG_FILE_KEY3	Page 195
CFG_FILE_KEY_LENGTH	Page 195
CFG_ROOT_CERTIFICATE_PATH	Page 196
CFG_CLIENT_CERT_PATH	Page 196
CFG_PKEY_PATH	Page 196
HTTP_SSL_VERIFY	Page 196

Firmware Update Settings

Parameter Name	Ref.
FIRM_UPGRADE_ENABLE ²	Page 197
FIRM_FILE_PATH ²	Page 197
FIRM_VERSION	Page 198

HTTP Settings

Parameter Name	Ref.
HTTP_VER ²	Page 198
HTTP_USER_AGENT ²	Page 198
HTTP_AUTH_ID ¹	Page 199
HTTP_AUTH_PASS ¹	Page 199
HTTP_PROXY_ENABLE ²	Page 199
HTTP_PROXY_ADDR ²	Page 199
HTTP_PROXY_PORT ²	Page 200
HTTP_PROXY_ID	Page 200
HTTP_PROXY_PASS	Page 200

HTTPD/WEB Settings

Parameter Name	Ref.
HTTPD_LISTEN_PORT	Page 200
HTTPD_PORTOPEN_AUTO	Page 200
HTTPD_PORTCLOSE_TM	Page 201
USER_ID	Page 201
USER_PASS ²	Page 201
ADMIN_ID	Page 202
ADMIN_PASS ²	Page 202

TR-069 Settings

Parameter Name	Ref.
ACS_URL	Page 202
ACS_USER_ID	Page 202
ACS_PASS	Page 203
PERIODIC_INFORM_ENABLE	Page 203
PERIODIC_INFORM_INTERVAL	Page 203
PERIODIC_INFORM_TIME	Page 203
CON_REQ_USER_ID	Page 204
CON_REQ_PASS	Page 204
ANNEX_G_STUN_ENABLE	Page 205
ANNEX_G_STUN_SERV_ADDR	Page 205
ANNEX_G_STUN_SERV_PORT	Page 205
ANNEX_G_STUN_USER_ID	Page 205
ANNEX_G_STUN_PASS	Page 206
ANNEX_G_STUN_MAX_KEEP_ALIVE	Page 206
ANNEX_G_STUN_MIN_KEEP_ALIVE	Page 206
UDP_CON_REQ_ADDR_NOTIFY_LIMIT	Page 207

XML Settings

Parameter Name	Ref.
XMLAPP_ENABLE ²	Page 207

5.1 Configuration File Parameter List

Parameter Name	Ref.
XMLAPP_USERID ^{*2}	Page 207
XMLAPP_USERPASS ^{*2}	Page 208
XMLAPP_LDAP_URL ^{*2}	Page 208
XMLAPP_LDAP_USERID ^{*2}	Page 208
XMLAPP_LDAP_USERPASS ^{*2}	Page 208
XMLAPP_NPB_SEARCH_TIMER	Page 208
XMLAPP_LDAP_MAXRECORD ^{*2}	Page 209
XML_HTTPD_PORT ^{*2}	Page 209
XML_ERROR_INFORMATION	Page 209

XSI Settings

Parameter Name	Ref.
XSI_ENABLE ^{*2}	Page 209
XSI_SERVER ^{*2}	Page 210
XSI_SERVER_TYPE ^{*2}	Page 210
XSI_SERVER_PORT ^{*2}	Page 210
XSI_USERID_n ^{*1}	Page 210
XSI_PASSWORD_n ^{*1}	Page 211
XSI_PHONEBOOK_ENABLE_n ^{*2}	Page 211
XSI_PHONEBOOK_TYPE_n ^{*2}	Page 211
XSI_CALLLOG_ENABLE_n ^{*2}	Page 211

XMPP (UC-ONE) Settings

Parameter Name	Ref.
UC_ENABLE ^{*2}	Page 212
UC_USERID_HSY ^{*1}	Page 212
UC_PASSWORD_HSY ^{*1}	Page 212
XMPP_SERVER ^{*2}	Page 213
XMPP_PORT ^{*2}	Page 213
XMPP_TLS_VERIFY	Page 213
XMPP_ROOT_CERT_PATH	Page 213

Parameter Name	Ref.
XMPP_CLIENT_CERT_PATH	Page 213
XMPP_PKEY_PATH	Page 214

LDAP Settings

Parameter Name	Ref.
LDAP_ENABLE ²	Page 214
LDAP_DNSSRV_ENABLE ²	Page 214
LDAP_SERVER ²	Page 214
LDAP_SERVER_PORT ²	Page 215
LDAP_MAXRECORD ²	Page 215
LDAP_NUMB_SEARCH_TIMER	Page 215
LDAP_NAME_SEARCH_TIMER	Page 215
LDAP_USERID ²	Page 215
LDAP_PASSWORD ²	Page 216
LDAP_NAME_FILTER ²	Page 216
LDAP_NUMB_FILTER ²	Page 216
LDAP_NAME_ATTRIBUTE ²	Page 216
LDAP_NUMB_ATTRIBUTE ²	Page 217
LDAP_BASEDN ²	Page 217
LDAP_SSL_VERIFY	Page 217
LDAP_ROOT_CERT_PATH	Page 217
LDAP_CLIENT_CERT_PATH	Page 217
LDAP_PKEY_PATH	Page 218

SNMP Settings

Parameter Name	Ref.
SNMP_ENABLE	Page 218
SNMP_TRUST_IP	Page 218
SNMP_TRUST_PORT	Page 218
SNMP_RO_COMMUNITY_STRING	Page 219
SNMP_SECURITY_TYPE	Page 219

5.1 Configuration File Parameter List

Parameter Name	Ref.
SNMP_SECURITY_USER	Page 219
SNMP_AUTH_TYPE	Page 219
SNMP_AUTH_PASSWORD	Page 219
SNMP_ENCRYPT_TYPE	Page 220
SNMP_ENCRYPT_PASSWORD	Page 220

Multicast Paging Settings

Parameter Name	Ref.
MPAGE_ADDR ^{m2}	Page 220
MPAGE_IPV6_ADDR ^{m2}	Page 220
MPAGE_PORT ^{m2}	Page 221
MPAGE_PRIORITY ^{m2}	Page 221
MPAGE_LABEL ^{m2}	Page 221
MPAGE_SEND_ENABLE ^{m2}	Page 221
MPAGE_CODEC	Page 222
MPAGE_SP_VOL_EMERGENCY	Page 222
MPAGE_SP_VOL_PRIORITY	Page 222
MPAGE_DND_ENABLE_HSY	Page 222
MPAGE_FUNCKEY_ENABLE	Page 223

NTP Settings

Parameter Name	Ref.
NTP_ADDR ²	Page 223
TIME_SYNC_INTVL	Page 223
TIME_QUERY_INTVL ²	Page 223

Time Settings

Parameter Name	Ref.
LOCAL_TIME_ZONE_POSIX	Page 224
TIME_ZONE ²	Page 224
DST_ENABLE ²	Page 225

Parameter Name	Ref.
DST_OFFSET ²	Page 225
DST_START_MONTH ²	Page 226
DST_START_ORDINAL_DAY ²	Page 226
DST_START_DAY_OF_WEEK ²	Page 226
DST_START_TIME ²	Page 227
DST_STOP_MONTH ²	Page 227
DST_STOP_ORDINAL_DAY ²	Page 228
DST_STOP_DAY_OF_WEEK ²	Page 228
DST_STOP_TIME ²	Page 228

Network Phonebook (Common)

Parameter Name	Ref.
ONLY_NPB_ENABLE	Page 229
NETWORK_SEARCH_ENABLE	Page 229

Language Settings

Parameter Name	Ref.
AVAILABLE_LANGUAGE_HS ²	Page 229
DEFAULT_LANGUAGE_HSy ²	Page 230
HS_LANGUAGE_PATHx	Page 230
HS_LANGUAGE_VERx	Page 230
AVAILABLE_LANGUAGE_WEB ²	Page 230
WEB_LANGUAGE ²	Page 231
WEB_LANGUAGE_PATHx	Page 231
WEB_LANGUAGE_VERx	Page 231

NAT Settings

Parameter Name	Ref.
STUN_SERV_ADDR ²	Page 231
STUN_SERV_PORT ²	Page 232
STUN_2NDSERV_ADDR	Page 232

5.1 Configuration File Parameter List

Parameter Name	Ref.
STUN_2NDSERV_PORT	Page 232
STUN_INTVL ²	Page 232
SIP_ADD_RPORT ²	Page 232
PORT_PUNCH_INTVL ²	Page 233
RTP_PORT_PUNCH_INTVL ²	Page 233

SIP Settings

Parameter Name	Ref.
SIP_USER_AGENT ²	Page 233
PHONE_NUMBER_n ²	Page 234
SIP_URI_n ²	Page 234
SIP_RGSTR_ADDR_n ²	Page 234
SIP_RGSTR_PORT_n ²	Page 235
SIP_PRXY_ADDR_n ²	Page 235
SIP_PRXY_PORT_n ²	Page 235
SIP_PRSNC_ADDR_n ²	Page 235
SIP_PRSNC_PORT_n ²	Page 236
SIP_OUTPROXY_ADDR_n ²	Page 236
SIP_OUTPROXY_PORT_n ²	Page 236
SIP_SVCDOMAIN_n ²	Page 237
SIP_AUTHID_n ²	Page 237
SIP_PASS_n ²	Page 237
SIP_SRC_PORT_n ²	Page 237
DSCP_SIP_n ²	Page 238
SIP_DNSSRV_ENA_n ²	Page 238
SIP_UDP_SRV_PREFIX_n ²	Page 239
SIP_TCP_SRV_PREFIX_n ²	Page 239
REG_EXPIRE_TIME_n ²	Page 239
REG_INTERVAL_RATE_n	Page 240
REG_RTX_INTVL_n	Page 240
USE_DEL_REG_OPEN_n	Page 240
USE_DEL_REG_CLOSE_n	Page 240

Parameter Name	Ref.
SIP_SESSION_TIME_n ²	Page 241
SIP_SESSION_METHOD_n ²	Page 241
SIP_TIMER_T1_n ²	Page 241
SIP_TIMER_T2_n ²	Page 242
SIP_TIMER_T4_n	Page 242
SIP_TIMER_B_n	Page 242
SIP_TIMER_D_n	Page 243
SIP_TIMER_F_n	Page 243
SIP_TIMER_H_n	Page 243
SIP_TIMER_J_n	Page 243
SIP_100REL_ENABLE_n ²	Page 244
SIP_18X_RTX_INTVL_n	Page 244
SIP_SUBS_EXPIRE_n	Page 244
SUB_INTERVAL_RATE_n	Page 245
SUB_RTX_INTVL_n	Page 245
SIP_P_PREFERRED_ID_n	Page 245
SIP_PRIVACY_n	Page 245
ADD_USER_PHONE_n	Page 246
SIP_ANM_DISPNAME_n	Page 246
SIP_ANM_USERNAME_n	Page 246
SIP_ANM_HOSTNAME_n	Page 247
SIP_DETECT_SSAF_n ²	Page 247
SIP_RCV_DET_HEADER_n	Page 247
SIP_RCV_DET_REQURI_n	Page 248
SIP_CONTACT_ON_ACK_n	Page 248
VOICE_MESSAGE_AVAILABLE	Page 248
SIP_INVITE_EXPIRE_n	Page 249
SIP_FOVR_NORSP_n	Page 249
SIP_FOVR_MAX_n	Page 249
SIP_FOVR_MODE_n	Page 249
SIP_FOVR_DURATION_n	Page 250
SIP_ADD_ROUTE_n	Page 250
SIP_REQURI_PORT_n	Page 250

5.1 Configuration File Parameter List

Parameter Name	Ref.
ADD_EXPIRES_HEADER_n	Page 251
ADD_TRANSPORT_UDP_n	Page 251
SIP_ADD_DIVERSION_n	Page 251
TRANSFER_RECALL_TIM	Page 252
SIGNAL_COMPRESSION_n	Page 252
MAX_BREADTH_n	Page 252
MUTIPART_BOUNDARY_DELIMITER_n	Page 252
RFC5626_KEEPA_LIVE_ENABLE_n	Page 253
RINGTONE_183_180_ENABLE_n	Page 253
SIP_403_REG_SUB_RTX_n	Page 253
SIP_FORK_MODE_n	Page 254
AKA_AUTHENTICATION_ENABLE_n	Page 254
RFC2543_HOLD_ENABLE_n ²	Page 254
SIP_HOLD_ATTRIBUTE_n	Page 254
SDP_USER_ID_n	Page 255
TELEVENT_PAYLOAD ²	Page 255
HOLD_SOUND_PATH_n	Page 255
KEEP_EARLYMEDIA_n	Page 256
RFC3327_SUPPORT_PATH	Page 256
RFC4244_SUPPORT_HISTORY	Page 256
RFC3319_SUPPORT_JOIN	Page 256
RFC6947_DRAFT08_ALTC	Page 257
RFC5627_SUPPORT_GRUU_n	Page 257
ESCAPECODE_CONVERSION	Page 257

SIP-TLS Settings

Parameter Name	Ref.
SIP_TRANSPORT_n ²	Page 257
SIP_TLS_MODE_n ²	Page 258
SIP_TLS_RECONNECT_n	Page 258
SIP_TLS_SRV_PREFIX_n ²	Page 258
SIP_TLS_VERIFY_n	Page 259

Parameter Name	Ref.
SIP_TLS_ROOT_CERT_PATH	Page 259
SIP_TLS_CLIENT_CERT_PATH	Page 259
SIP_TLS_PKEY_PATH	Page 259

CODEC Settings

Parameter Name	Ref.
CODEC_G729_PARAM_n	Page 259
CODEC_ENABLEx_n ²	Page 260
CODEC_PRIORITYx_n ²	Page 260
CODEC_PAYLOAD2	Page 261

DTMF Settings

Parameter Name	Ref.
DTMF_METHOD_n ²	Page 261
OUTBANDDTMF_VOL	Page 262
INBANDDTMF_VOL	Page 262
DTMF_SIGNAL_LEN	Page 262
DTMF_INTDIGIT_TIM	Page 262

RTP/RTCP/RTCP-XR Settings

Parameter Name	Ref.
DSCP_RTP_n ²	Page 262
DSCP_RTCP_n ²	Page 263
MAX_DELAY_n	Page 263
MIN_DELAY_n	Page 263
NOM_DELAY_n	Page 264
RTP_PORT_MIN ²	Page 264
RTP_PORT_MAX ²	Page 264
RTP_PTIME ²	Page 265
RTP_TARGET_CHECK	Page 265
RTCP_ENABLE_n ²	Page 265

5.1 Configuration File Parameter List

Parameter Name	Ref.
RTCP_INTVL_n ²	Page 265
RTCP_SEND_BY_SDP_n	Page 266
RTP_CLOSE_ENABLE_n	Page 266
RTCPXR_ENABLE_n ²	Page 266

SRTP Settings

Parameter Name	Ref.
SRTP_CONNECT_MODE_n ²	Page 267
SRTP_MIX_CONFERENCE_ENABLE_n ²	Page 267
SRTP_MIX_TRANSFER_ENABLE_n ²	Page 267
SRTP_HELD_CALL_RTP_ENABLE	Page 268

VQ Report by PUBLISH

Parameter Name	Ref.
VQREPORT_COLLECTOR_ADDRESS ²	Page 268
VQREPORT_COLLECTOR_PORT ²	Page 268
VQREPORT_SEND ²	Page 268
ALERT_REPORT_TRIGGER ²	Page 269
ALERT_REPORT_MOSQ_CRITICAL ²	Page 269
ALERT_REPORT_MOSQ_WARNING ²	Page 269
ALERT_REPORT_DELAY_CRITICAL ²	Page 269
ALERT_REPORT_DELAY_WARNING ²	Page 270
VQREPORT_SIGNAL_COMPRESSION	Page 270

uaCSTA Settings

Parameter Name	Ref.
UACSTA_ENABLE_n	Page 270
UACSTA_UNIQUE_ID	Page 270
CSTA_PORT	Page 270
CSTA_PRXY_ADDR	Page 271
CSTA_PRXY_PORT	Page 271

Parameter Name	Ref.
CSTA_RGSTR_ADDR	Page 271
CSTA_RGSTR_PORT	Page 271
CSTA_REG_EXPIRE_TIME	Page 271
CSTA_TRANSPORT	Page 272
CSTA_RGSTR_AUTHID	Page 272
CSTA_RGSTR_PASS	Page 272

Telephone Settings

Parameter Name	Ref.
POWER_ON_DISPLAY_LOGO_PATH	Page 272
DISPLAY_WALLPAPER_DARK_PATH ²	Page 273
DISPLAY_WALLPAPER_LIGHT_PATH ²	Page 273
FIRSTDIGIT_TIM ²	Page 273
INTDIGIT_TIM ²	Page 273
POUND_KEY_DELIMITER_ENABLE ²	Page 273
POST_DIAL_TALK_ENABLE	Page 274
RINGTONE_SETTING_HSy_n ³	Page 274
INTERCOM_RINGTONE_SETTING_HSy ³	Page 275
DISPLAY_NAME_REPLACE	Page 275
NUMBER_MATCHING_LOWER_DIGIT	Page 275
NUMBER_MATCHING_UPPER_DIGIT	Page 275
INCOMING_BUSY_ENABLE	Page 275
FLASH_RECALL_TERMINATE	Page 276
FLASHHOOK_CONTENT_TYPE	Page 276
NUM_PLAN_PARKING ²	Page 276
CALLPARK_KEY_ENABLE ²	Page 276
NUM_PLAN_PARK_RETRIEVING ²	Page 277
IDLE_SOFT_KEY_PARK_RETRIEVING ²	Page 277
HOLD_RECALL_TIM	Page 277
HOLD_TRANSFER_OPERATION	Page 277
ONHOOK_TRANSFER_ENABLE	Page 278
ONHOOK_HOLD_TRNS_ENABLE	Page 278

5.1 Configuration File Parameter List

Parameter Name	Ref.
BLIND_TRANSFER_ENABLE	Page 278
REPEATER_MODE ^{*3}	Page 278
SYS_LOCK_ENABLE_HSy ^{*2}	Page 279
SYS_LOCK_PASSWORD_HSy ^{*2}	Page 279
INTERCOM_ENABLE	Page 279
PAUSE_INPUT_ENABLE	Page 279
REGISTRATION_PIN ^{*3}	Page 280

Tone Settings

Parameter Name	Ref.
OUTSIDE_DIAL_TONE_FRQ	Page 280
OUTSIDE_DIAL_TONE_GAIN	Page 280
OUTSIDE_DIAL_TONE_RPT	Page 280
OUTSIDE_DIAL_TONE_TIMING	Page 280
REORDER_TONE_ENABLE	Page 281
TONE_LEN_DISCONNECT	Page 281
DIAL_TONE1_FRQ ^{*2}	Page 281
DIAL_TONE1_GAIN	Page 281
DIAL_TONE1_RPT	Page 281
DIAL_TONE1_TIMING ^{*2}	Page 282
DIAL_TONE2_FRQ	Page 282
DIAL_TONE2_GAIN	Page 282
DIAL_TONE2_RPT	Page 282
DIAL_TONE2_TIMING	Page 283
DIAL_TONE4_FRQ	Page 283
DIAL_TONE4_GAIN	Page 283
DIAL_TONE4_RPT	Page 283
DIAL_TONE4_TIMING	Page 284
BUSY_TONE_FRQ ^{*2}	Page 284
BUSY_TONE_GAIN	Page 284
BUSY_TONE_RPT	Page 285
BUSY_TONE_TIMING	Page 285

Parameter Name	Ref.
REORDER_TONE_FRQ ²	Page 285
REORDER_TONE_GAIN	Page 285
REORDER_TONE_RPT	Page 286
REORDER_TONE_TIMING ²	Page 286
RINGBACK_TONE_FRQ ²	Page 286
RINGBACK_TONE_GAIN	Page 286
RINGBACK_TONE_RPT	Page 287
RINGBACK_TONE_TIMING ²	Page 287
HOLD_TONE_FRQ	Page 287
HOLD_TONE_GAIN	Page 287
BELL_CORE_PATTERN1_TIMING	Page 288
BELL_CORE_PATTERN2_TIMING	Page 288
BELL_CORE_PATTERN3_TIMING	Page 288
BELL_CORE_PATTERN4_TIMING	Page 288
BELL_CORE_PATTERN5_TIMING	Page 289

Call Control Settings

Parameter Name	Ref.
OUTGOING_CALL_LINE_HSy ¹	Page 289
DEFAULT_LINE_SELECT_HSy ¹	Page 290
INCOMING_CALL_GROUP_n ¹	Page 290
PAGING_ENABLE_HANDSET_n ²	Page 290
ANONYMOUS_CALL_ENABLE_n ¹	Page 291
BLOCK_ANONYMOUS_CALL_ENABLE_n ¹	Page 291
HOTLINE_ENABLE_HSy ²	Page 291
HOTLINE_NUMBER_HSy ²	Page 292
HOTLINE_TIM ²	Page 292
DISPLAY_NAME_n ²	Page 292
VM_SUBSCRIBE_ENABLE ²	Page 292
VM_NUMBER_n ²	Page 293
DIAL_PLAN_n ²	Page 293
DIAL_PLAN_NOT_MATCH_ENABLE_n ²	Page 293

5.1 Configuration File Parameter List

Parameter Name	Ref.
MACRODIGIT_TIM ²	Page 294
INTERNATIONAL_ACCESS_CODE ²	Page 294
COUNTRY_CALLING_CODE ²	Page 294
NATIONAL_ACCESS_CODE ²	Page 295
IDLE_SOFT_KEY_A ²	Page 295
IDLE_SOFT_KEY_B ²	Page 295
IDLE_SOFT_KEY_C ²	Page 296
ADMIN_ABILITY_ENABLE_HSY ²	Page 296
HANDSET_NAME_HSY ¹	Page 296
EMERGENCY_CALLx ²	Page 297
CALL_REJECTIONx_n ¹	Page 297
CLICKTO_ENABLE_n ²	Page 297
CALLPARK_NOTIFICATION_ENABLE_n ²	Page 298
SHARED_CALL_ENABLE_n ²	Page 298
FWD_DND_SYNCHRO_ENABLE_n ²	Page 299
MOH_SERVER_URI_n ²	Page 299
FWD_DND_CONTROL_ENABLE	Page 299
FWD_DND_SYNCHRO_MODE	Page 299
HOLD_AND_CALL_ENABLE	Page 300
AUTO_CALL_HOLD	Page 300
SIP_RESPONSE_CODE_DND	Page 300
SIP_RESPONSE_CODE_CALL_REJECT	Page 300
CW_ENABLE_n ²	Page 301
RETURN_VOL_SET_DEFAULT_ENABLE	Page 301
CONFERENCE_SERVER_URI ²	Page 301
PRIVACY_MODE_n	Page 301
PARALLEL_HSNom ¹	Page 302
PARALLEL_MODEm ¹	Page 302

Logging Settings

Parameter Name	Ref.
SYSLOG_ADDR	Page 302

Parameter Name	Ref.
<code>SYSLOG_PORT</code>	Page 303
<code>LOGGING_LEVEL_DNS</code>	Page 303
<code>LOGGING_LEVEL_NW1</code>	Page 303
<code>LOGGING_LEVEL_FILE</code>	Page 303
<code>LOGGING_LEVEL_SIP</code>	Page 303
<code>LOGGING_LEVEL_TR069</code>	Page 304
<code>LOGGING_LEVEL_STUN</code>	Page 304
<code>LOGGING_LEVEL_NW2</code>	Page 304
<code>LOGGING_LEVEL_CFGPARSE</code>	Page 304

^{*1} This setting can also be configured through other programming methods (phone user interface programming or Web user interface programming).

^{*2} This setting can also be configured through the Web user interface.

^{*3} This setting can also be configured through the Phone user interface programming.

5.2 General Information on the Configuration Files

5.2.1 Configuration File Parameters

The information on each parameter that can be written in a configuration file is shown in the tables below. The information includes parameter name (as the title of the table), value format, description, permitted value range, default value of each parameter, phone user interface reference, and Web user interface reference.

Parameter Name

This is the system-predefined parameter name and cannot be changed.

Note

- Certain parameter names end with "`_n`". This signifies that these settings can be made to each line individually. The number of lines available varies depending on the phone being used, as follows:
 - KX-TGP600: 1–8

Value Format

Each parameter value is categorized into Integer, Boolean, or String. Some parameters require a composite form such as "Comma-separated Integer" or "Comma-separated String".

- Integer:** a numerical value, described as a sequence of numerical characters, optionally preceded by a "-" (minus)
An empty string is not allowed.
- Boolean:** "Y" or "N"
- String:** sequence of alphanumerical characters
For details about available characters, see **5.2.2 Characters Available for String Values**.
- Comma-separated Integer:** a list of integers, separated by commas
No space characters are allowed.
- Comma-separated String:** a list of strings, separated by commas
No space characters are allowed.

5.3.1 System Settings

- **IPADDR:** IPv4 address format.
- **IPADDR-V6:** IPv6 address format (can be abbreviated).

Description

Describes the details of the parameter.

Value Range

Indicates the permitted value range of the parameter.

Default Value

Indicates the factory default value of the parameter.

Actual default values may vary depending on your phone system dealer/service provider.

Phone User Interface Reference

Provides the reference page of the corresponding parameter in phone user interface programming.

Web User Interface Reference

Provides the reference page of the corresponding parameter in Web user interface programming.

5.2.2 Characters Available for String Values

Unless noted otherwise in "Value Range", only ASCII characters can be used for parameter values. Unicode characters can also be used in some parameter values.

Available ASCII characters are shown on a white background in the following table:

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
20	SP	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	

5.3 System Settings

5.3.1 System Settings

MULTI_NUMBER_ENABLE

Value Format	BOOLEAN
--------------	---------

Description	Specifies whether to enable or disable the multi number mode.
Value Range	- Y: Enable multi number mode. - N: Disable (1 to 1 mode)
Default Value	N

WIDEBAND_AUDIO_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable or disable the wide band audio. If you set "Y", wide band audio and 4 simultaneous call are available. If you set "N", only narrow band audio and 8 simultaneous call are available.
Value Range	- Y: Enable WB (simultaneous call is Max. 4) - N: Disable (only NB, simultaneous call is Max. 8)
Default Value	N

CODEC_G722AMR_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable or disable the G.722.2 AMR-WB.
Value Range	- Y: Enable G.722.2 AMR - N: Disable
Default Value	N

FACTORY_RESET_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable or disable the operation of factory default and carrier default.
Value Range	- Y: Enable factory reset operation - N: Disable
Default Value	Y

5.3.2 Handset Registration Settings

IPEI_HSy

Parameter Name Example	IPEI_HS1, IPEI_HS2, ..., IPEI_HS8
Value Format	STRING

5.3.3 Basic Network Settings

Description	Specifies the handset's IPEI, which is used registering the handset to the base unit.
Value Range	12 Digits, Decimal
Default Value	Empty string

IPEI_AUTOREGMODE_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to perform the HS registration mode automatically after IPEI was set.
Value Range	- Y: Enable automatically registration - N: Disable
Default Value	N

IPEI_RESTRICTION_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to perform the HS registration limit after IPEI was set.
Value Range	- Y: Enable registration limit - N: Disable
Default Value	N

5.3.3 Basic Network Settings

IP_ADDR_MODE

Value Format	INTEGER
Description	Specifies the IP addressing mode.
Value Range	0: IPv4 1: IPv6 2: IPv4&IPv6
Default Value	0
Web User Interface Reference	IP Addressing Mode (Page 80)

CONNECTION_TYPE

Value Format	INTEGER
Description	Specifies whether to assign the IP address automatically (DHCP) or manually (static) for IPv4.

Value Range	0: Static 1: DHCP
Default Value	1
Web User Interface Reference	Connection Mode (Page 80)

STATIC_IP_ADDRESS

Value Format	IPADDR
Description	Specifies the IP address for the unit for IPv4. Note - This setting is available only when "CONNECTION_TYPE" is set to "0". - When you specify this parameter, you must specify "STATIC_SUBNET" together in a configuration file.
Value Range	Max. 15 characters n.n.n.n [n=0–255]
Default Value	Empty string
Web User Interface Reference	IP Address (Page 81)

STATIC_SUBNET

Value Format	IPADDR
Description	Specifies the subnet mask for IPv4. Note - This setting is available only when "CONNECTION_TYPE" is set to "0". - When you specify this parameter, you must specify "STATIC_IP_ADDRESS" together in a configuration file.
Value Range	Max. 15 characters n.n.n.n [n=0–255]
Default Value	Empty string
Web User Interface Reference	Subnet Mask (Page 81)

STATIC_GATEWAY

Value Format	IPADDR
---------------------	--------

Description	Specifies the IP address of the default gateway for the IPv4 network where the unit is connected. Note - This setting is available only when "CONNECTION_TYPE" is set to "0". - When you specify this parameter, you must specify "STATIC_IP_ADDRESS" and "STATIC_SUBNET" together in a configuration file.
Value Range	Max. 15 characters n.n.n.n [n=0–255]
Default Value	Empty string
Web User Interface Reference	Default Gateway (Page 82)

USER_DNS1_ADDR

Value Format	IPADDR
Description	Specifies the IP address of the primary DNS server for IPv4. Note This setting is available only when "CONNECTION_TYPE" is set to "0".
Value Range	Max. 15 characters n.n.n.n [n=0–255]
Default Value	Empty string
Web User Interface Reference	DNS1 (Page 82)

USER_DNS2_ADDR

Value Format	IPADDR
Description	Specifies the IP address of the secondary DNS server for IPv4. Note This setting is available only when "CONNECTION_TYPE" is set to "0".
Value Range	Max. 15 characters n.n.n.n [n=0–255]
Default Value	Empty string
Web User Interface Reference	DNS2 (Page 82)

DHCP_DNS_ENABLE

Value Format	BOOLEAN
---------------------	---------

Description	Specifies whether to enable or disable using the DNS server obtained by DHCPv4. Note This setting is available only when "CONNECTION_TYPE" is set to "1".
Value Range	Y: Not use (use static DNS) N: Use DNS obtained by DHCPv4
Default Value	N
Web User Interface Reference	Auto DNS via DHCP (Page 82)

DHCP_HOST_NAME

Value Format	STRING
Description	Specifies the host name to option12 in DHCPv4 or option15 in DHCPv6.
Value Range	Max. 64 characters
Default Value	{MODEL}
Web User Interface Reference	DHCP Host Name (Page 81)

DHCP_VENDOR_CLASS

Value Format	STRING
Description	Specifies the vendor class to option60 in DHCPv4 or option16 in DHCPv6.
Value Range	Max. 64 characters
Default Value	Panasonic

CONNECTION_TYPE_IPV6

Value Format	INTEGER
Description	Specifies the IP address setting mode for IPv6.
Value Range	0: Static 1: DHCP 2: Stateless Autoconfiguration
Default Value	1
Web User Interface Reference	Connection Mode (Page 83)

STATIC_IP_ADDRESS_IPV6

Value Format	IPADDR-V6
Description	Specifies the IP address for IPv6.
Value Range	Max. 39 characters n:n:n:n:n:n:n [n=0-FFFF, abbreviation available]
Default Value	Empty string
Web User Interface Reference	IP Address (Page 83)

PREFIX_IPV6

Value Format	INTEGER
Description	Specifies the prefix for IPv6.
Value Range	0–128
Default Value	64
Web User Interface Reference	Prefix (Page 83)

STATIC_GATEWAY_IPV6

Value Format	IPADDR-V6
Description	Specifies the default gateway for IPv6.
Value Range	Max. 39 characters n:n:n:n:n:n:n [n=0-FFFF, abbreviation available]
Default Value	Empty string
Web User Interface Reference	Default Gateway (Page 83)

USER_DNS1_ADDR_IPV6

Value Format	IPADDR-V6
Description	Specifies the IP address of primary DNS server for IPv6.
Value Range	Max. 39 characters n:n:n:n:n:n:n [n=0-FFFF, abbreviation available]
Default Value	Empty string
Web User Interface Reference	DNS1 (Page 84)

USER_DNS2_ADDR_IPV6

Value Format	IPADDR-V6
---------------------	-----------

Description	Specifies the IP address of secondary DNS server for IPv6.
Value Range	Max. 39 characters n:n:n:n:n:n:n [n=0-FFFF, abbreviation available]
Default Value	Empty string
Web User Interface Reference	DNS2 (Page 84)

DHCP_DNS_ENABLE_IPV6

Value Format	BOOLEAN
Description	Specifies whether to enable or disable using the DNS server obtained by DHCPv6.
Value Range	- Y: Not use (use static DNS) - N: Use DNS obtained by DHCPv6
Default Value	N
Web User Interface Reference	Auto DNS via DHCP (Page 84)

5.3.4 Ethernet Port Settings

PHY_MODE_LAN

Value Format	INTEGER
Description	Specifies the link speed and duplex mode of the LAN port.
Value Range	1: Auto Negotiation 2: 100Mbps/Full Duplex 3: 100Mbps/Half Duplex 4: 10Mbps/Full Duplex 5: 10Mbps/Half Duplex
Default Value	1
Web User Interface Reference	LAN Port (Page 85)

VLAN_ENABLE

Value Format	BOOLEAN
---------------------	---------

Description	Specifies whether to use the VLAN feature to perform VoIP communication securely. Note You should specify "Y" for only one of "LLDP_ENABLE" or "VLAN_ENABLE". If "Y" is specified for two or more of the parameters above, the settings are prioritized as follows: "VLAN_ENABLE" > "LLDP_ENABLE". Therefore, if "Y" is specified for both "VLAN_ENABLE" and "LLDP_ENABLE", the VLAN-related settings are used.
Value Range	- Y (Enable) - N (Disable)
Default Value	N
Web User Interface Reference	Enable VLAN (Page 86)

VLAN_ID_IP_PHONE

Value Format	INTEGER
Description	Specifies the VLAN ID for this unit.
Value Range	0–4094
Default Value	2
Web User Interface Reference	VLAN ID (Page 87)

VLAN_PRI_IP_PHONE

Value Format	INTEGER
Description	Specifies the priority number for the unit.
Value Range	0–7
Default Value	7
Web User Interface Reference	Priority (Page 87)

LLDP_ENABLE

Value Format	BOOLEAN
---------------------	---------

Description	Specifies whether to enable or disable the LLDP-MED feature. Note You should specify "Y" for only one of "LLDP_ENABLE", or "VLAN_ENABLE". If "Y" is specified for two or more of the parameters above, the settings are prioritized as follows: VLAN_ENABLE > LLDP_ENABLE. Therefore, if "Y" is specified for both "VLAN_ENABLE" and "LLDP_ENABLE", the VLAN-related settings are used.
Value Range	Y: Enable LLDP-MED N: Disable
Default Value	Y
Web User Interface Reference	Enable LLDP (Page 86)

LLDP_INTERVAL

Value Format	INTEGER
Description	Specifies the interval, in seconds, between sending each LLDP frame.
Value Range	1–3600
Default Value	30
Web User Interface Reference	Packet Interval (Page 86)

5.3.5 Pre-Provisioning Settings

SIPPNP_PROV_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable or disable the SIP PNP provisioning.
Value Range	Y: Enable SIP PnP provisioning N: Disable
Default Value	Y

OPTION66_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable or disable the DHCP option 66 provisioning. Note The unit will try to download configuration files through the TFTP server, the IP address or FQDN of which is specified in the option number 66 field.

5.3.6 Provisioning Settings

Value Range	• y: Enable DHCP option66 provisioning • n: Disable
Default Value	y

OPTION159_PROV_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable or disable the DHCP option159 provisioning.
Value Range	• y: Enable DHCP option159 provisioning • n: Disable
Default Value	y

OPTION160_PROV_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable or disable the DHCP option160 provisioning.
Value Range	• y: Enable DHCP option160 provisioning • n: Disable
Default Value	y

DHCPV6_OPTION17_PROV_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable or disable DHCPv6 option17 provisioning.
Value Range	• y: Enable DHCPv6 option17 provisioning • n: Disable
Default Value	y

5.3.6 Provisioning Settings

CFG_STANDARD_FILE_PATH

Value Format	STRING
Description	Specifies the URL of the standard configuration file, which is used when every unit needs different settings.
Value Range	Max. 384 characters
Default Value	Empty string

Web User Interface Reference	Standard File URL (Page 155)
-------------------------------------	------------------------------

CFG_PRODUCT_FILE_PATH

Value Format	STRING
Description	Specifies the URL of the product configuration file, which is used when all units with the same model number need the same settings.
Value Range	Max. 384 characters
Default Value	Empty string
Web User Interface Reference	Product File URL (Page 156)

CFG_MASTER_FILE_PATH

Value Format	STRING
Description	Specifies the URL of the master configuration file, which is used when all units need the same settings.
Value Range	Max. 384 characters
Default Value	Empty string
Web User Interface Reference	Master File URL (Page 156)

CFG_CYCLIC

Value Format	BOOLEAN
Description	Specifies whether the unit periodically checks for updates of configuration files.
Value Range	- Y: Enable periodic synchronization - N: Disable
Default Value	N
Web User Interface Reference	Cyclic Auto Resync (Page 156)

CFG_CYCLIC_INTVL

Value Format	INTEGER
Description	Specifies the interval, in minutes, between periodic checks for updates of the configuration files.
Value Range	1–40320
Default Value	10080
Web User Interface Reference	Resync Interval (Page 156)

CFG_RESYNC_TIME

Value Format	STRING
Description	Specifies the time (hour:minute) that the unit checks for updates of configuration files.
Value Range	00:00–23:59 Note - If the value for this setting is any valid value other than an empty string, the unit downloads the configuration files at the fixed time, and the settings specified in "CFG_CYCLIC", "CFG_CYCLIC_INTVL", and "CFG_RTRY_INTVL" are disabled. - If the value for this setting is an empty string, downloading the configuration files at the fixed time are disabled.
Default Value	Empty string
Web User Interface Reference	Time Resync (Page 157)

CFG_RTRY_INTVL

Value Format	INTEGER
Description	Specifies the period of time, in minutes, that the unit will retry checking for an update of the configuration files after a configuration file access error has occurred. Note This setting is available only when "CFG_CYCLIC" is set to "Y".
Value Range	1–1440
Default Value	30

CFG_RESYNC_FROM_SIP

Value Format	STRING
Description	Specifies the value of the "Event" header sent from the SIP server to the unit so that the unit can access the configuration files on the provisioning server.
Value Range	Max. 15 characters
Default Value	check-sync
Web User Interface Reference	Header Value for Resync Event (Page 157)

CFG_RESYNC_ACTION

Value Format	INTEGER
---------------------	---------

Description	Specifies the value of the action after received resync NOTIFY.
Value Range	• 0: Provisioning • 1: TR-069 Inform • 2: Reboot
Default Value	0

CFG_FILE_KEY2

Value Format	STRING
Description	Specifies the encryption key (password) used to decrypt configuration files. Note • If the extension of the configuration file is ".e2c", the configuration file will be decrypted using this key.
Value Range	32 characters Note • If an empty string is set for this parameter, decryption with this value is disabled.
Default Value	Empty string

CFG_FILE_KEY3

Value Format	STRING
Description	Specifies the encryption key (password) used to decrypt configuration files. Note • If the extension of the configuration file is ".e3c", the configuration file will be decrypted using this key.
Value Range	32 characters Note • If an empty string is set for this parameter, decryption with this value is disabled.
Default Value	Empty string

CFG_FILE_KEY_LENGTH

Value Format	INTEGER
Description	Specifies the key lengths in bits used to decrypt configuration files.
Value Range	128, 192, 256

Default Value	192
---------------	-----

CFG_ROOT_CERTIFICATE_PATH

Value Format	STRING
Description	Specifies the URI where the root certificate is stored. Note Changing this setting may require restarting the unit.
Value Range	Max. 384 characters
Default Value	Empty string

CFG_CLIENT_CERT_PATH

Value Format	STRING
Description	Specifies the URI where the client certificate is stored.
Value Range	Max. 384 characters
Default Value	Empty string

CFG_PKEY_PATH

Value Format	STRING
Description	Specifies the URI where the private key is stored.
Value Range	Max. 384 characters
Default Value	Empty string

HTTP_SSL_VERIFY

Value Format	INTEGER
Description	Specifies whether to enable the verification of the root certificate.

Value Range	• 0 (No verification of root certificate) • 1 (Simple verification of root certificate) • 2 (Precise verification of root certificate) Note • If set to "0", the verification of the root certificate is disabled. • If set to "1", the verification of the root certificate is enabled. In this case, the validity of the certificate's date, certificate's chain, and the confirmation of the root certificate will be verified. • If set to "2", precise certificate verification is enabled. In this case, the validity of the server name will be verified in addition to the items verified when "1" is set. • If the unit has not obtained the current time, verification will not be performed irrelevant of this setting. In order to perform verification it is necessary to first set up the NTP server.
Default Value	0

5.3.7 Firmware Update Settings

FIRM_UPGRADE_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to perform firmware updates when the unit detects a newer version of firmware. Note • Local firmware updates from the Web user interface (→ see 4.7.3 Upgrade Firmware) can be performed regardless of this setting. • Firmware updates using TR-069 can be performed regardless of this setting.
Value Range	• Y (Enable firmware updates) • N (Disable firmware updates)
Default Value	Y
Web User Interface Reference	Enable Firmware Update (Page 157)

FIRM_FILE_PATH

Value Format	STRING
Description	Specifies the URL where the firmware file is stored. Note • This setting is available only when "FIRM_UPGRADE_ENABLE" is set to "Y".
Value Range	Max. 384 characters

5.3.8 HTTP Settings

Default Value	Empty string
Web User Interface Reference	Firmware File URL (Page 158)

FIRM_VERSION

Value Format	STRING
Description	Specifies the firmware version of the unit.
Value Range	Max. 32 characters
Default Value	Empty string

5.3.8 HTTP Settings

HTTP_VER

Value Format	INTEGER
Description	Specifies which version of the HTTP protocol to use for HTTP communication.
Value Range	1 (Use HTTP 1.0) 0 (Use HTTP 1.1) Note - For this unit, it is strongly recommended that you specify "1" for this setting. However, if the HTTP server does not function well with HTTP 1.0, try changing the setting "0".
Default Value	1
Web User Interface Reference	HTTP Version (Page 87)

HTTP_USER_AGENT

Value Format	STRING
Description	Specifies the text string to send as the user agent in the header of HTTP requests.
Value Range	Max. 64 characters Note - If "{mac}" is included in this parameter, it will be replaced with the unit's MAC address in lower-case. - If "{MAC}" is included in this parameter, it will be replaced with the unit's MAC address in upper-case. - If "{MODEL}" is included in this parameter, it will be replaced with the unit's model name. - If "{fwver}" is included in this parameter, it will be replaced with the firmware version of the unit.

Default Value	Panasonic_{MODEL}/{fwver} ({mac})
Web User Interface Reference	HTTP User Agent (Page 88)

HTTP_AUTH_ID

Value Format	STRING
Description	Specifies the authentication ID required to access the HTTP server.
Value Range	Max. 128 characters
Default Value	Empty string
Web User Interface Reference	Authentication ID (Page 88)

HTTP_AUTH_PASS

Value Format	STRING
Description	Specifies the authentication password required to access the HTTP server.
Value Range	Max. 128 characters
Default Value	Empty string
Web User Interface Reference	Authentication Password (Page 88)

HTTP_PROXY_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable or disable the HTTP proxy feature.
Value Range	- Y: Enable HTTP proxy connect - N: Disable
Default Value	N
Web User Interface Reference	Enable Proxy (Page 89)

HTTP_PROXY_ADDR

Value Format	STRING
Description	Specifies the IP address or FQDN of the proxy server.
Value Range	Max. 256 characters
Default Value	Empty string
Web User Interface Reference	Proxy Server Address (Page 89)

HTTP_PROXY_PORT

Value Format	INTEGER
Description	Specifies the port of the proxy server.
Value Range	1–65535
Default Value	8080
Web User Interface Reference	Proxy Server Port (Page 89)

HTTP_PROXY_ID

Value Format	STRING
Description	Specifies the user ID for connecting HTTP proxy.
Value Range	Max. 128 characters
Default Value	Empty string

HTTP_PROXY_PASS

Value Format	STRING
Description	Specifies the password for connecting HTTP proxy.
Value Range	Max. 128 characters
Default Value	Empty string

5.3.9 HTTPD/WEB Settings

HTTPD_LISTEN_PORT

Value Format	INTEGER
Description	Specifies the port number of own HTTP server.
Value Range	80, 1024–49151
Default Value	80

HTTPD_PORTOPEN_AUTO

Value Format	BOOLEAN
Description	Specifies whether the unit's Web port is always open.

Value Range	• Y (Web port is always open) • N (Web port is closed [can be opened temporarily through phone user interface programming]) Notice • If you want to set to "Y", please fully recognize the possibility of unauthorized access to the unit through the Web user interface and change this setting at your own risk. In addition, please take full security measures for connecting to an external network and control all passwords for logging in to the Web user interface.
Default Value	N

HTTPD_PORTCLOSE_TM

Value Format	INTEGER
Description	Specifies port close time when keeping the no action.
Value Range	1–1440
Default Value	30

USER_ID

Value Format	STRING
Description	Specifies the account ID used to access the Web user interface with the User account.
Value Range	Max. 16 characters (except !, ", #, \$, %, &, ', (,), *, +, ,, /, :, ;, <, =, >, ?, [,], ^, `, {, , }, ~, \ and space) Note • An empty string is not allowed.
Default Value	user

USER_PASS

Value Format	STRING
Description	Specifies the password to use to authenticate the User account when logging in to the Web user interface.
Value Range	6–64 characters (except !, ", #, \$, %, &, ', (,), *, +, ,, /, :, ;, <, =, >, ?, [,], ^, `, {, , }, ~, \ and space)
Default Value	Empty string (only before a user accesses the Web user interface for the first time)
Web User Interface Reference	New Password (Page 107)

ADMIN_ID

Value Format	STRING
Description	Specifies the account ID used to access the Web user interface with the Admin account.
Value Range	Max. 16 characters (except !, ", #, \$, %, &, ', (,), *, +, ,, /, :, ;, <, =, >, ?, [,], ^, `, {, , }, ~, \ and space) Note An empty string is not allowed.
Default Value	admin

ADMIN_PASS

Value Format	STRING
Description	Specifies the password to use to authenticate the Administrator account when logging in to the Web user interface.
Value Range	6–64 characters (except !, ", #, \$, %, &, ', (,), *, +, ,, /, :, ;, <, =, >, ?, [,], ^, `, {, , }, ~, \ and space)
Default Value	adminpass
Web User Interface Reference	New Password (Page 108)

5.3.10 TR-069 Settings**ACS_URL**

Value Format	STRING
Description	Specifies the URL of the Auto-Configuration Server for using TR-069. Note This parameter must be in the form of a valid HTTP or HTTPS URL, as defined in RFC 3986.
Value Range	Max. 256 characters
Default Value	Empty string

ACS_USER_ID

Value Format	STRING
Description	Specifies the user ID for the Auto-Configuration Server for using TR-069.
Value Range	Max. 256 characters (except ", &, ', :, <, >, and space)

Default Value	Empty string
---------------	--------------

ACS_PASS

Value Format	STRING
Description	Specifies the user password for the Auto-Configuration Server for using TR-069.
Value Range	Max. 256 characters (except ", &, ', :, <, >, and space)
Default Value	Empty string

PERIODIC_INFORM_ENABLE

Value Format	BOOLEAN
Description	Specifies whether or not the CPE (Customer Premises Equipment) must periodically send CPE information to the ACS (Auto-Configuration Server) using the Inform method call.
Value Range	- Y (Enable) - N (Disable)
Default Value	N

PERIODIC_INFORM_INTERVAL

Value Format	INTEGER
Description	Specifies the interval length, in seconds, when the CPE must attempt to connect with the ACS and call the Inform method. Note This setting is available only when "PERIODIC_INFORM_ENABLE" is set to "Y".
Value Range	30–2419200
Default Value	86400

PERIODIC_INFORM_TIME

Value Format	STRING
--------------	--------

Description	Specifies the time (UTC) to determine when the CPE will initiate the periodic Inform method calls. Note - Each Inform call must occur at this reference time plus or minus an integer multiple of the "PERIODIC_INFORM_INTERVAL". This "PERIODIC_INFORM_TIME" parameter is used only to set the "phase" of the periodic Informs. The actual value can be arbitrarily set far into the past or future. For example, if "PERIODIC_INFORM_INTERVAL" is set to 86400 (one day) and if "PERIODIC_INFORM_TIME" is set to midnight on a certain day, then periodic Informs will occur every day at midnight, starting from the set date. - If the time is set to "unknown time", the start time depends on the CPE's settings. However, the "PERIODIC_INFORM_INTERVAL" must still be adhered to. If absolute time is not available to the CPE, its periodic Inform behavior must be the same as if the "PERIODIC_INFORM_TIME" parameter was set to the "unknown time". - Time zones other than UTC are not supported.
Value Range	4–32 characters date and time format
Default Value	0001-01-01T00:00:00Z

CON_REQ_USER_ID

Value Format	STRING
Description	Specifies the user name used to authenticate an ACS making a Connection Request to the CPE.
Value Range	Max. 256 characters
Default Value	Empty string

CON_REQ_PASS

Value Format	STRING
Description	Specifies the password used to authenticate an ACS making a Connection Request to the CPE. Note When the "CON_REQ_USER_ID" parameter is specified, an empty string for this parameter is not allowed.
Value Range	Max. 256 characters
Default Value	Empty string

ANNEX_G_STUN_ENABLE

Value Format	BOOLEAN
Description	Specifies whether or not the CPE can use STUN. This applies only to the use of STUN in association with the ACS to allow UDP Connection Requests.
Value Range	• Y (Enable) • N (Disable)
Default Value	N

ANNEX_G_STUN_SERV_ADDR

Value Format	STRING
Description	Specifies the host name or IP address of the STUN server for the CPE to send Binding Requests. Note • This setting is available only when "ANNEX_G_STUN_ENABLE" is set to "Y". • If the value for this setting is an empty string and "ANNEX_G_STUN_ENABLE" is set to "Y", the CPE must use the address of the ACS extracted from the host portion of the ACS URL.
Value Range	Max. 256 characters
Default Value	Empty string

ANNEX_G_STUN_SERV_PORT

Value Format	INTEGER
Description	Specifies the port number of the STUN server for the CPE to send Binding Requests. Note • This setting is available only when "ANNEX_G_STUN_ENABLE" is set to "Y".
Value Range	1–65535
Default Value	3478

ANNEX_G_STUN_USER_ID

Value Format	STRING
---------------------	--------

Description	Specifies the STUN user name to be used in Binding Requests (only if message integrity has been requested by the STUN server). Note If the value for this setting is an empty string, the CPE must not send STUN Binding Requests with message integrity.
Value Range	Max. 256 characters (except ", &, ', :, <, >, and space)
Default Value	Empty string

ANNEX_G_STUN_PASS

Value Format	STRING
Description	Specifies the STUN password to be used in computing the MESSAGE-INTEGRITY attribute used in Binding Requests (only if message integrity has been requested by the STUN server). When read, this parameter returns an empty string, regardless of the actual value.
Value Range	Max. 256 characters (except ", &, ', :, <, >, and space)
Default Value	Empty string

ANNEX_G_STUN_MAX_KEEP_ALIVE

Value Format	INTEGER
Description	Specifies the maximum period, in seconds, that STUN Binding Requests must be sent by the CPE for the purpose of maintaining the binding in the Gateway. This applies specifically to Binding Requests sent from the UDP Connection Request address and port. Note This setting is available only when "ANNEX_G_STUN_ENABLE" is set to "Y".
Value Range	1–3600
Default Value	300

ANNEX_G_STUN_MIN_KEEP_ALIVE

Value Format	INTEGER
---------------------	---------

Description	Specifies the minimum period, in seconds, that STUN Binding Requests can be sent by the CPE for the purpose of maintaining the binding in the Gateway. This limit applies only to Binding Requests sent from the UDP Connection Request address and port, and only those that do not contain the BINDING-CHANGE attribute. Note This setting is available only when "ANNEX_G_STUN_ENABLE" is set to "Y".
Value Range	1–3600
Default Value	30

UDP_CON_REQ_ADDR_NOTIFY_LIMIT

Value Format	INTEGER
Description	Specifies the minimum time, in seconds, between Active Notifications resulting from changes to the "UDPConnectionRequestAddress" (if Active Notification is enabled).
Value Range	0–65535
Default Value	0

5.3.11 XML Settings

XMLAPP_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable the XML application feature.
Value Range	Y: Enable XML application N: Disable
Default Value	N
Web User Interface Reference	Enable XMLAPP (Page 100)

XMLAPP_USERID

Value Format	STRING
Description	Specifies the authentication ID required to access the XML application server.
Value Range	Max. 128 characters
Default Value	Empty string
Web User Interface Reference	User ID (Page 100)

XMLAPP_USERPASS

Value Format	STRING
Description	Specifies the authentication password used to access the XML application server.
Value Range	Max. 128 characters
Default Value	Empty string
Web User Interface Reference	Password (Page 100)

XMLAPP_LDAP_URL

Value Format	STRING
Description	Specifies the URL that is accessed when the phonebook is accessed, to check for XML data.
Value Range	Max. 256 characters
Default Value	Empty string
Web User Interface Reference	LDAP URL (Page 101)

XMLAPP_LDAP_USERID

Value Format	STRING
Description	Specifies the authentication ID required to access the LDAP server.
Value Range	Max. 128 characters
Default Value	Empty string
Web User Interface Reference	User ID (Page 101)

XMLAPP_LDAP_USERPASS

Value Format	STRING
Description	Specifies the authentication password used to access the LDAP server.
Value Range	Max. 128 characters
Default Value	Empty string
Web User Interface Reference	Password (Page 101)

XMLAPP_NPB_SEARCH_TIMER

Value Format	INTEGER
Description	Specifies the time which is for searching XML phonebook.

Value Range	1–65535
Default Value	30

XMLAPP_LDAP_MAXRECORD

Value Format	INTEGER
Description	Specifies the maximum number of search results to be returned by the LDAP server.
Value Range	20–500
Default Value	20
Web User Interface Reference	Max Hits (Page 101)

XML_HTTPD_PORT

Value Format	INTEGER
Description	Specifies the local HTTP port for XML application.
Value Range	1–65535
Default Value	6666
Web User Interface Reference	Local XML Port (Page 101)

XML_ERROR_INFORMATION

Value Format	BOOLEAN
Description	Specifies whether to display an error information when an error occurs.
Value Range	• Y: Error information is displayed • N: Error information is not displayed
Default Value	Y

5.3.12 XSI Settings

XSI_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable or disable the Xsi service.
Value Range	• Y: Enable Xsi service • N: Disable
Default Value	N

Web User Interface Reference	Enable Xtended Service (Page 96)
-------------------------------------	----------------------------------

XSI_SERVER

Value Format	STRING
Description	Specifies the IP address or FQDN of the Xsi server.
Value Range	Max. 256 characters
Default Value	Empty string
Web User Interface Reference	Server Address (Page 96)

XSI_SERVER_TYPE

Value Format	STRING
Description	Specifies the type of the Xsi server.
Value Range	• HTTP • HTTPS
Default Value	HTTP
Web User Interface Reference	Protocol (Page 97)

XSI_SERVER_PORT

Value Format	INTEGER
Description	Specifies the port of the Xsi server.
Value Range	1–65535
Default Value	80
Web User Interface Reference	Port (Page 97)

XSI_USERID_n

Parameter Name Example	XSI_USERID_1, XSI_USERID_2, ..., XSI_USERID_8
Value Format	STRING
Description	Specifies the authentication ID required to access the Xsi server.
Value Range	Max. 128 characters
Default Value	Empty string
Web User Interface Reference	User ID (Line 1–8) (Page 97)

XSI_PASSWORD_n

Parameter Name Example	XSI_PASSWORD_1, XSI_PASSWORD_2, ..., XSI_PASSWORD_8
Value Format	STRING
Description	Specifies the authentication password required to access the Xsi server.
Value Range	Max. 128 characters
Default Value	Empty string
Web User Interface Reference	Password (Line 1–8) (Page 97)

XSI_PHONEBOOK_ENABLE_n

Parameter Name Example	XSI_PHONEBOOK_ENABLE_1, XSI_PHONEBOOK_ENABLE_2, ..., XSI_PHONEBOOK_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to enable or disable the Xsi phonebook service.
Value Range	- Y: Enable Xsi phonebook - N: Disable
Default Value	N
Web User Interface Reference	Enable Phonebook (Line 1–8) (Page 97)

XSI_PHONEBOOK_TYPE_n

Parameter Name Example	XSI_PHONEBOOK_TYPE_1, XSI_PHONEBOOK_TYPE_2, ..., XSI_PHONEBOOK_TYPE_8
Value Format	INTEGER
Description	Specifies the type of Xsi phonebook.
Value Range	1: Group 2: GroupCommon 3: Enterprise 4: EnterpriseCommon 5: Personal
Default Value	1
Web User Interface Reference	Phonebook Type (Line 1–8) (Page 98)

XSI_CALLLOG_ENABLE_n

Parameter Name Example	XSI_CALLLOG_ENABLE_1, XSI_CALLLOG_ENABLE_2, ..., XSI_CALLLOG_ENABLE_8
Value Format	BOOLEAN

5.3.13 XMPP (UC-ONE) Settings

Description	Specifies whether to enable or disable the Xsi call log service.
Value Range	- Y: Enable Xsi call log - N: Disable
Default Value	N
Web User Interface Reference	Enable Call Log (Line 1–8) (Page 98)

5.3.13 XMPP (UC-ONE) Settings

UC_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable the UC service.
Value Range	- Y: Enable UC service - N: Disable
Default Value	N
Web User Interface Reference	Enable UC (Page 99)

UC_USERID_HSy

Parameter Name Example	UC_USERID_HS1, UC_USERID_HS2, ..., UC_USERID_HS8
Value Format	STRING
Description	Specifies the authentication ID required to access the UC server.
Value Range	Max. 128 characters
Default Value	Empty string
Web User Interface Reference	Handset 1–8 (User ID) (Page 99)

UC_PASSWORD_HSy

Parameter Name Example	UC_PASSWORD_HS1, UC_PASSWORD_HS2, ..., UC_PASSWORD_HS8
Value Format	STRING
Description	Specifies the authentication password required to access the UC server.
Value Range	Max. 128 characters
Default Value	Empty string
Web User Interface Reference	Handset 1–8 (Password) (Page 99)

XMPP_SERVER

Value Format	STRING
Description	Specifies the IP address or FQDN of the XMPP server.
Value Range	Max. 256 characters
Default Value	Empty string
Web User Interface Reference	Server Address (Page 99)

XMPP_PORT

Value Format	INTEGER
Description	Specifies the local XMPP port.
Value Range	1–65535
Default Value	5222
Web User Interface Reference	Local XMPP Port (Page 99)

XMPP_TLS_VERIFY

Value Format	INTEGER
Description	Specifies whether to enable the verification of the root certificate.
Value Range	0: No verification 1: Simple verification 2: Precise verification
Default Value	0

XMPP_ROOT_CERT_PATH

Value Format	STRING
Description	Specifies the URI where the root certificate is stored.
Value Range	Max. 384 characters
Default Value	Empty string

XMPP_CLIENT_CERT_PATH

Value Format	STRING
Description	Specifies the URI where the client certificate is stored.
Value Range	Max. 384 characters
Default Value	Empty string

XMPP_PKEY_PATH

Value Format	STRING
Description	Specifies the URI where the private key is stored.
Value Range	Max. 384 characters
Default Value	Empty string

5.3.14 LDAP Settings**LDAP_ENABLE**

Value Format	BOOLEAN
Description	Specifies whether to enable or disable the LDAP service.
Value Range	• Y: Enable LDAP service • N: Disable
Default Value	N
Web User Interface Reference	Enable LDAP (Page 93)

LDAP_DNSSRV_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to request the DNS server to translate domain names into IP addresses using the SRV record.
Value Range	• Y: Enable DNS SRV lookup • N: Disable
Default Value	N
Web User Interface Reference	Enable DNS SRV lookup (Page 95)

LDAP_SERVER

Value Format	STRING
Description	Specifies the server host of LDAP.
Value Range	Max. 256 characters
Default Value	Empty string
Web User Interface Reference	Server Address (Page 93)

LDAP_SERVER_PORT

Value Format	INTEGER
Description	Specifies the port of the LDAP server.
Value Range	1–65535
Default Value	389
Web User Interface Reference	Port (Page 93)

LDAP_MAXRECORD

Value Format	INTEGER
Description	Specifies the maximum number of search results to be returned by the LDAP server.
Value Range	20–500
Default Value	20
Web User Interface Reference	Max Hits (Page 94)

LDAP_NUMB_SEARCH_TIMER

Value Format	INTEGER
Description	Specifies the timer for searching telephone number.
Value Range	1–65535
Default Value	30

LDAP_NAME_SEARCH_TIMER

Value Format	INTEGER
Description	Specifies the timer for searching name.
Value Range	1–65535
Default Value	5

LDAP_USERID

Value Format	STRING
Description	Specifies the authentication ID required to access the LDAP server.
Value Range	Max. 128 characters
Default Value	Empty string

Web User Interface Reference	User ID (Page 94)
-------------------------------------	-------------------

LDAP_PASSWORD

Value Format	STRING
Description	Specifies the authentication password required to access the LDAP server.
Value Range	Max. 128 characters
Default Value	Empty string
Web User Interface Reference	Password (Page 94)

LDAP_NAME_FILTER

Value Format	STRING
Description	Specifies the name filter which is the search criteria for name look up.
Value Range	Max. 256 characters
Default Value	((cn=*)(sn=*))
Web User Interface Reference	Name Filter (Page 94)

LDAP_NUMB_FILTER

Value Format	STRING
Description	Specifies the number filter which is the search criteria for number look up.
Value Range	Max. 256 characters
Default Value	((telephoneNumber=*)(mobile=*)(homePhone=*))
Web User Interface Reference	Number Filter (Page 94)

LDAP_NAME_ATTRIBUTE

Value Format	STRING
Description	Specifies the name attributes of each record which are to be returned in the LDAP search result.
Value Range	Max. 256 characters
Default Value	cn,sn
Web User Interface Reference	Name Attributes (Page 95)

LDAP_NUMB_ATTRIBUTE

Value Format	STRING
Description	Specifies the number attributes of each record which are to be returned in the LDAP search result.
Value Range	Max. 256 characters
Default Value	telephoneNumber,mobile,homePhone
Web User Interface Reference	Number Attributes (Page 95)

LDAP_BASEDN

Value Format	STRING
Description	Specifies the entry information on the screen.
Value Range	Max. 256 characters
Default Value	Empty string
Web User Interface Reference	Display Name (Page 95)

LDAP_SSL_VERIFY

Value Format	INTEGER
Description	Specifies whether to enable the verification of the root certificate.
Value Range	0: No verification 1: Simple verification 2: Precise verification
Default Value	0

LDAP_ROOT_CERT_PATH

Value Format	STRING
Description	Specifies the URI where the root certificate is stored.
Value Range	Max. 384 characters
Default Value	Empty string

LDAP_CLIENT_CERT_PATH

Value Format	STRING
Description	Specifies the URI where the client certificate is stored.
Value Range	Max. 384 characters

Default Value	Empty string
---------------	--------------

LDAP_PKEY_PATH

Value Format	STRING
Description	Specifies the URI where the private key is stored.
Value Range	Max. 384 characters
Default Value	Empty string

5.3.15 SNMP Settings

Note

- Changing SNMP settings may require restarting the unit.

SNMP_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable SNMP feature.
Value Range	• Y: Enable SNMP • N: Disable
Default Value	N

SNMP_TRUST_IP

Value Format	STRING
Description	Specifies the IP address or FQDN of the trusted SNMP server.
Value Range	Max. 256 characters
Default Value	Empty string

SNMP_TRUST_PORT

Value Format	INTEGER
Description	Specifies the port of the trusted SNMP server.
Value Range	1–65535
Default Value	161

SNMP_RO_COMMUNITY_STRING

Value Format	STRING
Description	Specifies the community name for read-only.
Value Range	Max. 32 characters
Default Value	Empty string

SNMP_SECURITY_TYPE

Value Format	INTEGER
Description	Specifies the security type of SNMPv3.
Value Range	0: noAuthNoPriv 1: AuthNoPriv 2: AuthPriv
Default Value	0

SNMP_SECURITY_USER

Value Format	STRING
Description	Specifies the security user ID for authentication and encryption of SNMPv3.
Value Range	Max. 32 characters
Default Value	Empty string

SNMP_AUTH_TYPE

Value Format	INTEGER
Description	Specifies the authentication type of SNMPv3.
Value Range	0: MD5 1: SHA
Default Value	0

SNMP_AUTH_PASSWORD

Value Format	STRING
Description	Specifies the authentication password of SNMPv3.
Value Range	0, 8–64 characters
Default Value	Empty string

SNMP_ENCRYPT_TYPE

Value Format	INTEGER
Description	Specifies the encryption type of SNMPv3.
Value Range	0: DES 1: AES
Default Value	0

SNMP_ENCRYPT_PASSWORD

Value Format	STRING
Description	Specifies the encryption password of SNMPv3.
Value Range	0, 8–64 characters
Default Value	Empty string

5.3.16 Multicast Paging Settings**MPAGE_ADDRm**

Parameter Name Example	MPAGE_ADDR1, MPAGE_ADDR2, ..., MPAGE_ADDR5
Value Format	IPADDR
Description	Specifies the address for multi-cast paging for each channel group. (m=1–5, the channel group) {Priority: 5 > 4 > 3, 2, 1 (depending on the configuration)}
Value Range	224.0.0.0–239.255.255.255
Default Value	Empty string
Web User Interface Reference	IPv4 Address (Group 1–5) (Page 91)

MPAGE_IPV6_ADDRm

Parameter Name Example	MPAGE_IPV6_ADDR1, MPAGE_IPV6_ADDR2, ..., MPAGE_IPV6_ADDR5
Value Format	IPADDR-V6
Description	Specifies the IPv6 address for multi-cast paging for each channel group. (m=1–5, the channel group) {Priority: 5 > 4 > 3, 2, 1 (depending on the configuration)}
Value Range	FF00::/8
Default Value	Empty string
Web User Interface Reference	IPv6 Address (Group 1–5) (Page 91)

MPAGE_PORT_m

Parameter Name Example	MPAGE_PORT1, MPAGE_PORT2, ..., MPAGE_PORT5
Value Format	INTEGER
Description	Specifies the port number for multi-cast paging for each channel group. (m=1–5, the channel group)
Value Range	0–65535 (0: not used)
Default Value	0
Web User Interface Reference	Port (Group 1–5) (Page 92)

MPAGE_PRIORITY_m

Parameter Name Example	MPAGE_PRIORITY1, MPAGE_PRIORITY2, MPAGE_PRIORITY3
Value Format	INTEGER
Description	Select the priority of the low priority channel group. (m=1–3) The priority of multi-cast paging group 1-3 is lower than the talking. Priority 4 is higher than priority 5.
Value Range	4,5 (Talk > 4 > 5)
Default Value	5
Web User Interface Reference	Priority (Group 1–3) (Page 92)

MPAGE_LABEL_m

Parameter Name Example	MPAGE_LABEL1, MPAGE_LABEL2, ..., MPAGE_LABEL5
Value Format	STRING
Description	Specifies a label for each channel group. (m=1–5, the channel group)
Value Range	Max. 24 characters
Default Value	Empty string
Web User Interface Reference	Label (Group 1–5) (Page 92)

MPAGE_SEND_ENABLE_m

Parameter Name Example	MPAGE_SEND_ENABLE1, MPAGE_SEND_ENABLE2, ..., MPAGE_SEND_ENABLE5
Value Format	BOOLEAN
Description	Specifies the sending multi-cast paging. (m=1–5, the channel group)

5.3.16 Multicast Paging Settings

Value Range	• Y: Enable • N: Disable
Default Value	N
Web User Interface Reference	Enable Transmission (Group 1–5) (Page 92)

MPAGE_CODEC

Value Format	INTEGER
Description	Specifies the codec for multi-cast paging.
Value Range	0 : "G722" 1 : "PCMA" 2 : – 3 : "G729A" 4 : "PCMU"
Default Value	0

MPAGE_SP_VOL_EMERGENCY

Value Format	INTEGER
Description	Specifies the speaker level for new received multi-cast paging (emergency channel).
Value Range	0–6 0: No control
Default Value	0

MPAGE_SP_VOL_PRIORITY

Value Format	INTEGER
Description	Specifies the speaker level for new received multi-cast paging (priority channel).
Value Range	0–6 0: No control
Default Value	0

MPAGE_DND_ENABLE_HSy

Parameter Name Example	MPAGE_DND_ENABLE_HS1, MPAGE_DND_ENABLE_HS2, ..., MPAGE_DND_ENABLE_HS8
Value Format	BOOLEAN
Description	Specifies the DND setting (on/off) for multi-cast paging.

Value Range	• Y: Enable DND for Multi-cast paging • N: Disable DND for Multi-cast paging
Default Value	N

MPAGE_FUNCKEY_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable or disable the multicast paging key in function menu.
Value Range	• Y: Enable • N: Disable
Default Value	N

5.3.17 NTP Settings

NTP_ADDR

Value Format	STRING
Description	Specifies the IP address or FQDN of NTP server.
Value Range	Max. 256 characters
Default Value	Empty string
Web User Interface Reference	Server Address (Page 109)

TIME_SYNC_INTVL

Value Format	INTEGER
Description	Specifies the interval, in seconds, to resynchronize after having detected no reply from the NTP server.
Value Range	10–86400
Default Value	60

TIME_QUERY_INTVL

Value Format	INTEGER
Description	Specifies the interval, in seconds, between synchronizations with the NTP server.
Value Range	10–86400
Default Value	43200

5.3.18 Time Settings

LOCAL_TIME_ZONE_POSIX

Value Format	STRING
Description	Specifies a IEEE 1003.1 (POSIX)-compliant local time zone definition (e.g., "EST+5 EDT,M4.1.0/2,M10.5.0/2"). Note - If this parameter is specified, the following parameters are disabled, and operation will be based on this parameter. – <code>TIME_ZONE</code> – <code>DST_ENABLE</code> – <code>DST_OFFSET</code> – <code>DST_START_MONTH</code> – <code>DST_START_ORDINAL_DAY</code> – <code>DST_START_DAY_OF_WEEK</code> – <code>DST_START_TIME</code> – <code>DST_STOP_MONTH</code> – <code>DST_STOP_ORDINAL_DAY</code> – <code>DST_STOP_DAY_OF_WEEK</code> – <code>DST_STOP_TIME</code>
Value Range	Max. 70 characters
Default Value	Empty string

TIME_ZONE

Value Format	INTEGER
Description	Specifies the offset of local standard time from UTC (GMT), in minutes.

Value Range	-720–780 Note - Only the following values are available: -720 (GMT -12:00), -660 (GMT -11:00), -600 (GMT -10:00), -540 (GMT -09:00), -480 (GMT -08:00), -420 (GMT -07:00), -360 (GMT -06:00), -300 (GMT -05:00), -240 (GMT -04:00), -210 (GMT -03:30), -180 (GMT -03:00), -120 (GMT -02:00), -60 (GMT -01:00), 0 (GMT), 60 (GMT +01:00), 120 (GMT +02:00), 180 (GMT +03:00), 210 (GMT +03:30), 240 (GMT +04:00), 270 (GMT +04:30), 300 (GMT +05:00), 330 (GMT +05:30), 345 (GMT +05:45), 360 (GMT +06:00), 390 (GMT +06:30), 420 (GMT +07:00), 480 (GMT +08:00), 540 (GMT +09:00), 570 (GMT +09:30), 600 (GMT +10:00), 660 (GMT +11:00), 720 (GMT +12:00), 780 (GMT +13:00) - If your location is west of Greenwich (0 [GMT]), the value should be minus. For example, the value for New York City, U.S.A. is "-300" (Eastern Standard Time being 5 hours behind GMT). - This parameter is disabled when the "LOCAL_TIME_ZONE_POSIX" parameter is specified.
Default Value	0
Web User Interface Reference	Time Zone (Page 110)

DST_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable DST (Summer Time). Note This parameter is disabled when the "LOCAL_TIME_ZONE_POSIX" parameter is specified.
Value Range	Y (Enable DST [Summer Time]) N (Disable DST [Summer Time])
Default Value	N
Web User Interface Reference	Enable DST (Enable Summer Time) (Page 110)

DST_OFFSET

Value Format	INTEGER
Description	Specifies the amount of time, in minutes, to change the time when "DST_ENABLE" is set to "Y". Note This parameter is disabled when the "LOCAL_TIME_ZONE_POSIX" parameter is specified.

Value Range	0–720 Note This parameter is usually set to "60".
Default Value	60
Web User Interface Reference	DST Offset (Summer Time Offset) (Page 110)

DST_START_MONTH

Value Format	INTEGER
Description	Specifies the month in which DST (Summer Time) starts. Note This parameter is disabled when the "LOCAL_TIME_ZONE_POSIX" parameter is specified.
Value Range	1–12
Default Value	3
Web User Interface Reference	Month (Page 110)

DST_START_ORDINAL_DAY

Value Format	INTEGER
Description	Specifies the number of the week on which DST (Summer Time) starts. The actual start day is specified in "DST_START_DAY_OF_WEEK". For example, to specify the second Sunday, specify "2" in this parameter, and "0" in the next parameter. Note This parameter is disabled when the "LOCAL_TIME_ZONE_POSIX" parameter is specified.
Value Range	1–5 – 1: the first week of the month – 2: the second week of the month – 3: the third week of the month – 4: the fourth week of the month – 5: the last week of the month
Default Value	2
Web User Interface Reference	Day of Week (Page 111)

DST_START_DAY_OF_WEEK

Value Format	INTEGER
---------------------	---------

Description	Specifies the day of the week on which DST (Summer Time) starts. Note This parameter is disabled when the "LOCAL_TIME_ZONE_POSIX" parameter is specified.
Value Range	0–6 0: Sunday 1: Monday 2: Tuesday 3: Wednesday 4: Thursday 5: Friday 6: Saturday
Default Value	0
Web User Interface Reference	Day of Week (Page 111)

DST_START_TIME

Value Format	INTEGER
Description	Specifies the start time of DST (Summer Time) in minutes after 12:00 AM. Note This parameter is disabled when the "LOCAL_TIME_ZONE_POSIX" parameter is specified.
Value Range	0–1439
Default Value	120
Web User Interface Reference	Time (Page 112)

DST_STOP_MONTH

Value Format	INTEGER
Description	Specifies the month in which DST (Summer Time) ends. Note This parameter is disabled when the "LOCAL_TIME_ZONE_POSIX" parameter is specified.
Value Range	1–12
Default Value	10
Web User Interface Reference	Month (Page 112)

DST_STOP_ORDINAL_DAY

Value Format	INTEGER
Description	Specifies the number of the week on which DST (Summer Time) ends. The actual end day is specified in "DST_STOP_DAY_OF_WEEK". For example, to specify the second Sunday, specify "2" in this parameter, and "0" in the next parameter. Note This parameter is disabled when the "LOCAL_TIME_ZONE_POSIX" parameter is specified.
Value Range	1–5 1: the first week of the month 2: the second week of the month 3: the third week of the month 4: the fourth week of the month 5: the last week of the month
Default Value	2
Web User Interface Reference	Day of Week (Page 112)

DST_STOP_DAY_OF_WEEK

Value Format	INTEGER
Description	Specifies the day of the week on which DST (Summer Time) ends. Note This parameter is disabled when the "LOCAL_TIME_ZONE_POSIX" parameter is specified.
Value Range	0–6 0: Sunday 1: Monday 2: Tuesday 3: Wednesday 4: Thursday 5: Friday 6: Saturday
Default Value	0
Web User Interface Reference	Day of Week (Page 112)

DST_STOP_TIME

Value Format	INTEGER
---------------------	---------

Description	Specifies the end time of DST (Summer Time) in minutes after 12:00 AM. Note This parameter is disabled when the "LOCAL_TIME_ZONE_POSIX" parameter is specified.
Value Range	0–1439
Default Value	120
Web User Interface Reference	Time (Page 113)

5.3.19 Network Phonebook (Common)

ONLY_NPB_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to be available the handset phonebook when the network phonebook is enabled.
Value Range	Y: Not use handset phonebook N: Use handset phonebook
Default Value	N

NETWORK_SEARCH_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to perform the phonebook search at the time of the receiving the incoming or the searching the received log.
Value Range	Y: Enable phonebook search N: Disable
Default Value	N

5.3.20 Language Settings

AVAILABLE_LANGUAGE_HS

Value Format	STRING
Description	Specifies the selectable language on the handset.
Value Range	en, es, fr, de, it, da, nl, sv, fi, el, hu, pt, pl, sk, cs, sh, ru, uk, tr, no, ro, ct, kk, me → see 4.4.2.1 Selectable Language
Web User Interface Reference	Handset (Page 103)

DEFAULT_LANGUAGE_HSy

Parameter Name Example	DEFAULT_LANGUAGE_HS1, DEFAULT_LANGUAGE_HS2, ..., DEFAULT_LANGUAGE_HS8
Value Format	STRING
Description	Specifies the default language on the handset.
Value Range	en, es, fr, de, it, da, nl, sv, fi, el, hu, pt, pl, sk, cs, sh, ru, uk, tr, no, ro, ct, kk, me → see 4.4.2.1 Selectable Language
Default Value	en
Web User Interface Reference	Language (Page 114)

HS_LANGUAGE_PATHx

Parameter Name Example	HS_LANGUAGE_PATH1, HS_LANGUAGE_PATH2, ..., HS_LANGUAGE_PATH10
Value Format	STRING
Description	Specifies the URI of the language file. x=1–10
Value Range	Max. 384 characters
Default Value	Empty string

HS_LANGUAGE_VERx

Parameter Name Example	HS_LANGUAGE_VER1, HS_LANGUAGE_VER2, ..., HS_LANGUAGE_VER10
Value Format	STRING
Description	Specifies the version of the language file. x=1–10
Value Range	"00.000.000"–"15.999.999"
Default Value	Empty string

AVAILABLE_LANGUAGE_WEB

Value Format	STRING
Description	Specifies the selectable language on the Web.
Value Range	en, es, fr, de, it, nl, el, hu, pt, pl, sk, cs, sh, ru, uk, tr, ro, ct, kk, me → see 4.4.2.1 Selectable Language
Web User Interface Reference	Web (Page 104)

WEB_LANGUAGE

Value Format	STRING
Description	Specifies the default language on the handset.
Value Range	en, es, fr, de, it, nl, el, hu, pt, pl, sk, cs, sh, ru, uk, tr, ro, ct, kk, me → see 4.4.2.1 Selectable Language
Default Value	en
Web User Interface Reference	Web Language (Page 105)

WEB_LANGUAGE_PATHx

Parameter Name Example	WEB_LANGUAGE_PATH1, WEB_LANGUAGE_PATH2, ..., WEB_LANGUAGE_PATH10
Value Format	STRING
Description	Specifies the URI of the language file. x=1–10
Value Range	Max. 384 characters
Default Value	Empty string

WEB_LANGUAGE_VERx

Parameter Name Example	WEB_LANGUAGE_VER1, WEB_LANGUAGE_VER2, ..., WEB_LANGUAGE_VER10
Value Format	STRING
Description	Specifies the version of the language file. x=1–10
Value Range	"00.000.000"–"15.999.999"
Default Value	Empty string

5.3.21 NAT Settings

STUN_SERV_ADDR

Value Format	STRING
Description	Specifies the IP address or FQDN of the primary STUN server.
Value Range	Max. 256 characters
Default Value	Empty string
Web User Interface Reference	Server Address (Page 90)

STUN_SERV_PORT

Value Format	INTEGER
Description	Specifies the port of the primary STUN server.
Value Range	1–65535
Default Value	3478
Web User Interface Reference	Port (Page 90)

STUN_2NDSERV_ADDR

Value Format	STRING
Description	Specifies the IP address or FQDN of the secondary STUN server.
Value Range	Max. 256 characters
Default Value	Empty string

STUN_2NDSERV_PORT

Value Format	INTEGER
Description	Specifies the port number of the secondary STUN server.
Value Range	1–65535
Default Value	3478

STUN_INTVL

Value Format	INTEGER
Description	Specifies the interval of the sending binding request.
Value Range	60–86400
Default Value	300
Web User Interface Reference	Binding Interval (Page 90)

SIP_ADD_RPORT

Value Format	BOOLEAN
Description	Specifies whether to add the 'rport' parameter to the top Via header field value of requests generated.
Value Range	- Y: Enable Rport - N: Disable

Default Value	N
Web User Interface Reference	Enable Rport (RFC 3581) (Page 119)

PORT_PUNCH_INTVL

Value Format	INTEGER
Description	Specifies the interval, in seconds, between transmissions of the Keep Alive packet in order to maintain the NAT binding information for SIP packet.
Value Range	0, 10–300 0: Disable
Default Value	0
Web User Interface Reference	Enable Port Punching for SIP (Page 119)

RTP_PORT_PUNCH_INTVL

Value Format	INTEGER
Description	Specifies the interval, in seconds, between transmissions of the Keep Alive packet in order to maintain the NAT binding information for RTP packet.
Value Range	0, 10–300 0: Disable
Default Value	0
Web User Interface Reference	Enable Port Punching for RTP (Page 119)

5.3.22 SIP Settings

SIP_USER_AGENT

Value Format	STRING
Description	Specifies the text string to send as the user agent in the headers of SIP messages.
Value Range	Max. 64 characters Note - If "{mac}" is included in this parameter, it will be replaced with the unit's MAC address in lower-case. - If "{MAC}" is included in this parameter, it will be replaced with the unit's MAC address in upper-case. - If "{MODEL}" is included in this parameter, it will be replaced with the unit's model name. - If "{fwver}" is included in this parameter, it will be replaced with the firmware version of the unit.

Default Value	Panasonic_{MODEL}/{fwver} ({mac})
Web User Interface Reference	User Agent (Page 118)

PHONE_NUMBER_n

Parameter Name Example	PHONE_NUMBER_1, PHONE_NUMBER_2, ..., PHONE_NUMBER_8
Value Format	STRING
Description	Specifies the phone number to use as the user ID required for registration to the SIP registrar server. Note When registering using a user ID that is not a phone number, you should use the "SIP_URI_n" setting.
Value Range	Max. 32 characters
Default Value	Empty string
Web User Interface Reference	Phone Number (Page 120)

SIP_URI_n

Parameter Name Example	SIP_URI_1, SIP_URI_2, ..., SIP_URI_8
Value Format	STRING
Description	Specifies the unique ID used by the SIP registrar server, which consists of "sip:", a user part, the "@" symbol, and a host part, for example, "sip:user@example.com", "2405551111_1". Note - When registering using a user ID that is not a phone number, you should use this setting. - In a SIP URI, the user part ("user" in the example above) can contain up to 63 characters, and the host part ("example.com" in the example above) can contain up to 127 characters.
Value Range	Max. 384 characters
Default Value	Empty string
Web User Interface Reference	SIP URI (Page 125)

SIP_RGSTR_ADDR_n

Parameter Name Example	SIP_RGSTR_ADDR_1, SIP_RGSTR_ADDR_2, ..., SIP_RGSTR_ADDR_8
Value Format	STRING
Description	Specifies the IP address or FQDN of the SIP registrar server.

Value Range	Max. 256 characters
Default Value	Empty string
Web User Interface Reference	Registrar Server Address (Page 121)

SIP_RGSTR_PORT_n

Parameter Name Example	SIP_RGSTR_PORT_1, SIP_RGSTR_PORT_2, ..., SIP_RGSTR_PORT_8
Value Format	INTEGER
Description	Specifies the port number to use for communication with the SIP registrar server.
Value Range	1–65535
Default Value	5060
Web User Interface Reference	Registrar Server Port (Page 121)

SIP_PRXY_ADDR_n

Parameter Name Example	SIP_PRXY_ADDR_1, SIP_PRXY_ADDR_2, ..., SIP_PRXY_ADDR_8
Value Format	STRING
Description	Specifies the IP address or FQDN of the SIP proxy server.
Value Range	Max. 256 characters
Default Value	Empty string
Web User Interface Reference	Proxy Server Address (Page 121)

SIP_PRXY_PORT_n

Parameter Name Example	SIP_PRXY_PORT_1, SIP_PRXY_PORT_2, ..., SIP_PRXY_PORT_8
Value Format	INTEGER
Description	Specifies the port number to use for communication with the SIP proxy server.
Value Range	1–65535
Default Value	5060
Web User Interface Reference	Proxy Server Port (Page 121)

SIP_PRSNC_ADDR_n

Parameter Name Example	SIP_PRSNC_ADDR_1, SIP_PRSNC_ADDR_2, ..., SIP_PRSNC_ADDR_8
-------------------------------	---

Value Format	STRING
Description	Specifies the IP address or FQDN of the SIP presence server.
Value Range	Max. 256 characters
Default Value	Empty string
Web User Interface Reference	Presence Server Address (Page 121)

SIP_PRSNC_PORT_n

Parameter Name Example	SIP_PRSNC_PORT_1, SIP_PRSNC_PORT_2, ..., SIP_PRSNC_PORT_8
Value Format	INTEGER
Description	Specifies the port number to use for communication with the SIP presence server.
Value Range	1–65535
Default Value	5060
Web User Interface Reference	Presence Server Port (Page 122)

SIP_OUTPROXY_ADDR_n

Parameter Name Example	SIP_OUTPROXY_ADDR_1, SIP_OUTPROXY_ADDR_2, ..., SIP_OUTPROXY_ADDR_8
Value Format	STRING
Description	Specifies the IP address or FQDN of the SIP outbound proxy server.
Value Range	Max. 256 characters
Default Value	Empty string
Web User Interface Reference	Outbound Proxy Server Address (Page 122)

SIP_OUTPROXY_PORT_n

Parameter Name Example	SIP_OUTPROXY_PORT_1, SIP_OUTPROXY_PORT_2, ..., SIP_OUTPROXY_PORT_8
Value Format	INTEGER
Description	Specifies the port number to use for communication with the SIP outbound proxy server.
Value Range	1–65535
Default Value	5060
Web User Interface Reference	Outbound Proxy Server Port (Page 122)

SIP_SVCDOMAIN_n

Parameter Name Example	SIP_SVCDOMAIN_1, SIP_SVCDOMAIN_2, ..., SIP_SVCDOMAIN_8
Value Format	STRING
Description	Specifies the domain name provided by your phone system dealer/service provider. The domain name is the part of the SIP URI that comes after the "@" symbol.
Value Range	Max. 256 characters
Default Value	Empty string
Web User Interface Reference	Service Domain (Page 122)

SIP_AUTHID_n

Parameter Name Example	SIP_AUTHID_1, SIP_AUTHID_2, ..., SIP_AUTHID_8
Value Format	STRING
Description	Specifies the authentication ID required to access the SIP server.
Value Range	Max. 128 characters (except ", &, ', :, <, >, and space)
Default Value	Empty string
Web User Interface Reference	Authentication ID (Page 122)

SIP_PASS_n

Parameter Name Example	SIP_PASS_1, SIP_PASS_2, ..., SIP_PASS_8
Value Format	STRING
Description	Specifies the authentication password used to access the SIP server.
Value Range	Max. 128 characters (except ", &, ', :, <, >, and space)
Default Value	Empty string
Web User Interface Reference	Authentication Password (Page 123)

SIP_SRC_PORT_n

Parameter Name Example	SIP_SRC_PORT_1, SIP_SRC_PORT_2, ..., SIP_SRC_PORT_8
Value Format	INTEGER
Description	Specifies the source port number used by the unit for SIP communication.
Value Range	1024–49151 Note The SIP port number for each line must be unique.

Default Value	SIP_SRC_PORT_1="5060" SIP_SRC_PORT_2="5070" SIP_SRC_PORT_3="5080" SIP_SRC_PORT_4="5090" SIP_SRC_PORT_5="5100" SIP_SRC_PORT_6="5110" SIP_SRC_PORT_7="5120" SIP_SRC_PORT_8="5130"
Web User Interface Reference	Local SIP Port (Page 124)

DSCP_SIP_n

Parameter Name Example	DSCP_SIP_1, DSCP_SIP_2, ..., DSCP_SIP_8
Value Format	INTEGER
Description	Specifies the DSCP level of DiffServ applied to SIP packets.
Value Range	0–63
Default Value	0
Web User Interface Reference	SIP Packet QoS (DSCP) (Page 123)

SIP_DNSSRV_ENA_n

Parameter Name Example	SIP_DNSSRV_ENA_1, SIP_DNSSRV_ENA_2, ..., SIP_DNSSRV_ENA_8
Value Format	BOOLEAN
Description	Specifies whether to request the DNS server to translate domain names into IP addresses using the SRV record.
Value Range	- Y (Enable DNS SRV lookup) - N (Disable DNS SRV lookup) Note - If set to "Y", the unit will perform a DNS SRV lookup for a SIP registrar server, SIP proxy server, SIP outbound proxy server, or SIP presence server. - If set to "N", the unit will not perform a DNS SRV lookup for a SIP registrar server, SIP proxy server, SIP outbound proxy server, or SIP presence server.
Default Value	Y
Web User Interface Reference	Enable DNS SRV lookup (Page 123)

SIP_UDP_SRV_PREFIX_n

Parameter Name Example	SIP_UDP_SRV_PREFIX_1, SIP_UDP_SRV_PREFIX_2, ..., SIP_UDP_SRV_PREFIX_8
Value Format	STRING
Description	Specifies a prefix to add to the domain name when performing a DNS SRV lookup using UDP. Note This setting is available only when "SIP_DNSSRV_ENA_n" is set to "Y".
Value Range	Max. 32 characters
Default Value	_sip._udp.
Web User Interface Reference	SRV lookup Prefix for UDP (Page 123)

SIP_TCP_SRV_PREFIX_n

Parameter Name Example	SIP_TCP_SRV_PREFIX_1, SIP_TCP_SRV_PREFIX_2, ..., SIP_TCP_SRV_PREFIX_8
Value Format	STRING
Description	Specifies a prefix to add to the domain name when performing a DNS SRV lookup using TCP. Note This setting is available only when "SIP_DNSSRV_ENA_n" is set to "Y".
Value Range	Max. 32 characters
Default Value	_sip._tcp.
Web User Interface Reference	SRV lookup Prefix for TCP (Page 124)

REG_EXPIRE_TIME_n

Parameter Name Example	REG_EXPIRE_TIME_1, REG_EXPIRE_TIME_2, ..., REG_EXPIRE_TIME_8
Value Format	INTEGER
Description	Specifies the length of time, in seconds, that the registration remains valid. This value is set in the "Expires" header of the REGISTER request.
Value Range	1–4294967295
Default Value	3600
Web User Interface Reference	REGISTER Expires Timer (Page 126)

REG_INTERVAL_RATE_n

Parameter Name Example	REG_INTERVAL_RATE_1, REG_INTERVAL_RATE_2, ..., REG_INTERVAL_RATE_8
Value Format	INTEGER
Description	Specifies the percentage of the "expires" value after which to refresh registration by sending a new REGISTER message in the same dialog.
Value Range	1–100
Default Value	50

REG_RTX_INTVL_n

Parameter Name Example	REG_RTX_INTVL_1, REG_RTX_INTVL_2, ..., REG_RTX_INTVL_8
Value Format	INTEGER
Description	Specifies the interval, in seconds, between transmissions of the REGISTER request when a registration results in failure (server no reply or error reply).
Value Range	1–86400
Default Value	10

USE_DEL_REG_OPEN_n

Parameter Name Example	USE_DEL_REG_OPEN_1, USE_DEL_REG_OPEN_2, ..., USE_DEL_REG_OPEN_8
Value Format	BOOLEAN
Description	Specifies whether to enable cancelation before registration when, for example, the unit is turned on.
Value Range	- Y: Send un-REGISTER - N: Does not send
Default Value	N

USE_DEL_REG_CLOSE_n

Parameter Name Example	USE_DEL_REG_CLOSE_1, USE_DEL_REG_CLOSE_2, ..., USE_DEL_REG_CLOSE_8
Value Format	BOOLEAN
Description	Specifies whether to enable the cancelation of registration before the SIP function shuts down when, for example, the configuration has changed.

Value Range	• Y: Send un-REGISTER • N: Does not send
Default Value	N

SIP_SESSION_TIME_n

Parameter Name Example	SIP_SESSION_TIME_1, SIP_SESSION_TIME_2, ..., SIP_SESSION_TIME_8
Value Format	INTEGER
Description	Specifies the length of time, in seconds, that the unit waits before terminating SIP sessions when no reply to repeated requests is received. For details, refer to RFC 4028.
Value Range	0, 60–65535 (0: Disable)
Default Value	0
Web User Interface Reference	Enable Session Timer (RFC 4028) (Page 126)

SIP_SESSION_METHOD_n

Parameter Name Example	SIP_SESSION_METHOD_1, SIP_SESSION_METHOD_2, ..., SIP_SESSION_METHOD_8
Value Format	INTEGER
Description	Specifies the refreshing method of SIP sessions.
Value Range	0–2 – 0: reINVITE – 1: UPDATE – 2: AUTO
Default Value	0
Web User Interface Reference	Session Timer Method (Page 126)

SIP_TIMER_T1_n

Parameter Name Example	SIP_TIMER_T1_1, SIP_TIMER_T1_2, ..., SIP_TIMER_T1_8
Value Format	INTEGER
Description	Specifies the default interval, in milliseconds, between transmissions of SIP messages. For details, refer to RFC 3261.
Value Range	• 250 • 500 • 1000 • 2000 • 4000

Default Value	500
Web User Interface Reference	T1 Timer (Page 125)

SIP_TIMER_T2_n

Parameter Name Example	SIP_TIMER_T2_1, SIP_TIMER_T2_2, ..., SIP_TIMER_T2_8
Value Format	INTEGER
Description	Specifies the maximum interval, in seconds, between transmissions of SIP messages. For details, refer to RFC 3261.
Value Range	• 2 • 4 • 8 • 16 • 32
Default Value	4
Web User Interface Reference	T2 Timer (Page 125)

SIP_TIMER_T4_n

Parameter Name Example	SIP_TIMER_T4_1, SIP_TIMER_T4_2, ..., SIP_TIMER_T4_8
Value Format	INTEGER
Description	Specifies the maximum period, in seconds, that a message can remain on the network.
Value Range	• 0 • 1 • 2 • 3 • 4 • 5
Default Value	5

SIP_TIMER_B_n

Parameter Name Example	SIP_TIMER_B_1, SIP_TIMER_B_2, ..., SIP_TIMER_B_8
Value Format	INTEGER
Description	Specifies the value of SIP timer B (INVITE transaction timeout timer), in milliseconds. For details, refer to RFC 3261.
Value Range	250–64000
Default Value	32000

SIP_TIMER_D_n

Parameter Name Example	SIP_TIMER_D_1, SIP_TIMER_D_2, ..., SIP_TIMER_D_8
Value Format	INTEGER
Description	Specifies the value of SIP timer D (wait time for answer resending), in milliseconds. For details, refer to RFC 3261.
Value Range	0, 250–64000
Default Value	5000

SIP_TIMER_F_n

Parameter Name Example	SIP_TIMER_F_1, SIP_TIMER_F_2, ..., SIP_TIMER_F_8
Value Format	INTEGER
Description	Specifies the value of SIP timer F (non-INVITE transaction timeout timer), in milliseconds. For details, refer to RFC 3261.
Value Range	250–64000
Default Value	32000

SIP_TIMER_H_n

Parameter Name Example	SIP_TIMER_H_1, SIP_TIMER_H_2, ..., SIP_TIMER_H_8
Value Format	INTEGER
Description	Specifies the value of SIP timer H (wait time for ACK reception), in milliseconds. For details, refer to RFC 3261.
Value Range	250–64000
Default Value	32000

SIP_TIMER_J_n

Parameter Name Example	SIP_TIMER_J_1, SIP_TIMER_J_2, ..., SIP_TIMER_J_8
Value Format	INTEGER
Description	Specifies the value of SIP timer J (wait time for non-INVITE request resending), in milliseconds. For details, refer to RFC 3261.
Value Range	0, 250–64000
Default Value	5000

SIP_100REL_ENABLE_n

Parameter Name Example	SIP_100REL_ENABLE_1, SIP_100REL_ENABLE_2, ..., SIP_100REL_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to add the option tag 100rel to the "Supported" header of the INVITE message. For details, refer to RFC 3262.
Value Range	- Y (Enable 100rel function) - N (Disable 100rel function) Note - If set to "Y", the Reliability of Provisional Responses function will be enabled. The option tag 100rel will be added to the "Supported" header of the INVITE message and to the "Require" header of the "1xx" provisional message. - If set to "N", the option tag 100rel will not be used.
Default Value	Y
Web User Interface Reference	Enable 100rel (RFC 3262) (Page 126)

SIP_18X_RTX_INTVL_n

Parameter Name Example	SIP_18X_RTX_INTVL_1, SIP_18X_RTX_INTVL_2, ..., SIP_18X_RTX_INTVL_8
Value Format	INTEGER
Description	Specifies the retransmission interval, in seconds, for "18x" responses.
Value Range	0, 1–600 (0: Disable)
Default Value	0

SIP_SUBS_EXPIRE_n

Parameter Name Example	SIP_SUBS_EXPIRE_1, SIP_SUBS_EXPIRE_2, ..., SIP_SUBS_EXPIRE_8
Value Format	INTEGER
Description	Specifies the length of time, in seconds, that the subscription remains valid. This value is set in the "Expires" header of the SUBSCRIBE request.
Value Range	1–4294967295
Default Value	3600

SUB_INTERVAL_RATE_n

Parameter Name Example	SUB_INTERVAL_RATE_1, SUB_INTERVAL_RATE_2, ..., SUB_INTERVAL_RATE_8
Value Format	INTEGER
Description	Specifies the percentage of the "expires" value after which to refresh subscriptions by sending a new SUBSCRIBE message in the same dialog.
Value Range	1–100
Default Value	50

SUB_RTX_INTVL_n

Parameter Name Example	SUB_RTX_INTVL_1, SUB_RTX_INTVL_2, ..., SUB_RTX_INTVL_8
Value Format	INTEGER
Description	Specifies the interval, in seconds, between transmissions of SUBSCRIBE requests when a subscription results in failure (server no reply or error reply).
Value Range	1–86400
Default Value	10

SIP_P_PREFERRED_ID_n

Parameter Name Example	SIP_P_PREFERRED_ID_1, SIP_P_PREFERRED_ID_2, ..., SIP_P_PREFERRED_ID_8
Value Format	BOOLEAN
Description	Specifies whether to add the "P-Preferred-Identity" header to SIP messages.
Value Range	Y (Add the "P-Preferred-Identity" header) N (Do not add the "P-Preferred-Identity" header)
Default Value	N

SIP_PRIVACY_n

Parameter Name Example	SIP_PRIVACY_1, SIP_PRIVACY_2, ..., SIP_PRIVACY_8
Value Format	BOOLEAN
Description	Specifies whether to add the "Privacy" header to SIP messages.
Value Range	Y (Add the "Privacy" header) N (Do not add the "Privacy" header)
Default Value	N

ADD_USER_PHONE_n

Parameter Name Example	ADD_USER_PHONE_1, ADD_USER_PHONE_2, ..., ADD_USER_PHONE_8
Value Format	BOOLEAN
Description	Specifies whether to add "user=phone" to the SIP URI in SIP messages.
Value Range	- Y (Add "user=phone") - N (Do not add "user=phone") Note - SIP URI example: "sip:1111@tokyo.example.com;user=phone", when set to "Y" "sip:1111@tokyo.example.com", when set to "N"
Default Value	N

SIP_ANM_DISPNAME_n

Parameter Name Example	SIP_ANM_DISPNAME_1, SIP_ANM_DISPNAME_2, ..., SIP_ANM_DISPNAME_8
Value Format	INTEGER
Description	Specifies the text string to set as the display name in the "From" header when making anonymous calls.
Value Range	0 (Use normal display name) 1 (Use "Anonymous" for display name) 2 (Do not send a display name)
Default Value	1

SIP_ANM_USERNAME_n

Parameter Name Example	SIP_ANM_USERNAME_1, SIP_ANM_USERNAME_2, ..., SIP_ANM_USERNAME_8
Value Format	INTEGER
Description	Specifies the text string to set as the user name in the "From" header when making anonymous calls.
Value Range	0 (Use normal user name) 1 (Use "anonymous" for user name) 2 (Do not send a user name)
Default Value	0

SIP_ANM_HOSTNAME_n

Parameter Name Example	SIP_ANM_HOSTNAME_1, SIP_ANM_HOSTNAME_2, ..., SIP_ANM_HOSTNAME_8
Value Format	BOOLEAN
Description	Specifies whether to set an anonymous host name in the "From" header when making anonymous calls.
Value Range	- Y (Use "anonymous.invalid" for host name) - N (Use normal host name)
Default Value	N

SIP_DETECT_SSAF_n

Parameter Name Example	SIP_DETECT_SSAF_1, SIP_DETECT_SSAF_2, ..., SIP_DETECT_SSAF_8
Value Format	BOOLEAN
Description	Specifies whether to enable SSAF for the SIP servers (registrar server, proxy server, and presence server).
Value Range	- Y (Enable SSAF) - N (Disable SSAF) Note - If set to "Y", the unit receives SIP messages only from the source addresses stored in the SIP servers (registrar server, proxy server, and presence server), and not from other addresses. However, if "SIP_OUTPROXY_ADDR_n" in 5.3.22 SIP Settings is specified, the unit also receives SIP messages from the source address stored in the SIP outbound proxy server.
Default Value	N
Web User Interface Reference	Enable SSAF (SIP Source Address Filter) (Page 127)

SIP_RCV_DET_HEADER_n

Parameter Name Example	SIP_RCV_DET_HEADER_1, SIP_RCV_DET_HEADER_2, ..., SIP_RCV_DET_HEADER_8
Value Format	BOOLEAN
Description	Specifies whether to check the user name part of the SIP URI in the "To" header when receiving the INVITE message with an incorrect target SIP URI.

Value Range	• Y (Enable username check) • N (Disable username check) Note • If set to "Y", the unit will return an error reply when it receives the INVITE message with an incorrect target SIP URI. • If set to "N", the unit will not check the user name part of the SIP URI in the "To" header.
Default Value	N

SIP_RCV_DET_REQURI_n

Parameter Name Example	SIP_RCV_DET_REQURI_1, SIP_RCV_DET_REQURI_2, ..., SIP_RCV_DET_REQURI_8
Value Format	BOOLEAN
Description	Specifies whether to check ReqURI that is the part of SIP URI in "To" header when INVITE with wrong target SIP URI is received.
Value Range	• Y • N
Default Value	N

SIP_CONTACT_ON_ACK_n

Parameter Name Example	SIP_CONTACT_ON_ACK_1, SIP_CONTACT_ON_ACK_2, ..., SIP_CONTACT_ON_ACK_8
Value Format	BOOLEAN
Description	Specifies whether to add the "Contact" header to SIP ACK message.
Value Range	• Y (Add the "Contact" header) • N (Do not add the "Contact" header)
Default Value	N

VOICE_MESSAGE_AVAILABLE

Value Format	BOOLEAN
Description	Specifies how the existence of voice messages is determined when a "Messages-Waiting: yes" message is received.
Value Range	• Y (Determines that voice messages exist when "Messages-Waiting: yes" is received with a "Voice-Message" line included.) • N (Determines that voice messages exist when "Messages-Waiting: yes" is received even without a "Voice-Message" line included.)

Default Value	Y
---------------	---

SIP_INVITE_EXPIRE_n

Parameter Name Example	SIP_INVITE_EXPIRE_1, SIP_INVITE_EXPIRE_2, ..., SIP_INVITE_EXPIRE_8
Value Format	INTEGER
Description	Specifies the period, in seconds, in which the INVITE message will expire.
Value Range	0, 60–65535 (0: Disable)
Default Value	0

SIP_FOVR_NORSP_n

Parameter Name Example	SIP_FOVR_NORSP_1, SIP_FOVR_NORSP_2, ..., SIP_FOVR_NORSP_8
Value Format	BOOLEAN
Description	Specifies whether to perform the fail-over process when the unit detects that the SIP server is not replying to SIP message.
Value Range	- Y (Enable fail-over) - N (Disable fail-over) Note - If set to "Y", the unit will try to use the other SIP servers via the DNS SRV and A records. - If set to "N", the unit will not try to use the other SIP servers.
Default Value	Y

SIP_FOVR_MAX_n

Parameter Name Example	SIP_FOVR_MAX_1, SIP_FOVR_MAX_2, ..., SIP_FOVR_MAX_8
Value Format	INTEGER
Description	Specifies the maximum number of servers (including the first [normal] server) used in the fail-over process.
Value Range	1–4
Default Value	2

SIP_FOVR_MODE_n

Parameter Name Example	SIP_FOVR_MODE_1, SIP_FOVR_MODE_2, ..., SIP_FOVR_MODE_8
------------------------	--

Value Format	BOOLEAN
Description	Specifies whether INVITE/SUBSCRIBE will also follow the REGISTER Failover result.
Value Range	• Y (INVITE/SUBSCRIBE will follow the REGISTER Failover result.) • N (INVITE/SUBSCRIBE will not follow the REGISTER Failover result.)
Default Value	N

SIP_FOVR_DURATION_n

Parameter Name Example	SIP_FOVR_DURATION_1, SIP_FOVR_DURATION_2, ..., SIP_FOVR_DURATION_8
Value Format	INTEGER
Description	Specifies the number of transmission times for the REGISTER method at the Failover destination.
Value Range	0–10
Default Value	0

SIP_ADD_ROUTE_n

Parameter Name Example	SIP_ADD_ROUTE_1, SIP_ADD_ROUTE_2, ..., SIP_ADD_ROUTE_8
Value Format	BOOLEAN
Description	Specifies whether or not to add Route headers when setting OutBoundProxy. Note • Route headers are not added when OutBoundProxy and other server settings are the same.
Value Range	• Y (Route headers are added) • N (Route headers are not added)
Default Value	Y

SIP_REQURI_PORT_n

Parameter Name Example	SIP_REQURI_PORT_1, SIP_REQURI_PORT_2, ..., SIP_REQURI_PORT_8
Value Format	BOOLEAN
Description	Specifies whether to add the port parameter to the Request-Line in the initial SIP request.

Value Range	• Y (Add the port parameter) • N (Do not add the port parameter) Note • Request URI in REGISTER example: – If set to "Y", the port parameter is added to the Request-Line, as follows: Request-Line: REGISTER sip:192.168.0.10:5060 SIP/2.0 – If set to "N", the port parameter is not added to the Request-Line, as follows: Request-Line: REGISTER sip:192.168.0.10 SIP/2.0
Default Value	Y

ADD_EXPIRES_HEADER_n

Parameter Name Example	ADD_EXPIRES_HEADER_1, ADD_EXPIRES_HEADER_2, ..., ADD_EXPIRES_HEADER_8
Value Format	BOOLEAN
Description	Specifies whether to add an "Expires" header to REGISTER (adds an "expires" parameter to the "Contact" header).
Value Range	• Y (Add Expires Header) • N (Do not add Expires Header)
Default Value	N

ADD_TRANSPORT_UDP_n

Parameter Name Example	ADD_TRANSPORT_UDP_1, ADD_TRANSPORT_UDP_2, ..., ADD_TRANSPORT_UDP_8
Value Format	BOOLEAN
Description	Specifies whether to add the attribute "transport=udp" to the SIP header URI.
Value Range	• Y (Add Transport UDP) • N (Do not add Transport UDP)
Default Value	N

SIP_ADD_DIVERSION_n

Parameter Name Example	SIP_ADD_DIVERSION_1, SIP_ADD_DIVERSION_2, ..., SIP_ADD_DIVERSION_8
Value Format	INTEGER
Description	Specifies whether to add Diversion header information.

Value Range	0–2 – 0: Do not add Diversion header information – 1: Use own diversion information only for the Diversion header – 2: Add diversion information to existing Diversion header
Default Value	0

TRANSFER_RECALL_TIM

Value Format	INTEGER
Description	Specifies the time that the original call is resumed when the forwarding party does not response by Refer method for call transfer.
Value Range	0, 1–240
Default Value	0

SIGNAL_COMPRESSION_n

Parameter Name Example	<code>SIGNAL_COMPRESSION_1</code> , <code>SIGNAL_COMPRESSION_2</code> , ..., <code>SIGNAL_COMPRESSION_8</code>
Value Format	INTEGER
Description	Specifies whether to use signal compression. When using signal compression, select Required or Supported.
Value Range	0: Disable 1: Enable (Required) 2: Enable (Supported)
Default Value	0

MAX_BREADTH_n

Parameter Name Example	<code>MAX_BREADTH_1</code> , <code>MAX_BREADTH_2</code> , ..., <code>MAX_BREADTH_8</code>
Value Format	INTEGER
Description	Specifies the Max Breadth that is max Folk number at Proxy.
Value Range	0–99 (0: Not add max-breadth header)
Default Value	60

MUTIPART_BOUNDARY_DELIMITER_n

Parameter Name Example	<code>MUTIPART_BOUNDARY_DELIMITER_1</code> , <code>MUTIPART_BOUNDARY_DELIMITER_2</code> , ..., <code>MUTIPART_BOUNDARY_DELIMITER_8</code>
-------------------------------	---

Value Format	STRING
Description	Specifies the strings that indicates the boundary for Multipart Bodies.
Value Range	Max. 70 characters
Default Value	boundary1

RFC5626_KEEPALIVE_ENABLE_n

Parameter Name Example	RFC5626_KEEPALIVE_ENABLE_1, RFC5626_KEEPALIVE_ENABLE_2, ..., RFC5626_KEEPALIVE_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to use Keepalive that defined in RFC5626.
Value Range	Y: Enable RFC5626 Keepalive N: Disable
Default Value	N

RINGTONE_183_180_ENABLE_n

Parameter Name Example	RINGTONE_183_180_ENABLE_1, RINGTONE_183_180_ENABLE_2, ..., RINGTONE_183_180_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to ring the local ringback tone when 180 is received after receiving 183 Early media.
Value Range	Y: Performs ringback tone after early media N: Does not perform
Default Value	N

SIP_403_REG_SUB_RTX_n

Parameter Name Example	SIP_403_REG_SUB_RTX_1, SIP_403_REG_SUB_RTX_2, ..., SIP_403_REG_SUB_RTX_8
Value Format	BOOLEAN
Description	Specifies whether or not to send a request when a 403 Forbidden reply is received from the server in response to an REGISTER or SUBSCRIBE.
Value Range	Y (Send) N (Do not send)
Default Value	N

SIP_FORK_MODE_n

Parameter Name Example	SIP_FORK_MODE_1, SIP_FORK_MODE_2, ..., SIP_FORK_MODE_8
Value Format	BOOLEAN
Description	Specifies whether to use SIP Fork.
Value Range	- Y: Use SIP Fork - N: Not use SIP Fork
Default Value	N

AKA_AUTHENTICATION_ENABLE_n

Parameter Name Example	AKA_AUTHENTICATION_ENABLE_1, AKA_AUTHENTICATION_ENABLE_2, ..., AKA_AUTHENTICATION_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to use AKA authentication.
Value Range	- Y: Use AKA authentication - N: Not use AKA authentication
Default Value	N

RFC2543_HOLD_ENABLE_n

Parameter Name Example	RFC2543_HOLD_ENABLE_1, RFC2543_HOLD_ENABLE_2, ..., RFC2543_HOLD_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to enable the RFC 2543 Call Hold feature on this line.
Value Range	- Y (Enable RFC 2543 Call Hold) - N (Disable RFC 2543 Call Hold) Note - If set to "Y", the "c=0.0.0.0" syntax will be set in SDP when sending a re-INVITE message to hold the call. - If set to "N", the "c=x.x.x.x" syntax will be set in SDP.
Default Value	Y
Web User Interface Reference	Enable c=0.0.0.0 Hold (RFC 2543) (Page 127)

SIP_HOLD_ATTRIBUTE_n

Parameter Name Example	SIP_HOLD_ATTRIBUTE_1, SIP_HOLD_ATTRIBUTE_2, ..., SIP_HOLD_ATTRIBUTE_8
------------------------	---

Value Format	INTEGER
Description	Specifies whether to set "a=inactive " or not when the call is on hold.
Value Range	• 0: send only • 1: inactive
Default Value	0

SDP_USER_ID_n

Parameter Name Example	SDP_USER_ID_1, SDP_USER_ID_2, ..., SDP_USER_ID_8
Value Format	STRING
Description	Specifies the user ID used in the "o=" line field of SDP.
Value Range	Max. 32 characters
Default Value	Empty string

TELEVENT_PAYLOAD

Value Format	INTEGER
Description	Specifies the RFC 2833 payload type for DTMF tones. Note • This setting is available only when "OUTBANDDTMF_n" is set to "Y".
Value Range	96–127
Default Value	101
Web User Interface Reference	Telephone-event Payload Type (Page 129)

HOLD_SOUND_PATH_n

Parameter Name Example	HOLD_SOUND_PATH_1, HOLD_SOUND_PATH_2, ..., HOLD_SOUND_PATH_8
Value Format	INTEGER
Description	Specifies whether the unit's hold tone or the network server's hold tone (Music on hold) is played when a party is put on hold. Note • It is necessary to set the following parameters to play the unit's hold tone. – HOLD_TONE_FRQ – HOLD_TONE_GAIN

Value Range	0–1 – 0: The unit's hold tone is played. – 1: The network server's hold tone (Music on hold) is played.
Default Value	0

KEEP_EARLYMEDIA_n

Parameter Name Example	KEEP_EARLYMEDIA_1, KEEP_EARLYMEDIA_2, ..., KEEP_EARLYMEDIA_8
Value Format	BOOLEAN
Description	Specifies whether to continue Early Media call or not when 18x without SDP is received after Early Media connection is established while making a call.
Value Range	- Y: Continues - N: Does not continue (Switch to ringback tone)
Default Value	N

RFC3327_SUPPORT_PATH

Value Format	BOOLEAN
Description	Specifies whether to add "supported: path" to support Path header.
Value Range	- Y: Adds supported: path - N: Does not add
Default Value	Y

RFC4244_SUPPORT_HISTORY

Value Format	BOOLEAN
Description	Specifies whether to add "supported: history" to support History info header.
Value Range	- Y: Adds supported: history - N: Does not add
Default Value	N

RFC3319_SUPPORT_JOIN

Value Format	BOOLEAN
Description	Specifies whether to add "supported: join" to support join header.

Value Range	• y: Adds supported: join • n: Does not add
Default Value	N

RFC6947_DRAFT08_ALTC

Value Format	BOOLEAN
Description	Specifies whether to support RFC6947 draft08 when the attvalue is not attached after altc.
Value Range	• y: Performs ALTC by Draft08 • n: Performs ALTC by RFC6947
Default Value	Y

RFC5627_SUPPORT_GRUU_n

Parameter Name Example	RFC5627_SUPPORT_GRUU_1, RFC5627_SUPPORT_GRUU_2, ..., RFC5627_SUPPORT_GRUU_8
Value Format	BOOLEAN
Description	Specifies whether to add "supported: gruu" to support join header.
Value Range	• y: Adds supported: gruu • n: Does not add
Default Value	N

ESCAPECODE_CONVERSION

Value Format	BOOLEAN
Description	Specifies whether to convert "#" code to "%23".
Value Range	• y: Convert "#" code to "%23" • n: Does not convert
Default Value	Y

5.3.23 SIP-TLS Settings

SIP_TRANSPORT_n

Parameter Name Example	SIP_TRANSPORT_1, SIP_TRANSPORT_2, ..., SIP_TRANSPORT_8
Value Format	INTEGER
Description	Specifies which transport layer protocol to use for sending SIP packets.

Value Range	• 0 (UDP) • 1 (TCP) • 2 (TLS)
Default Value	0
Web User Interface Reference	Transport Protocol (Page 127)

SIP_TLS_MODE_n

Parameter Name Example	SIP_TLS_MODE_1, SIP_TLS_MODE_2, ..., SIP_TLS_MODE_8
Value Format	INTEGER
Description	Select the secure SIP protocol.
Value Range	• 0: SIPS • 1: SIP-TLS
Default Value	0
Web User Interface Reference	TLS Mode (Page 127)

SIP_TLS_RECONNECT_n

Parameter Name Example	SIP_TLS_RECONNECT_1, SIP_TLS_RECONNECT_2, ..., SIP_TLS_RECONNECT_8
Value Format	BOOLEAN
Description	Specifies whether to perform TLS reconnect after TLS session is disconnected.
Value Range	• y: Performs TLS connection automatically • n: Does not perform
Default Value	y

SIP_TLS_SRV_PREFIX_n

Parameter Name Example	SIP_TLS_SRV_PREFIX_1, SIP_TLS_SRV_PREFIX_2, ..., SIP_TLS_SRV_PREFIX_8
Value Format	STRING
Description	Specifies a prefix to add to the domain name when performing a DNS SRV lookup using TLS.
Value Range	Max. 32 characters
Default Value	_sips._tcp.
Web User Interface Reference	SRV lookup Prefix for TLS (Page 124)

SIP_TLS_VERIFY_n

Parameter Name Example	SIP_TLS_VERIFY_1, SIP_TLS_VERIFY_2, ..., SIP_TLS_VERIFY_8
Value Format	INTEGER
Description	Specifies whether to enable the verification of the root certificate.
Value Range	0: No verification 1: Simple verification 2: Precise verification
Default Value	0

SIP_TLS_ROOT_CERT_PATH

Value Format	STRING
Description	Specifies the URI where the root certificate is stored.
Value Range	Max. 384 characters
Default Value	Empty string

SIP_TLS_CLIENT_CERT_PATH

Value Format	STRING
Description	Specifies the URI where the client certificate is stored.
Value Range	Max. 384 characters
Default Value	Empty string

SIP_TLS_PKEY_PATH

Value Format	STRING
Description	Specifies the URI where the private key is stored.
Value Range	Max. 384 characters
Default Value	Empty string

5.3.24 CODEC Settings

CODEC_G729_PARAM_n

Parameter Name Example	CODEC_G729_PARAM_1, CODEC_G729_PARAM_2, ..., CODEC_G729_PARAM_8
Value Format	INTEGER

Description	Specifies whether to add an attribute line, "a=fmtp:18 annexb=no", to SDP when the codec is set to "G729A".
Value Range	0: Do not add "a=fmtp:18 annexb=no" 1: Add "a=fmtp:18 annexb=no"
Default Value	0

CODEC_ENABLEx_n

Parameter Name Example	CODEC_ENABLEx_1, CODEC_ENABLEx_2, ..., CODEC_ENABLEx_8
Value Format	BOOLEAN
Description	Specifies whether to enable the codec specified in the parameter list. Note - The "x" character in the parameter title should be changed to one of the following numbers, according to the codec to be changed. 0: G.722 1: PCMA 2: G.722.2 (AMR-WB) 3: G.729A 4: PCMU - For codec setting examples, see 2.5.1 Examples of Codec Settings.
Value Range	- y (Enable) - n (Disable)
Default Value	y
Web User Interface Reference	- G.722 (Enable) (Page 131) - PCMA (Enable) (Page 132) - G.722.2 (AMR-WB) (Enable) (Page 132) - G.729A (Enable) (Page 133) - PCMU (Enable) (Page 133)

CODEC_PRIORITYx_n

Parameter Name Example	CODEC_PRIORITYx_1, CODEC_PRIORITYx_2, ..., CODEC_PRIORITYx_8
Value Format	INTEGER

Description	Specifies the priority order for the codec. Note - The "x" character in the parameter title should be changed to one of the following numbers, according to the codec to be changed. 0: G.722 1: PCMA 2: G.722.2 (AMR-WB) 3: G.729A 4: PCMU - For codec setting examples, see 2.5.1 Examples of Codec Settings.
Value Range	1–255
Default Value	1
Web User Interface Reference	- G.722 (Priority) (Page 131) - PCMA (Priority) (Page 132) - G.722.2 (AMR-WB) (Priority) (Page 132) - G.729A (Priority) (Page 133) - PCMU (Priority) (Page 133)

CODEC_PAYLOAD2

Value Format	INTEGER
Description	Specifies the payload type for the codec (G.722.2).
Value Range	96–127
Default Value	99

5.3.25 DTMF Settings

DTMF_METHOD_n

Parameter Name Example	DTMF_METHOD_1, DTMF_METHOD_2, ..., DTMF_METHOD_8
Value Format	INTEGER
Description	Specifies the method to notify the DTMF.
Value Range	0: RFC2833 1: Inband 2: SIP INFO Note - RFC2833 refers to Outband DTMF. - Inband refers to Inband DTMF.

Default Value	0
Web User Interface Reference	DTMF Type (Page 133)

OUTBANDDTMF_VOL

Value Format	INTEGER
Description	Specifies the volume (in decibels [dB]) of the DTMF tone using RFC 2833.
Value Range	-63–0
Default Value	-5

INBANDDTMF_VOL

Value Format	INTEGER
Description	Specifies the volume (in decibels [dB]) of in-band DTMF tones.
Value Range	-46–0
Default Value	-5

DTMF_SIGNAL_LEN

Value Format	INTEGER
Description	Specifies the length of the DTMF signal, in milliseconds.
Value Range	60–200
Default Value	180

DTMF_INTDIGIT_TIM

Value Format	INTEGER
Description	Specifies the interval, in milliseconds, between DTMF signals.
Value Range	60–200
Default Value	90

5.3.26 RTP/RTCP/RTCP-XR Settings

DSCP_RTP_n

Parameter Name Example	DSCP_RTP_1, DSCP_RTP_2, ..., DSCP_RTP_8
Value Format	INTEGER

Description	Specifies the DSCP level of DiffServ applied to RTP packets.
Value Range	0–63
Default Value	0
Web User Interface Reference	RTP Packet QoS (DSCP) (Page 134)

DSCP_RTCP_n

Parameter Name Example	DSCP_RTCP_1, DSCP_RTCP_2, ..., DSCP_RTCP_8
Value Format	INTEGER
Description	Specifies the DSCP level of DiffServ applied to RTCP/RTCP-XR packets.
Value Range	0–63
Default Value	0
Web User Interface Reference	RTCP Packet QoS (DSCP) (Page 134)

MAX_DELAY_n

Parameter Name Example	MAX_DELAY_1, MAX_DELAY_2, ..., MAX_DELAY_8
Value Format	INTEGER
Description	Specifies the maximum delay, in 10-millisecond units, of the jitter buffer.
Value Range	3–50 (× 10 ms) Note - This setting is subject to the following conditions: – This value must be greater than "NOM_DELAY" – This value must be greater than "MIN_DELAY" – "NOM_DELAY" must be greater than or equal to "MIN_DELAY"
Default Value	20

MIN_DELAY_n

Parameter Name Example	MIN_DELAY_1, MIN_DELAY_2, ..., MIN_DELAY_8
Value Format	INTEGER
Description	Specifies the minimum delay, in 10-millisecond units, of the jitter buffer.

Value Range	1 or 2 ($\times 10$ ms) Note - This setting is subject to the following conditions: - This value must be less than or equal to "NOM_DELAY" - This value must be less than "MAX_DELAY" "MAX_DELAY" must be greater than "NOM_DELAY"
Default Value	2

NOM_DELAY_n

Parameter Name Example	NOM_DELAY_1, NOM_DELAY_2, ..., NOM_DELAY_8
Value Format	INTEGER
Description	Specifies the initial delay, in 10-millisecond units, of the jitter buffer.
Value Range	1–7 ($\times 10$ ms) Note - This setting is subject to the following conditions: - This value must be greater than or equal to "MIN_DELAY" - This value must be less than "MAX_DELAY"
Default Value	1

RTP_PORT_MIN

Value Format	INTEGER
Description	Specifies the lowest port number that the unit will use for RTP packets.
Value Range	1024–59598 (only even)
Default Value	16000
Web User Interface Reference	Minimum RTP Port Number (Page 128)

RTP_PORT_MAX

Value Format	INTEGER
Description	Specifies the highest port number that the unit will use for RTP packets.
Value Range	1424–59998 (only even)
Default Value	20000
Web User Interface Reference	Maximum RTP Port Number (Page 128)

RTP_PTIME

Value Format	INTEGER
Description	Specifies the interval, in milliseconds, between transmissions of RTP packets.
Value Range	• 20 • 30 • 40
Default Value	20
Web User Interface Reference	RTP Packet Time (Page 128)

RTP_TARGET_CHECK

Value Format	INTEGER
Description	Specifies the diagnose level for received RTP.
Value Range	• 0: diagnose destination IP Address and port • 1: diagnose destination IP address • 2: diagnose destination port • 3: diagnose nothing
Default Value	0

RTCP_ENABLE_n

Parameter Name Example	RTCP_ENABLE_1, RTCP_ENABLE_2, ..., RTCP_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to enable or disable RTCP (Real-Time Transport Control Protocol). For details, refer to RFC 3550.
Value Range	• Y (Enable RTCP) • N (Disable RTCP)
Default Value	N
Web User Interface Reference	Enable RTCP (Page 134)

RTCP_INTVL_n

Parameter Name Example	RTCP_INTVL_1, RTCP_INTVL_2, ..., RTCP_INTVL_8
Value Format	INTEGER
Description	Specifies the interval, in seconds, between RTCP/RTCP-XR packets.
Value Range	5–65535
Default Value	5

Web User Interface Reference	RTCP&RTCP-XR Interval (Page 135)
------------------------------	----------------------------------

RTCP_SEND_BY_SDP_n

Parameter Name Example	RTCP_SEND_BY_SDP_1, RTCP_SEND_BY_SDP_2, ..., RTCP_SEND_BY_SDP_8
Value Format	INTEGER
Description	Specifies whether to send RTCP signals by SDP (Session Description Protocol).
Value Range	0–1 – 0: Send RTCP signals using the value specified in "RTCP_INTVL_n", if the "RTCP_ENABLE_n" parameter is enabled. – 1: Send RTCP signals using the value specified in the SDP attribute "a=rtcp:".
Default Value	0

RTP_CLOSE_ENABLE_n

Parameter Name Example	RTP_CLOSE_ENABLE_1, RTP_CLOSE_ENABLE_2, ..., RTP_CLOSE_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to enable processing to close held RTP sockets.
Value Range	- Y (Enable RTP Close) - N (Disable RTP Close)
Default Value	N

RTCPXR_ENABLE_n

Parameter Name Example	RTCPXR_ENABLE_1, RTCPXR_ENABLE_2, ..., RTCPXR_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to enable or disable RTCP-XR.
Value Range	- Y: Enable RTCP-XR - N: Disable
Default Value	N
Web User Interface Reference	Enable RTCP-XR (Page 134)

5.3.27 SRTP Settings

SRTP_CONNECT_MODE_n

Parameter Name Example	SRTP_CONNECT_MODE_1, SRTP_CONNECT_MODE_2, ..., SRTP_CONNECT_MODE_8
Value Format	INTEGER
Description	Specifies the mode of SRTP feature.
Value Range	- SRTP - RTP/SRTP Note - When RTP/SRTP is selected, operation is in RTP mode.
Default Value	1
Web User Interface Reference	SRTP Mode (Page 135)

SRTP_MIX_CONFERENCE_ENABLE_n

Parameter Name Example	SRTP_MIX_CONFERENCE_ENABLE_1, SRTP_MIX_CONFERENCE_ENABLE_2, ..., SRTP_MIX_CONFERENCE_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to allow conferences where each participant can use either SRTP or RTP.
Value Range	- Y: Enable - N: Disable
Default Value	N
Web User Interface Reference	Enable Mixed SRTP & RTP by Conference (Page 135)

SRTP_MIX_TRANSFER_ENABLE_n

Parameter Name Example	SRTP_MIX_TRANSFER_ENABLE_1, SRTP_MIX_TRANSFER_ENABLE_2, ..., SRTP_MIX_TRANSFER_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to allow call transfers between a user who is using SRTP and a user who is using RTP.
Value Range	- Y: Enable - N: Disable
Default Value	N
Web User Interface Reference	Enable Mixed SRTP & RTP by Transfer (Page 135)

SRTP_HELD_CALL_RTP_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to allow playing the melody on hold over RTP on a call that is using SRTP.
Value Range	• y: Enable • n: Disable
Default Value	y

5.3.28 VQ Report by PUBLISH**VQREPORT_COLLECTOR_ADDRESS**

Value Format	STRING
Description	Specifies the IP address or FQDN of the collector server.
Value Range	Max. 256 characters
Default Value	Empty string
Web User Interface Reference	Server Address (Page 129)

VQREPORT_COLLECTOR_PORT

Value Format	INTEGER
Description	Specifies the port of the collector server.
Value Range	1–65535
Default Value	5060
Web User Interface Reference	Port (Page 129)

VQREPORT_SEND

Value Format	INTEGER
Description	Specifies the sending type of the VQ report using PUBLISH.
Value Range	• 0: Disable • 1: End of Session Report Using PUBLISH • 2: Interval report Using PUBLISH • 3: Alert Report Using PUBLISH
Default Value	0
Web User Interface Reference	Enable PUBLISH (Page 129)

ALERT_REPORT_TRIGGER

Value Format	INTEGER
Description	Specifies the trigger to notify the VQ report.
Value Range	• 0: Warning • 1: Critical
Default Value	0
Web User Interface Reference	Alert Report Trigger (Page 130)

ALERT_REPORT_MOSQ_CRITICAL

Value Format	INTEGER
Description	Specifies the critical criteria to send VQ report at the time of occurring the MOSQ.
Value Range	0–40
Default Value	0
Web User Interface Reference	Threshold MOS-LQ (Critical) (Page 130)

ALERT_REPORT_MOSQ_WARNING

Value Format	INTEGER
Description	Specifies the warning criteria to send VQ report at the time of occurring the MOSQ.
Value Range	0–40
Default Value	0
Web User Interface Reference	Threshold MOS-LQ (Warning) (Page 130)

ALERT_REPORT_DELAY_CRITICAL

Value Format	INTEGER
Description	Specifies the critical criteria to send VQ report at the time of occurring the delay.
Value Range	0–2000
Default Value	0
Web User Interface Reference	Threshold Delay (Critical) (Page 130)

ALERT_REPORT_DELAY_WARNING

Value Format	INTEGER
Description	Specifies the warning criteria to send VQ report at the time of occurring the delay.
Value Range	0–2000
Default Value	0
Web User Interface Reference	Threshold Delay (Warning) (Page 130)

VQREPORT_SIGNAL_COMPRESSION

Value Format	BOOLEAN
Description	Specifies whether to use signal compression for sending VQ report.
Value Range	- Y: Enable - N: Disable
Default Value	N

5.3.29 uaCSTA Settings**UACSTA_ENABLE_n**

Parameter Name Example	UACSTA_ENABLE_1, UACSTA_ENABLE_2, ..., UACSTA_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to enable or disable the uaCSTA feature.
Value Range	- Y: Enable - N: Disable
Default Value	N

UACSTA_UNIQUE_ID

Value Format	STRING
Description	Specifies the SIP-URI for registering to CSTA server.
Value Range	Max. 64 characters
Default Value	Empty string

CSTA_PORT

Value Format	INTEGER
---------------------	---------

Description	Specifies the source port number used by the unit for uaCSTA communication.
Value Range	1–65535
Default Value	6060

CSTA_PRXY_ADDR

Value Format	STRING
Description	Specifies the IP address or FQDN of the proxy server for CSTA.
Value Range	Max. 256 characters
Default Value	Empty string

CSTA_PRXY_PORT

Value Format	INTEGER
Description	Specifies the port of the proxy server for CSTA.
Value Range	1–65535
Default Value	5060

CSTA_RGSTR_ADDR

Value Format	STRING
Description	Specifies the IP address or FQDN of the registrar server for CSTA.
Value Range	Max. 256 characters
Default Value	Empty string

CSTA_RGSTR_PORT

Value Format	INTEGER
Description	Specifies the port of the registrar server for CSTA.
Value Range	1–65535
Default Value	5060

CSTA_REG_EXPIRE_TIME

Value Format	INTEGER
---------------------	---------

Description	Specifies the length of time, in seconds, that the registration remains valid. This value is set in the "Expires" header of the REGISTER request for CSTA.
Value Range	1–4294967295
Default Value	3600

CSTA_TRANSPORT

Value Format	INTEGER
Description	Specifies which transport layer protocol to use for sending SIP packets.
Value Range	• 0: UDP • 1: TCP • 2: TLS
Default Value	0

CSTA_RGSTR_AUTHID

Value Format	STRING
Description	Specifies the authentication ID for received REGISTER.
Value Range	Max. 128 characters
Default Value	Empty string

CSTA_RGSTR_PASS

Value Format	STRING
Description	Specifies the authentication password for received REGISTER.
Value Range	Max. 128 characters
Default Value	Empty string

5.3.30 Telephone Settings

POWER_ON_DISPLAY_LOGO_PATH

Value Format	STRING
Description	Specifies URI for logo image file displayed when power is turned on. Size: 128 x 160 File type: BMP (1/4/8/24 bit)
Value Range	Max. 384 characters
Default Value	Empty string

DISPLAY_WALLPAPER_DARK_PATH

Value Format	STRING
Description	Specifies the Wallpaper for DARK display setting in IDLE mode. Size: 128 x 116 File type: BMP (1/4/8/24 bit)
Value Range	Max. 384 characters
Default Value	Empty string

DISPLAY_WALLPAPER_LIGHT_PATH

Value Format	STRING
Description	Specifies the Wallpaper for LIGHT display setting in IDLE mode.
Value Range	Max. 384 characters
Default Value	Empty string

FIRSTDIGIT_TIM

Value Format	INTEGER
Description	Specifies the length of time, in seconds, within which the first digits of a dial number must be dialed.
Value Range	1–600 (s)
Default Value	30
Web User Interface Reference	First-digit Timeout (Page 139)

INTDIGIT_TIM

Value Format	INTEGER
Description	Specifies the length of time, in seconds, within which subsequent digits of a dial number must be dialed.
Value Range	1–15 (s)
Default Value	5
Web User Interface Reference	Inter-digit Timeout (Page 139)

POUND_KEY_DELIMITER_ENABLE

Value Format	BOOLEAN
Description	Specifies whether the # key is treated as a regular dialed digit or a delimiter, when dialed as or after the second digit.

Value Range	- Y (# is treated as the end of dialing delimiter) - N (# is treated as a regular dialed digit)
Default Value	Y
Web User Interface Reference	Enable # Key as delimiter (Page 140)

POST_DIAL_TALK_ENABLE

Value Format	BOOLEAN
Description	Specifies whether the Talk-key is treated as a calling button or as a switch for SP-phone mode during post dialing (except KX-TPA65).
Value Range	- Y: The Talk-key is used to make the call. - N: The Talk-key is used as a switch for SP-phone mode.
Default Value	N

RINGTONE_SETTING_HSy_n

Parameter Name Example	RINGTONE_SETTING_HS1_1, RINGTONE_SETTING_HS1_2, ..., RINGTONE_SETTING_HS1_8, RINGTONE_SETTING_HS2_1, RINGTONE_SETTING_HS2_2, ..., RINGTONE_SETTING_HS2_8, RINGTONE_SETTING_HS8_1, RINGTONE_SETTING_HS8_2, ..., RINGTONE_SETTING_HS8_8
Value Format	INTEGER
Description	Specifies the ringtone to each line for a handset.
Value Range	1–32
Default Value	RINGTONE_SETTING_HS1_1=1, RINGTONE_SETTING_HS2_1=1, ..., RINGTONE_SETTING_HS8_1=1, RINGTONE_SETTING_HS1_2=2, RINGTONE_SETTING_HS2_2=2, ..., RINGTONE_SETTING_HS8_2=2, RINGTONE_SETTING_HS1_3=3, RINGTONE_SETTING_HS2_3=3, ..., RINGTONE_SETTING_HS8_3=3, RINGTONE_SETTING_HS1_4=4, RINGTONE_SETTING_HS2_4=4, ..., RINGTONE_SETTING_HS8_4=4, RINGTONE_SETTING_HS1_5=5, RINGTONE_SETTING_HS2_5=5, ..., RINGTONE_SETTING_HS8_5=5, RINGTONE_SETTING_HS1_6=6, RINGTONE_SETTING_HS2_6=6, ..., RINGTONE_SETTING_HS8_6=6, RINGTONE_SETTING_HS1_7=7, RINGTONE_SETTING_HS2_7=7, ..., RINGTONE_SETTING_HS8_7=7, RINGTONE_SETTING_HS1_8=8, RINGTONE_SETTING_HS2_8=8, ..., RINGTONE_SETTING_HS8_8=8

INTERCOM_RINGTONE_SETTING_HSy

Value Format	INTEGER
Description	Specifies the intercom ringtone to each handset.
Value Range	1–32
Default Value	9

DISPLAY_NAME_REPLACE

Value Format	BOOLEAN
Description	Specifies whether the name saved in the phonebook is used in place of the name display if a matching entry is found.
Value Range	• Y (Enable Display Name Replace) • N (Disable Display Name Replace)
Default Value	Y

NUMBER_MATCHING_LOWER_DIGIT

Value Format	INTEGER
Description	Specifies the minimum number of digits with which to match a phonebook entry with an incoming call's caller ID.
Value Range	0–15
Default Value	7

NUMBER_MATCHING_UPPER_DIGIT

Value Format	INTEGER
Description	Specifies the maximum number of digits with which to match a phonebook entry with an incoming call's caller ID.
Value Range	0–15
Default Value	10

INCOMING_BUSY_ENABLE

Value Format	BOOLEAN
Description	Operation of a second incoming call on the same line when the device is using the radio broadcast. • Y: Busy Response • N: Receive incoming call (using a second radio broadcast.)

Value Range	• Y: Enable (Busy) • N: Disable (Broadcast)
Default Value	Y

FLASH_RECALL_TERMINATE

Value Format	BOOLEAN
Description	Specifies the function of the FLASH/RECALL button during a conversation.
Value Range	• Y (Terminate) • N (EFA)
Default Value	Y

FLASHHOOK_CONTENT_TYPE

Value Format	STRING
Description	Specifies the type of signal sent when sending a flash hook event.
Value Range	• Signal • flashhook
Default Value	Signal

NUM_PLAN_PARKING

Value Format	STRING
Description	Specifies the call parking number.
Value Range	0–4 digits (0–9, *, #)
Default Value	Empty string
Web User Interface Reference	Call Park Number (Page 140)

CALLPARK_KEY_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to display "Call Park" in the Call Parking Func menu.
Value Range	• Y: Enable • N: Disable
Default Value	N
Web User Interface Reference	Enable Call Park Key (Page 141)

NUM_PLAN_PARK_RETRIEVING

Value Format	STRING
Description	Specifies the park retrieve number.
Value Range	0–4 digits (0–9, *, #)
Default Value	Empty string
Web User Interface Reference	Park Retrieve Number (Page 141)

IDLE_SOFT_KEY_PARK_RETRIEVING

Value Format	INTEGER
Description	Specifies whether to have soft key for the park retrieving. Note This feature is available only when "CALLPARK_NOTIFICATION_ENABLE_n" is set to "Y", and "NUM_PLAN_PARK_RETRIEVING" is set (→see CALLPARK_NOTIFICATION_ENABLE_n, NUM_PLAN_PARK_RETRIEVING).
Value Range	0: no 1: Soft Key (A) 2: Soft key (B) 3: Soft key (C)
Default Value	0
Web User Interface Reference	Park Retrieve Soft Key (Page 141)

HOLD_RECALL_TIM

Value Format	INTEGER
Description	Specifies the duration of the hold recall timer. If set to "0", the function is disabled.
Value Range	0–240 (0: Disable)
Default Value	60

HOLD_TRANSFER_OPERATION

Value Format	BOOLEAN
Description	Specifies whether to transfer a call by Hold button.

Value Range	• Y: Enable (Press the Hold button to transfer a call.) talk → hold → 2nd talk → Transfer (or on-hook) • N: Disable (Press the Transfer button to transfer a call.) talk → transfer → 2nd talk → transfer (or on-hook)
Default Value	N

ONHOOK_TRANSFER_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable on hook transfer when HOLD_TRANSFER_OPERATION="N" .
Value Range	• Y (Enable On-hook Transfer) • N (Disable On-hook Transfer)
Default Value	Y

ONHOOK_HOLD_TRNS_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable on hook transfer when HOLD_TRANSFER_OPERATION="Y" .
Value Range	• Y (Enable On-hook Transfer) • N (Disable On-hook Transfer)
Default Value	N

BLIND_TRANSFER_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable blind transfer.
Value Range	• Y: Enable • N: Disable
Default Value	Y

REPEATER_MODE

Value Format	BOOLEAN
Description	Specifies whether to turn the repeater mode on or off.
Value Range	• Y: Repeater on • N: Repeater off
Default Value	N

SYS_LOCK_ENABLE_HSy

Parameter Name Example	SYS_LOCK_ENABLE_HS1, SYS_LOCK_ENABLE_HS2, ..., SYS_LOCK_ENABLE_HS8
Value Format	BOOLEAN
Description	Specifies whether to enable locking handset.
Value Range	- Y: Enable - N: Disable
Default Value	N
Web User Interface Reference	Enable Handset Lock (Page 116)

SYS_LOCK_PASSWORD_HSy

Parameter Name Example	SYS_LOCK_PASSWORD_HS1, SYS_LOCK_PASSWORD_HS2, ..., SYS_LOCK_PASSWORD_HS8
Value Format	STRING
Description	Specifies the password for unlocking handset.
Value Range	Null, 4 digits (0–9)
Default Value	Empty string
Web User Interface Reference	Password for Unlocking (Page 117)

INTERCOM_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable or disable intercom menu.
Value Range	- Y: Enable - N: Disable
Default Value	Y

PAUSE_INPUT_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable or disable pause input.
Value Range	- Y: Enable - N: Disable
Default Value	N

REGISTRATION_PIN

Value Format	STRING
Description	Specifies the base unit PIN, which is used to register the handset to the base unit.
Value Range	4 Digits, Decimal
Default Value	1234

5.3.31 Tone Settings

OUTSIDE_DIAL_TONE_FRQ

Value Format	Comma-separated Integer
Description	Specifies the dual-tone frequencies, in hertz, of Second Dial Tone using max. 2 whole numbers separated by a comma.
Value Range	0, 200–2000(Hz) (0=No tone)
Default Value	420

OUTSIDE_DIAL_TONE_GAIN

Value Format	INTEGER
Description	Specifies the gain, in decibels, of Second Dial Tone
Value Range	-24–6 (dB)
Default Value	0

OUTSIDE_DIAL_TONE_RPT

Value Format	INTEGER
Description	Specifies whether Second Dial Tone is repeated.
Value Range	0: No Repeat 1: Repeat
Default Value	0

OUTSIDE_DIAL_TONE_TIMING

Value Format	Comma-separated Integer
Description	Specifies the pattern, in milliseconds, of Second Dial Tone using Max. 10 whole numbers (off 1, on 1, off 2, on 2...) separated by commas.
Value Range	0–16000 (msec) (0=Continuous)

Default Value	60,0
---------------	------

REORDER_TONE_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable reorder tone.
Value Range	- Y: Enable - N: Disable
Default Value	Y

TONE_LEN_DISCONNECT

Value Format	INTEGER
Description	Specifies the duration, in seconds, that a disconnect tone will be heard when the other party ends a call and the handset is being used.
Value Range	1–15 (s)
Default Value	3

DIAL_TONE1_FRQ

Value Format	Comma-separated Integer
Description	Specifies the dual-tone frequencies, in hertz, of Dial Tone 1 using 2 whole numbers separated by a comma.
Value Range	0, 200–2000 (0: No tone)
Default Value	350,440
Web User Interface Reference	Tone Frequencies (Page 149)

DIAL_TONE1_GAIN

Value Format	INTEGER
Description	Specifies the gain, in decibels, of Dial Tone 1.
Value Range	-24–6 (dB)
Default Value	0

DIAL_TONE1_RPT

Value Format	INTEGER
Description	Specifies whether Dial Tone 1 is repeated.

Value Range	0–1 – 0: No Repeat – 1: Repeat
Default Value	0

DIAL_TONE1_TIMING

Value Format	Comma-separated Integer
Description	Specifies the pattern, in milliseconds, of Dial Tone 1 using up to 10 whole numbers (off 1, on 1, off 2, on 2...) separated by commas. Note It is recommended that you set a value of 60 milliseconds or more for the first value (off 1).
Value Range	0–16000 (msec) (0=Continuous) Note Avoid setting 1–50 for any of the values.
Default Value	60,0
Web User Interface Reference	Tone Timings (Page 150)

DIAL_TONE2_FRQ

Value Format	Comma-separated Integer
Description	Specifies the dual-tone frequencies, in hertz, of Dial Tone 2 using 2 whole numbers separated by a comma.
Value Range	0, 200–2000 (0: No tone)
Default Value	350,440

DIAL_TONE2_GAIN

Value Format	INTEGER
Description	Specifies the gain, in decibels, of Dial Tone 2.
Value Range	-24–6 (dB)
Default Value	0

DIAL_TONE2_RPT

Value Format	INTEGER
Description	Specifies whether Dial Tone 2 is repeated.

Value Range	0–1 – 0: No Repeat – 1: Repeat
Default Value	0

DIAL_TONE2_TIMING

Value Format	Comma-separated Integer
Description	Specifies the pattern, in milliseconds, of Dial Tone 2 using up to 10 whole numbers (off 1, on 1, off 2, on 2...) separated by commas. Note It is recommended that you set a value of 60 milliseconds or more for the first value (off 1).
Value Range	0–16000 (0: Infinite time) Note Avoid setting 1–50 for any of the values.
Default Value	60,0

DIAL_TONE4_FRQ

Value Format	Comma-separated Integer
Description	Specifies the dual-tone frequencies, in hertz, of Dial Tone 4 (stutter dial tones) to notify that a voice mail is waiting, using 2 whole numbers separated by a comma.
Value Range	0, 200–2000 (0: No tone)
Default Value	350,440
Web User Interface Reference	Tone Frequencies (Page 151)

DIAL_TONE4_GAIN

Value Format	INTEGER
Description	Specifies the gain, in decibels, of Dial Tone 4 (stutter-type dial tone).
Value Range	-24–6 (dB)
Default Value	0

DIAL_TONE4_RPT

Value Format	INTEGER
Description	Specifies whether Dial Tone 4 (stutter-type dial tone) is repeated.

BUSY_TONE_RPT

Value Format	INTEGER
Description	Specifies whether the busy tone is repeated.
Value Range	0–1 – 0: No Repeat – 1: Repeat
Default Value	1

BUSY_TONE_TIMING

Value Format	Comma-separated Integer
Description	Specifies the pattern, in milliseconds, of busy tones using up to 10 whole numbers (off 1, on 1, off 2, on 2...) separated by commas. Note It is recommended that you set a value of 60 milliseconds or more for the first value (off 1).
Value Range	0–16000 (0: Continuous) Note Avoid setting 1–50 for any of the values.
Default Value	60,500,440
Web User Interface Reference	Tone Timings (Page 150)

REORDER_TONE_FRQ

Value Format	Comma-separated Integer
Description	Specifies the dual-tone frequencies, in hertz, of reorder tones using 2 whole numbers separated by a comma.
Value Range	0, 200–2000 (0: No tone)
Default Value	480,620
Web User Interface Reference	Tone Frequencies (Page 152)

REORDER_TONE_GAIN

Value Format	INTEGER
Description	Specifies the gain, in decibels, of the reorder tone.
Value Range	-24–6 (dB)
Default Value	0

REORDER_TONE_RPT

Value Format	INTEGER
Description	Specifies whether the reorder tone is repeated.
Value Range	0–1 – 0: No Repeat – 1: Repeat
Default Value	1

REORDER_TONE_TIMING

Value Format	Comma-separated Integer
Description	Specifies the pattern, in milliseconds, of reorder tones using up to 10 whole numbers (off 1, on 1, off 2, on 2...) separated by commas. Note It is recommended that you set a value of 60 milliseconds or more for the first value (off 1).
Value Range	0–16000 (0: Continuous) Note Avoid setting 1–50 for any of the values.
Default Value	60,250,190
Web User Interface Reference	Tone Timings (Page 152)

RINGBACK_TONE_FRQ

Value Format	Comma-separated Integer
Description	Specifies the dual-tone frequencies, in hertz, of ringback tones using 2 whole numbers separated by a comma.
Value Range	0, 200–2000 (0: No tone)
Default Value	440,480
Web User Interface Reference	Tone Frequencies (Page 151)

RINGBACK_TONE_GAIN

Value Format	INTEGER
Description	Specifies the gain, in decibels, of the ringback tone.
Value Range	-24–6 (dB)
Default Value	0

RINGBACK_TONE_RPT

Value Format	INTEGER
Description	Specifies whether the ringback tone is repeated.
Value Range	0–1 – 0: No Repeat – 1: Repeat
Default Value	1

RINGBACK_TONE_TIMING

Value Format	Comma-separated Integer
Description	Specifies the pattern, in milliseconds, of ringback tones using up to 10 whole numbers (off 1, on 1, off 2, on 2...) separated by commas. Note It is recommended that you set a value of 60 milliseconds or more for the first value (off 1).
Value Range	0–16000 (0: Continuous) Note Avoid setting 1–50 for any of the values.
Default Value	60,2000,3940
Web User Interface Reference	Tone Timings (Page 151)

HOLD_TONE_FRQ

Value Format	Comma-separated Integer
Description	Specifies the dual-tone frequencies, in hertz, of the hold tone using 2 whole numbers separated by a comma.
Value Range	0, 200–2000 (0: No tone)
Default Value	425

HOLD_TONE_GAIN

Value Format	INTEGER
Description	Specifies the gain, in decibels, of the hold tone.
Value Range	-24–6 (dB)
Default Value	0

BELL_CORE_PATTERN1_TIMING

Value Format	Comma-separated Integer
Description	Specifies the cadence, in milliseconds, of pattern ID 1, described in the LSSGR, GR-506-CORE, "Signaling for Analog Interfaces" section 14, using up to 8 whole numbers (on 1, off 1, on 2, off 2...) separated by commas.
Value Range	0–5000 (0: Continuous) Note Avoid setting 1–50 for any of the values.
Default Value	2000,4000

BELL_CORE_PATTERN2_TIMING

Value Format	Comma-separated Integer
Description	Specifies the cadence, in milliseconds, of pattern ID 2, described in the LSSGR, GR-506-CORE, "Signaling for Analog Interfaces" section 14, using up to 8 whole numbers (on 1, off 1, on 2, off 2...) separated by commas.
Value Range	0–5000 (0: Continuous) Note Avoid setting 1–50 for any of the values.
Default Value	800,400,800,4000

BELL_CORE_PATTERN3_TIMING

Value Format	Comma-separated Integer
Description	Specifies the cadence, in milliseconds, of pattern ID 3, described in the LSSGR, GR-506-CORE, "Signaling for Analog Interfaces" section 14, using up to 8 whole numbers (on 1, off 1, on 2, off 2...) separated by commas.
Value Range	0–5000 (0: Continuous) Note Avoid setting 1–50 for any of the values.
Default Value	400,200,400,200,800,4000

BELL_CORE_PATTERN4_TIMING

Value Format	Comma-separated Integer
---------------------	-------------------------

Description	Specifies the cadence, in milliseconds, of pattern ID 4, described in the LSSGR, GR-506-CORE, "Signaling for Analog Interfaces" section 14, using up to 8 whole numbers (on 1, off 1, on 2, off 2...) separated by commas.
Value Range	0–5000 (0: Continuous) Note Avoid setting 1–50 for any of the values.
Default Value	300,200,1000,200,300,4000

BELL_CORE_PATTERN5_TIMING

Value Format	Comma-separated Integer
Description	Specifies the cadence, in milliseconds, of pattern ID 5, described in the LSSGR, GR-506-CORE, "Signaling for Analog Interfaces" section 14, using up to 8 whole numbers (on 1, off 1, on 2, off 2...) separated by commas.
Value Range	0–5000 (0: Continuous) Note Avoid setting 1–50 for any of the values.
Default Value	500

5.3.32 Call Control Settings

OUTGOING_CALL_LINE_HSy

Parameter Name Example	OUTGOING_CALL_LINE_HS1, OUTGOING_CALL_LINE_HS2, ..., OUTGOING_CALL_LINE_HS8
Value Format	Comma-separated Integer
Description	Specifies which lines (1–8) can be seized when going off-hook to make a call for each handset, using 8 whole numbers (0 or 1) separated by commas. This setting is available only when "MULTI_NUMBER_ENABLE" is set to enable.
Value Range	0: Disable 1: Enable The format must be "x,x,x,x,x,x,x,x" (x: line numbers 1 to 8 starting from the left).
Default Value	1,1,1,1,1,1,1,1
Web User Interface Reference	Line Number (Page 137)

DEFAULT_LINE_SELECT_HSy

Parameter Name Example	DEFAULT_LINE_SELECT_HS1, DEFAULT_LINE_SELECT_HS2, ..., DEFAULT_LINE_SELECT_HS8
Value Format	Comma-separated Integer
Description	Specifies which lines (1–8) to seize automatically when going off-hook to make a call for each handset, using 8 whole numbers (0 or 1) separated by commas. This setting is available only when "MULTI_NUMBER_ENABLE" is set to enable.
Value Range	0: Disable 1: Enable The format must be "x,x,x,x,x,x,x,x" (x: line numbers 1 to 8 starting from the left). "1" must be specified only once as a line that can be seized automatically when going off-hook in this format.
Default Value	1,0,0,0,0,0,0,0
Web User Interface Reference	Default (Page 138)

INCOMING_CALL_GROUP_n

Parameter Name Example	INCOMING_CALL_GROUP_1, INCOMING_CALL_GROUP_2, ..., INCOMING_CALL_GROUP_8
Value Format	Comma-separated Integer
Description	Select the handset (1–8) that calls will arrive at for each line. This setting is available only when "MULTI_NUMBER_ENABLE" is set to enable.
Value Range	0: Disable 1: Enable The format must be "x,x,x,x,x,x,x,x" (x: handset number 1 to 8 starting from the left).
Default Value	1,1,1,1,1,1,1,1
Web User Interface Reference	Line (1–8) (Page 136) Phone Number (Page 137) Handset Number (1–8) (Page 137)

PAGING_ENABLE_HANDSET_n

Parameter Name Example	PAGING_ENABLE_HANDSET_1, PAGING_ENABLE_HANDSET_2, ..., PAGING_ENABLE_HANDSET_8
Value Format	INTEGER
Description	Select the handset (1–8) that calls will arrive (auto answer) at for each line. - Paging - Click to xx

Value Range	1–8
Default Value	1
Web User Interface Reference	Paging (Page 137)

ANONYMOUS_CALL_ENABLE_n

Parameter Name Example	ANONYMOUS_CALL_ENABLE_1, ANONYMOUS_CALL_ENABLE_2, ..., ANONYMOUS_CALL_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to make calls without transmitting the phone number to the called party.
Value Range	- Y: Enable anonymous call - N: Disable
Default Value	N
Web User Interface Reference	Enable Anonymous Call (Page 143)

BLOCK_ANONYMOUS_CALL_ENABLE_n

Parameter Name Example	BLOCK_ANONYMOUS_CALL_ENABLE_1, BLOCK_ANONYMOUS_CALL_ENABLE_2, ..., BLOCK_ANONYMOUS_CALL_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to accept or reject the incoming call without the called party's phone number.
Value Range	- Y: Enable anonymous call block - N: Disable
Default Value	N
Web User Interface Reference	Enable Block Anonymous Call (Page 143)

HOTLINE_ENABLE_HSy

Parameter Name Example	HOTLINE_ENABLE_HS1, HOTLINE_ENABLE_HS2, ..., HOTLINE_ENABLE_HS8
Value Format	BOOLEAN
Description	Specifies whether to enable or disable the Hot line feature.
Value Range	- Y: Enable - N: Disable
Default Value	N
Web User Interface Reference	Handset 1–8 (Enable) (Page 148)

HOTLINE_NUMBER_HSy

Parameter Name Example	HOTLINE_NUMBER_HS1, HOTLINE_NUMBER_HS2, ..., HOTLINE_NUMBER_HS8
Value Format	STRING
Description	Specifies the Hot line number.
Value Range	Max. 32 characters
Default Value	Empty string
Web User Interface Reference	Handset 1–8 (Hotline Number) (Page 148)

HOTLINE_TIM

Value Format	INTEGER
Description	Specifies a time after off hook for Hot line.
Value Range	0–10 (s)
Default Value	2
Web User Interface Reference	Hotline Delay (Page 149)

DISPLAY_NAME_n

Parameter Name Example	DISPLAY_NAME_1, DISPLAY_NAME_2, ..., DISPLAY_NAME_8
Value Format	STRING
Description	Specifies the name to display as the caller on the other party's phone when you make a call.
Value Range	Max. 24 characters Note You can use Unicode characters for this setting.
Default Value	Empty string
Web User Interface Reference	Display Name (Page 142)

VM_SUBSCRIBE_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to send the SUBSCRIBE request to a voice mail server. Note Your phone system must support voice mail.

Value Range	• Y (Send the SUBSCRIBE request) • N (Do not send the SUBSCRIBE request)
Default Value	N
Web User Interface Reference	Send SUBSCRIBE to Voice Mail Server (Page 138)

VM_NUMBER_n

Parameter Name Example	VM_NUMBER_1, VM_NUMBER_2, ..., VM_NUMBER_8
Value Format	STRING
Description	Specifies the phone number used to access the voice mail server. Note • Your phone system must support voice mail.
Value Range	Max. 32 characters
Default Value	Empty string
Web User Interface Reference	Voice Mail Access Number (Page 143)

DIAL_PLAN_n

Parameter Name Example	DIAL_PLAN_1, DIAL_PLAN_2, ..., DIAL_PLAN_8
Value Format	STRING
Description	Specifies a dial format, such as specific phone numbers, that control which numbers can be dialed or how to handle the call when making a call. For details, see 6.3 Dial Plan .
Value Range	Max. 1000 characters
Default Value	Empty string
Web User Interface Reference	Dial Plan (max 1000 columns) (Page 146)

DIAL_PLAN_NOT_MATCH_ENABLE_n

Parameter Name Example	DIAL_PLAN_NOT_MATCH_ENABLE_1, DIAL_PLAN_NOT_MATCH_ENABLE_2, ..., DIAL_PLAN_NOT_MATCH_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to enable dial plan filtering so that a call is not made when the dialed number does not match any of the dial formats specified in "DIAL_PLAN_n".

Value Range	- Y (Enable dial plan filtering) - N (Disable dial plan filtering) Note - If set to "Y", the dialed number will not be sent to the line when the number dialed by the user does not match any of the dial formats specified in the dial plan. - If set to "N", the dialed number will be sent to the line, even if the number dialed by the user does not match any of the dial formats specified in the dial plan.
Default Value	N
Web User Interface Reference	Call Even If Dial Plan Does Not Match (Page 147)

MACRODIGIT_TIM

Value Format	INTEGER
Description	Specifies the length of time, in seconds, that the unit waits when a "T" or "t" has been entered in the dial plan.
Value Range	1–15
Default Value	5
Web User Interface Reference	Timer for Dial Plan (Page 139)

INTERNATIONAL_ACCESS_CODE

Value Format	STRING
Description	Specifies the number to be shown in the place of the first "+" symbol when the phone number for incoming international calls contains "+".
Value Range	Max. 8 characters (consisting of 0–9, *, and #) Note No other characters are allowed.
Default Value	Empty string
Web User Interface Reference	International Call Prefix (Page 140)

COUNTRY_CALLING_CODE

Value Format	STRING
Description	Specifies the country/area calling code to be used for comparative purposes when dialing a number from the incoming call log that contains a "+" symbol.
Value Range	Max. 8 characters (consisting of 0–9)

Default Value	Empty string
Web User Interface Reference	Country Calling Code (Page 140)

NATIONAL_ACCESS_CODE

Value Format	STRING
Description	When dialing a number from the incoming call log that contains a "+" symbol and the country calling code matches, the country calling code is removed and the national access code is added.
Value Range	Max. 8 characters (consisting of 0–9, *, and #)
Default Value	Empty string
Web User Interface Reference	National Access Code (Page 140)

IDLE_SOFT_KEY_A

Value Format	INTEGER
Description	Specifies the soft key (A) during IDLE state.
Value Range	• 1: Phonebook • 2: Menu • 3: Outgoing Call Log • 4: Incoming Call Log • 5: Redial • 6: Page
Default Value	1
Web User Interface Reference	Soft Key A (Left) (Page 115)

IDLE_SOFT_KEY_B

Value Format	INTEGER
Description	Specifies the soft key (B) during IDLE state.
Value Range	• 1: Phonebook • 2: Menu • 3: Outgoing Call Log • 4: Incoming Call Log • 5: Redial • 6: Page
Default Value	2
Web User Interface Reference	Soft Key B (Center) (Page 115)

IDLE_SOFT_KEY_C

Value Format	INTEGER
Description	Specifies the soft key (C) during IDLE state.
Value Range	• 1: Phonebook • 2: Menu • 3: Outgoing Call Log • 4: Incoming Call Log • 5: Redial • 6: Page
Default Value	3
Web User Interface Reference	Soft Key C (Right) (Page 116)

ADMIN_ABILITY_ENABLE_HSy

Parameter Name Example	ADMIN_ABILITY_ENABLE_HS1, ADMIN_ABILITY_ENABLE_HS2, ..., ADMIN_ABILITY_ENABLE_HS8
Value Format	BOOLEAN
Description	Specifies admin rights for each handset. Note If you attempt to configure System Settings without enabling admin rights, an error will occur and configuration will not be possible.
Value Range	• Y: Admin • N: Non Admin
Default Value	Y
Web User Interface Reference	Enable Admin Ability (Page 116)

HANDSET_NAME_HSy

Parameter Name Example	HANDSET_NAME_HS1, HANDSET_NAME_HS2, ..., HANDSET_NAME_HS8
Value Format	STRING
Description	Specifies the handset name.
Value Range	Max. 16 characters

Default Value	HANDSET_NAME_HS1="Handset 1" HANDSET_NAME_HS2="Handset 2" HANDSET_NAME_HS3="Handset 3" HANDSET_NAME_HS4="Handset 4" HANDSET_NAME_HS5="Handset 5" HANDSET_NAME_HS6="Handset 6" HANDSET_NAME_HS7="Handset 7" HANDSET_NAME_HS8="Handset 8"
Web User Interface Reference	Handset Name (Page 114)

EMERGENCY_CALLx

Parameter Name Example	EMERGENCY_CALL1, EMERGENCY_CALL2, ..., EMERGENCY_CALL5
Value Format	STRING
Description	Specifies the emergency number. (Up to 5 emergency numbers)
Value Range	Max. 32 characters (except &, ", ' ; , <, >)
Default Value	Empty string
Web User Interface Reference	1–5 (Page 141)

CALL_REJECTIONx_n

Parameter Name Example	CALL_REJECTION1_1, CALL_REJECTION2_1, ..., CALL_REJECTION20_1, CALL_REJECTION1_2, CALL_REJECTION2_2, ..., CALL_REJECTION20_2, ..., CALL_REJECTION1_8, CALL_REJECTION2_8, ..., CALL_REJECTION20_8
Value Format	STRING
Description	Specifies the rejected number per line. (Up to 20 rejected numbers)
Value Range	Max. 32 characters (except &, ", ' ; , <, >)
Default Value	Empty string
Web User Interface Reference	1–20 (Page 147)

CLICKTO_ENABLE_n

Parameter Name Example	CLICKTO_ENABLE_1, CLICKTO_ENABLE_2, ..., CLICKTO_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to enable or disable Click to Dial/Answer/Hold functions.

Value Range	• Y: Enable • N: Disable
Default Value	N
Web User Interface Reference	Enable Click to Call (Page 146)

CALLPARK_NOTIFICATION_ENABLE_n

Parameter Name Example	CALLPARK_NOTIFICATION_ENABLE_1, CALLPARK_NOTIFICATION_ENABLE_2, ..., CALLPARK_NOTIFICATION_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to respond to call park notifications from the server.
Value Range	• Y: Enable • N: Disable
Default Value	N
Web User Interface Reference	Enable Call Park Notification (Page 146)

SHARED_CALL_ENABLE_n

Parameter Name Example	SHARED_CALL_ENABLE_1, SHARED_CALL_ENABLE_2, ..., SHARED_CALL_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to enable the Shared Call feature of the SIP server, which is used to share one line among the units. Note • Availability depends on your phone system.
Value Range	• Y (Enable shared call) • N (Disable shared call) Note • If set to "Y", the SIP server will control the line by using a shared-call signaling method. • If set to "N", the SIP server will control the line by using a standard signaling method.
Default Value	N
Web User Interface Reference	Enable Shared Call (Page 145)

FWD_DND_SYNCHRO_ENABLE_n

Parameter Name Example	FWD_DND_SYNCHRO_ENABLE_1, FWD_DND_SYNCHRO_ENABLE_2, ..., FWD_DND_SYNCHRO_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether to synchronize the Do Not Disturb and Call Forward settings, configured via the Web user interface or phone user interface, between the unit and the portal server that is provided by your phone system dealer/service provider. Note Even if you specify "Y", this feature may not function properly if your phone system does not support it. Before you configure this setting, consult your phone system dealer/service provider.
Value Range	- Y (Enable Do Not Disturb/Call Forward synchronization) - N (Disable Do Not Disturb/Call Forward synchronization)
Default Value	N
Web User Interface Reference	Enable Key Synchronization (Page 145)

MOH_SERVER_URI_n

Parameter Name Example	MOH_SERVER_URI_1, MOH_SERVER_URI_2, ..., MOH_SERVER_URI_8
Value Format	STRING
Description	Specifies MoH server URI for each line.
Value Range	Max. 384 characters
Default Value	Empty string
Web User Interface Reference	MoH Server URI (Page 146)

FWD_DND_CONTROL_ENABLE

Value Format	BOOLEAN
Description	Specifies whether to enable the telephone for FWD/DND.
Value Range	- Y: Enable - N: Disable
Default Value	Y

FWD_DND_SYNCHRO_MODE

Value Format	INTEGER
--------------	---------

Description	Specifies the mode of FWD/DND synchronizing with server.
Value Range	1: as feature event 2: Panasonic original 3: Entel
Default Value	1

HOLD_AND_CALL_ENABLE

Value Format	BOOLEAN
Description	Specifies whether making new call after holding the call or not.
Value Range	- Y: Enable (Hold and Call) - N: Disable (Hold)
Default Value	N

AUTO_CALL_HOLD

Value Format	BOOLEAN
Description	Specifies whether calls are disconnected or held when an other line is selected while having a conversation.
Value Range	- Y (Enable Auto Call Hold) - N (Disable Auto Call Hold)
Default Value	Y

SIP_RESPONSE_CODE_DND

Value Format	INTEGER
Description	Specifies the response code when a call is received in Do Not Disturb mode.
Value Range	400–699
Default Value	403

SIP_RESPONSE_CODE_CALL_REJECT

Value Format	INTEGER
Description	Specifies the response code when a call is rejected.
Value Range	400–699
Default Value	603

CW_ENABLE_n

Parameter Name Example	CW_ENABLE_1, CW_ENABLE_2, ..., CW_ENABLE_8
Value Format	BOOLEAN
Description	Specifies whether automatic call waiting is enabled.
Value Range	- Y (Enable Call Waiting) - N (Disable Call Waiting)
Default Value	Y
Web User Interface Reference	Enable Call Waiting (Page 143)

RETURN_VOL_SET_DEFAULT_ENABLE

Value Format	BOOLEAN
Description	Specifies whether the volume is returned to its default setting after each call.
Value Range	- Y (Volume returns to the default setting after each call) - N (Volume does not change after each call)
Default Value	N

CONFERENCE_SERVER_URI

Value Format	STRING
Description	Specifies the URI for a conference server, which consists of "sip:", a user part, the "@" symbol, and a host part, for example, "sip:conference@example.com". Note Availability depends on your phone system.
Value Range	Max. 256 characters (except ", &, ', :, ;, <, >, and space)
Default Value	Empty string
Web User Interface Reference	Conference Server URI (Page 139)

PRIVACY_MODE_n

Parameter Name Example	PRIVACY_MODE_1, PRIVACY_MODE_2, ..., PRIVACY_MODE_8
Value Format	BOOLEAN
Description	Enable/Disable barge-in with other handset.
Value Range	- Y: Privacy on - N: Privacy off

Default Value	Y
---------------	---

PARALLEL_HSNOM

Parameter Name Example	PARALLEL_HSNOM1, PARALLEL_HSNOM2, ..., PARALLEL_HSNOM8
Value Format	INTEGER
Description	Specifies the handset number for the paired handset (KX-TPA60) when connected in parallel. "m" refers to the master handset (KX-TPA65). For details, see 6.6 Pairing (Parallel Mode) . Note Be sure to designate the KX-TPA65 as the master handset and the KX-TPA60 as the slave handset. Paired handsets cannot be configured for other pairings.
Value Range	0: Off, 1–8 (handset number)
Default Value	0
Web User Interface Reference	Slave Handset Number (Master Desk Phone Number 1–8) (Page 117)

PARALLEL_MODEm

Parameter Name Example	PARALLEL_MODE1, PARALLEL_MODE2, ..., PARALLEL_MODE8
Value Format	INTEGER
Description	Specifies the off-hook behavior of the other handset when one handset is in use. For details, see 6.6 Pairing (Parallel Mode) .
Value Range	0: Busy 1: Take over call
Default Value	1
Web User Interface Reference	Mode (Master Desk Phone Number 1–8) (Page 117)

5.3.33 Logging Settings

SYSLOG_ADDR

Value Format	STRING
Description	Specifies the IP address or FQDN of Syslog server.
Value Range	Max. 256 characters
Default Value	Empty string

SYSLOG_PORT

Value Format	INTEGER
Description	Specifies the port of Syslog server.
Value Range	1–65535
Default Value	514

LOGGING_LEVEL_DNS

Value Format	INTEGER
Description	Specifies the log level of DNS.
Value Range	0–6
Default Value	0

LOGGING_LEVEL_NW1

Value Format	INTEGER
Description	Specifies the log level of SNTP.
Value Range	0–6
Default Value	0

LOGGING_LEVEL_FILE

Value Format	INTEGER
Description	Specifies the log level of FILE downloading.
Value Range	0–6
Default Value	0

LOGGING_LEVEL_SIP

Value Format	INTEGER
Description	Specifies the log level of SIP.
Value Range	0–6
Default Value	0

LOGGING_LEVEL_TR069

Value Format	INTEGER
Description	Specifies the log level of TR-069.
Value Range	0–6
Default Value	0

LOGGING_LEVEL_STUN

Value Format	INTEGER
Description	Specifies the log level of STUN.
Value Range	0–6
Default Value	0

LOGGING_LEVEL_NW2

Value Format	INTEGER
Description	Specifies the log level of Xsi, XML, XMPP, LDAP.
Value Range	0–6
Default Value	0

LOGGING_LEVEL_CFGPARSE

Value Format	INTEGER
Description	Specifies the log level of configuration parse.
Value Range	0–6
Default Value	0

Section 6

Useful Telephone Functions

This section explains phone number settings, dial plan settings, the phonebook import/export function, the Broadsoft XSI function, the BroadCloud (Presence) function and Pairing (Parallel Mode).

6.1 Line Settings

6.1.1 Multi Number Settings

A unit can be used with 8 handsets.

You can assign a maximum of 8 different phone numbers for handsets.

Each available phone number (line) can be assigned to handsets as desired to handle incoming and outgoing calls.

This feature is available only when "MULTI_NUMBER_ENABLE"="Y" is set.

When "MULTI_NUMBER_ENABLE"="N", each handset has exclusive use of the line it has been assigned to. (Handset 1 uses line 1, handset 2 uses line 2, ... handset 8 uses line 8.)

Programming Example 1

The following programming example shows a configuration where handsets have their own phone numbers, and handsets also share a common phone number.

You can program this table using Web user interface programming (→ see **4.6.1.1 Group Handset / Handset select for receiving call**).

For details about configuring these settings by configuration file programming, see **5.3.32 Call Control Settings-INCOMING_CALL_GROUP_n**.

[Grouping Handset / Handset selection for receiving calls]

Line No.	Phone Number	Handset No.								Paging
		1	2	3	4	5	6	7	8	
1	1111	✓								HS1
2	2222		✓							HS1
3	3333			✓						HS1
4	4444				✓					HS1
5	5555					✓				HS1
6	6666						✓			HS1
7	7777									HS1
8	8888	✓	✓	✓	✓	✓	✓			HS1

Case 1:

A call dialed to "1111" will be received by handset 1.

Case 2:

A call dialed to "2222" will be received by handset 2.

Case 3:

A call dialed to "8888" will be received by handsets 1–6.

When receiving a paging call, handset 1 will automatically answer the call.

Programming Example 2

The following programming example shows a configuration where handsets 1–3 dial with lines 1–3, respectively. Each handset uses the line set in **[Default]** by default.

You can program this table using Web user interface programming (→ see **4.6.1.2 Handset and Line Number select for making call**).

For details about configuring these settings by configuration file programming, see **5.3.32 Call Control Settings–INCOMING_CALL_GROUP_n**.

[Handset and Line No. selection for making calls]

Handset No.	Line No.								Default
	1	2	3	4	5	6	7	8	
1	✓	✓	✓						1
2	✓	✓	✓						2
3	✓	✓	✓						3
4									
5									
6									
7									
8									

Case 1:

When a user goes off-hook with handset 1, line 1 is seized and dialed by default. Line 2 and line 3 can also be seized and dialed.

Case 2:

When a user goes off-hook with handset 2, line 2 is seized and dialed by default. Line 1 and line 3 can also be seized and dialed.

Case 3:

When a user goes off-hook with handset 3, line 3 is seized and dialed by default. Line 1 and line 2 can also be seized and dialed.

Note

- You can make a call with one of the phone numbers other than the default phone number. For details about the operations, refer to the Operating Instructions on the Panasonic Web site (→ see **Introduction**).

6.2 Phonebook Import and Export

This section explains how to import and export phonebook data. Phonebook data of the cordless handset includes names and phone numbers.

(The description below uses the KX-TPA60 cordless handset as an example.)

Phonebook data on the cordless handset can be exported, edited with editor tools, and imported again. In addition, phonebook data created with other software can be imported into the cordless handset.


You can use the phonebook import and export functions as follows.

- A. Phonebook data
- B. Microsoft Excel
- C. Microsoft Outlook

Editing Phonebook Data on a PC

The phonebook data stored on the cordless handset can be edited using a program such as Microsoft Excel® spreadsheet software. For details about the operation, see **6.2.2 Editing with Microsoft Excel**.

You can export the phonebook data to the PC, edit the exported file using appropriate software, and then import it into the cordless handset.

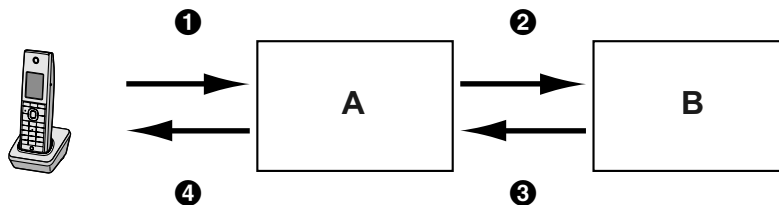


Importing Address Book Data from a PC

You can import address book data stored in programs, such as Microsoft Outlook® messaging and collaboration client, into the cordless handset.


First, export address book data from the e-mail software to a program such as Microsoft Excel, edit it as necessary, and then import the exported data into the cordless handset.

For details about the operation, see **6.2.3 Exporting Data from Microsoft Outlook**.

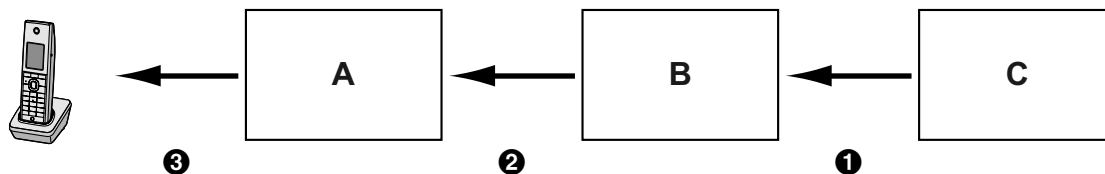


Backing up Phonebook Data

You can export the phonebook data from the cordless handset to a PC and keep the file as a backup in case of data loss or for use when exchanging the cordless handset.

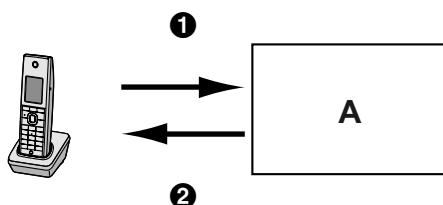


Importing the Same Phonebook Data to other Cordless handsets

You can export the phonebook data created on a cordless handset to a PC, and then import it into other cordless handsets.

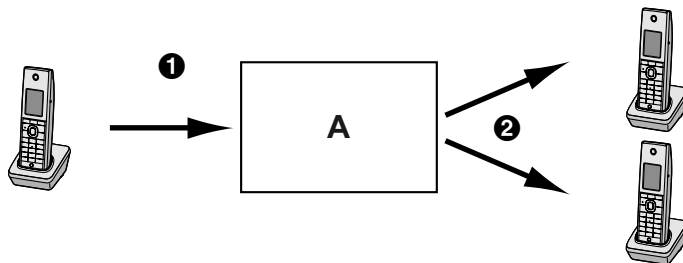

You can also import phonebook data created on a PC to other cordless handsets.

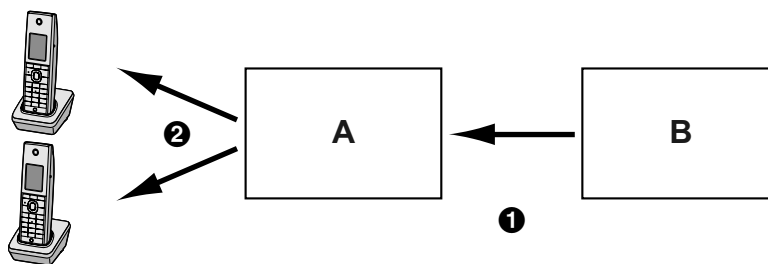

Import/Export File Format

The file format used for importing and exporting the phonebook data is "TSV". When importing or exporting using Microsoft Excel, "CSV (Comma-separated Value)" is generally used as the file format.

A phonebook entry in the cordless handset has 9 fields. An entry in the phonebook data is represented in text as "record ID <TAB> name <TAB> reserved <TAB> phone number <TAB> phone number <TAB> phone number <TAB> phone number <TAB> reserved <line break>".

The text data can be edited using any text editing software that supports UTF-16 encoding with a BOM and little endian byte ordering. When you save the text file, it must be saved using the same format, or the text might become garbled.

Phonebook Data in Text Format

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1		Aaron MacDowel				501		1234001								
2		Barbara Nicolls				502		1234002								
3		Carl O'Brien				503		1234003								
4		Dorothy Parker						1234004								
...		...				...		...								
...		...				...		...								

- ❶ Record ID (Unique ID: 1–500)
- ❷ Tab
- ❸ Name (up to 24 characters)
- ❹ Tab
- ❺ Reserved (up to 24 characters)
- ❻ Tab
- ❼ Phone number (up to 32 digits)
- ❽ Tab
- ❾ Phone number (up to 32 digits)
- ❿ Tab
- ⓫ Phone number (up to 32 digits)
- ⓬ Tab
- ⓭ Phone number (up to 32 digits)
- ⓮ Tab
- ⓯ Reserved

6.2.1 Import/Export Operation

The following procedures explain how to import phonebook data to cordless handsets, and how to export phonebook data from cordless handsets to a PC through the Web user interface.

For details about the settings, see **4.6.6 Import Phonebook** or **4.6.7 Export Phonebook**.

To import phonebook data

1. Click the **[Telephone]** tab, and then click **[Import Phonebook]**.
2. Select the handset number using **[Handset Number]** pulldown Menu.
3. In **[File Name]**, enter the full path to the file that you want to import, or click **Browse** to select the phonebook data file that you want to import.
4. Click **[Import]**.

To export the phonebook data

1. Click the **[Telephone]** tab, and then click **[Export Phonebook]**.
2. Select the handset number using **[Handset Number]** pulldown Menu.
3. Click **[Export]**.

4. On the "Now Processing File Data" screen, click the text "HERE" in the displayed message, or wait until **File Download** window appears.

Note

- Depending on the security settings of your Web browser, pop-up menus might be blocked. If the file cannot be exported successfully, try the export operation again or change the security settings of your Web browser.
5. Click **Save** on **File Download** window.
 6. On the **Save As** window, select a folder to save the exported phonebook data to, enter the file name in **File name**, select **TSV File** for **Save as type**, and click **Save**.
If the file is downloaded successfully, the **Download complete** window appears.
 7. Click **Close**.
 8. To exit the operation, click the text "HERE" in the displayed message.
The **[Export Phonebook]** screen returns.

Note

- Make sure that the import source or cordless handset is in standby mode.
- The import source or cordless handset must be specified at the time of import/export. The imported data is added to the existing phonebook data.
 - If the existing phonebook data has an entry with the same record ID as an imported entry, the entry is overwritten with the imported entry.
 - If the existing phonebook data has an entry with no record ID, it will be left in the phonebook.
 - If the imported phonebook data has an entry with no record ID, the imported entry is added as a new entry unless an existing entry with the same name and phone number is found.

Phonebook entries that are added via the cordless handset are not assigned record IDs. Therefore, it is recommended to export phonebook data from the cordless handset, assign record IDs manually and then re-import them. Doing so can help manage phonebook data.
- The phonebook for a cordless handset has the following limitations:
 - A maximum of 500 phonebook entries can be stored in the cordless handset. If the cordless handset already has phonebook data, it accepts up to the 500th entry, including the existing entries. The rest of the entries will not be imported, and the message "**Memory Full**" is displayed on the cordless handset.
 - The name can contain up to 24 characters.
 - The phone number can contain up to 32 digits.
 - Phonebook entries exceeding the characters or digits limits cannot be imported properly.
- If the export is interrupted by an operation on the cordless handset, only the data that has been successfully exported before the interruption is exported to a file.

6.2.2 Editing with Microsoft Excel

You can edit exported phonebook data on a PC with software such as Microsoft Excel. You can then import the phonebook data into cordless handsets.

To open the phonebook data on a PC


1. Open Microsoft Excel.
2. Click **Office Button**, and then **Open**.

Note


- Make sure to open a TSV file in this procedure. If you change the extension of a TSV file to ".csv", the file will open by simply double-clicking it. However, the character encoding of the file might not be recognized properly, resulting in garbled characters, or the phone numbers might be recognized as numbers, resulting in data alteration.

6.2.2 Editing with Microsoft Excel

3. Select **All Files** for the file type, select the exported phonebook data file, and click **Open**.

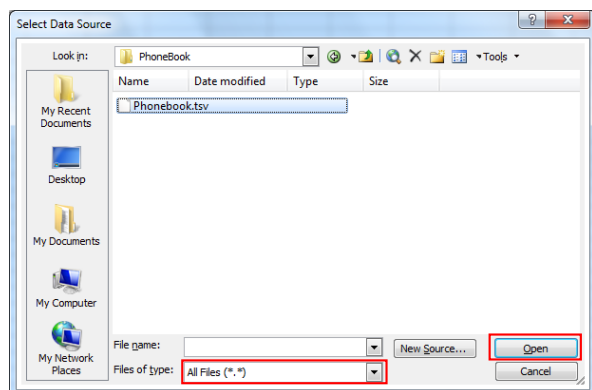


4. On the **Text Import Wizard - Step 1 of 3** window, click **Next**.

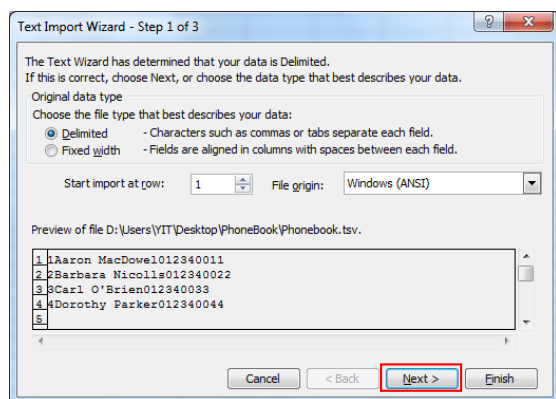


Note

- Regardless of what is selected for **File origin**, the file will be processed normally if the format is appropriate.

5. On the **Text Import Wizard - Step 2 of 3** window, select **Tab** for **Delimiters**, and then click **Next**.

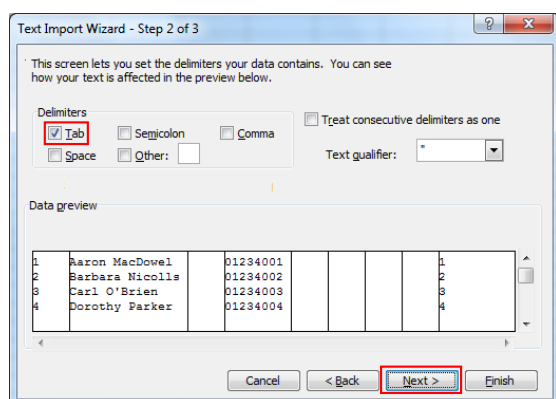

- On the **Text Import Wizard - Step 3 of 3** window, select all columns in **Data preview**, select **Text** in **Column data format**, and then click **Finish**.
The TSV file will be opened.

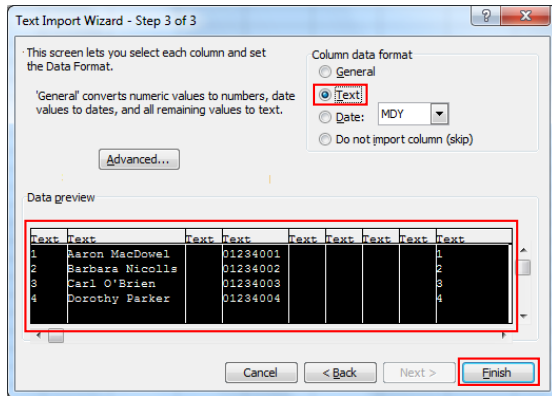

Note

- Phone numbers must be treated as text strings. Otherwise, a "0" at the beginning of a phone number might disappear when exported.

To save the phonebook data for importing to the cordless handset

- After editing the phonebook entries, click **Office Button**, and then **Save As**.
- Enter a file name in **File name**, and select **Unicode Text** in **Save as type**.
The file will be saved in UTF-16 little endian with a BOM. Fields will be separated by tabs.
- Click **Save**.
A message warning you about file compatibility will be displayed.
- Click **Yes**.
The file will be saved as a Unicode text file, with the fields separated by tabs.

Note

- The procedure may vary depending on the software version of Microsoft Excel. Therefore, files exported and imported between the cordless handset and Microsoft Excel are not always compatible with each other.

6.2.3 Exporting Data from Microsoft Outlook

You can export address book data stored in programs such as Microsoft Outlook, and then edit the exported data with a program such as Microsoft Excel in order to import it to the cordless handset.

To export the Microsoft Outlook address book data

- In Microsoft Outlook, click **File**, and then click **Import and Export**.
- Select **Export to a file**, and click **Next**.
- Select **Tab Separated Values (Windows)**, and click **Next**.
- Select **Contacts**, and click **Next**.
- Click **Browse**, select a folder, and then enter the file name to export the data to.
- Click **OK**.
- On the **Export to a File** window, click **Next**.
- Click **Map Custom Fields**.
- Clear all items in the **To** list by clicking **Clear Map**. Then, drag only **Last Name** and **Business Phone** from the **From** list to the **To** list, and click **OK**.

10. On the **Export to a File** window, click **Finish**.
The data will be exported.

Note

- You can export data from Microsoft Outlook Express by using a similar procedure. It is also possible to export data from other applications that are compatible with Microsoft Excel.
- You can open the exported file in Microsoft Excel, and then import it to the cordless handset. For details, see **6.2.2 Editing with Microsoft Excel**.
- First and middle names are not exported using this procedure. You can export all necessary items and edit the entry before importing them to the cordless handset.
- In the file exported from Microsoft Outlook, fields are separated by tabs and encoded using the default character encoding for your operating system.

6.3 Dial Plan

The dial plan settings control how numbers dialed by the user are transmitted over the network. Dial plan settings can be configured on a per-line basis. These settings can be programmed either through the Web user interface (→ see **4.6.3.2 Dial Plan**) or by configuration file programming (→ see **5.3.32 Call Control Settings**).

6.3.1 Dial Plan Settings

To set Dial Plan

1. In the Web user interface, click the **[Telephone]** tab, and then click **[Call Control [Line 1]–[Line x]]**.
2. In **[Dial Plan]**, enter the desired dial format.
The dial plan settings can be configured for each line separately.
For details about available characters for the dial format, see **Available Values for the Dial Plan Field** in this section.
3. Select **[Yes]** or **[No]** for **[Call Even If Dial Plan Does Not Match]**.
 - If you select **[Yes]**, the call will be made even if the user dials a phone number that does not match the dial format in **[Dial Plan]**.
 - If you select **[No]**, the call will be made only if the user dials a phone number that matches the dial format in **[Dial Plan]**.

Note

- For details about configuring these settings by configuration file programming, see "DIAL_PLAN_n" and "DIAL_PLAN_NOT_MATCH_ENABLE_n" in **5.3.32 Call Control Settings**.

Available Values for the Dial Plan Field

The following table explains which characters you can use in the dial format, and what the characters mean.

Element	Available Value	Description
String	0–9, [, -,], <, :, >, *, #, !, S, s, T, t, X, x, ., , +	You can enter dial plan descriptions using a combination of the characters listed as available values.
Digit	0–9, *, #, +	Example: "123" If the dialed phone number is "123", the call is made immediately.

Element	Available Value	Description
Wildcard	X, x	Example: "12xxxxx" If the dialed phone number is "12" followed by any 5-digit number, the call is made immediately.
Range	[]	Example: "[123]" If the dialed phone number is either one of "1", "2", or "3", the call is made immediately.
Subrange	-	Example: "[1-5]" If the dialed phone number is "1", "2", "3", "4", or "5", the call is made immediately. A subrange is only valid for single-digit numbers. For example, "[4-9]" is valid, but "[12-21]" is invalid.
Repeat	.	Example: "1." If the dialed phone number is "1" followed by zero or more "1"s (e.g., "11", "111"), the call is made.
Substitution	<(before):(after)>	Example: "<101:9999>" If the dialed phone number is "101", "101" is replaced by "9999", and then the call is made immediately.
Timer	S, s (second)	Example: "1x.S2" If the dialed phone number begins with "1", the call is made after a lapse of 2 seconds. The number (0–9) followed by "S" or "s" shows the duration in seconds until the call is made.
Macro Timer	T, t	Example: "1x.T" If the dialed phone number begins with "1", the call is made after a lapse of "T" seconds. The value of "T" or "t" can be configured through the Web user interface (→ see [Timer for Dial Plan] in 4.6.2.1 Call Control).
Reject	!	Example: "123xxx!" If the dialed phone number is "123" followed by 3 digits, the call is not made.
Alternation		Example: "1xxxx 2xxx" If the dialed phone number is "1" followed by 4 digits, or "2" followed by 3 digits, the call is made immediately. You can use this element to specify multiple numbers.
Comma	,	Example: "9,xxxxxxxxxx.T" If 9 is dialed, the second dial tone is heard, and then 11 digits are dialed, the call is made after waiting "T" seconds. * The dialing will include the initially dialed "9".

Note

- You can enter up to 1000 characters in **[Dial Plan]**.
- You can assign up to 100 dial plans separated by "|" in **[Dial Plan]**.
- You can assign up to 32 digits per dial plan in **[Dial Plan]**.
- You can assign up to 10 substitutions in **[Dial Plan]**.
- After the user completes dialing, the cordless handset immediately sends all the dialed digits if **[Call Even If Dial Plan Does Not Match]** is set to **[Yes]** in the Web user interface or if

"DIAL_PLAN_NOT_MATCH_ENABLE_n" is set to "N" in a configuration file. The cordless handset recognizes the end of dialing as follows:

- The inter-digit timer expires (→ see **[Inter-digit Timeout]** in **4.6.2.1 Call Control** in the Web user interface or "INTDIGIT_TIM" in **5.3.30 Telephone Settings** in the configuration file).
- The user presses **[ENTER]** or the # key.
- The call is initiated after going off-hook (pre-dial).

Dial Plan Example

The following example shows dial plans containing character sequences separated by "|".

Example: "[2346789]11|01[2-9]x.[2-9]xxxxxxxx"

Complete Match:

Example: "[2346789]11|01[2-9]x.[2-9]xxxxxxxx"

- If the dialed phone number is "211", "911" and so on, the call is made immediately.

Example: "[2346789]11|01[2-9]x.[2-9]xxxxxxxx"

- If the dialed phone number is "2123456789", "5987654321" and so on, the call is made immediately.

Partial Match (when the dial plan contains "."):

Example: "[2346789]11|01[2-9]x.[2-9]xxxxxxxx"

- If the dialed phone number is "01254", "012556" and so on, the call is made after the inter-digit timer expires.

Partial Match (when the dial plan does not contain "."):

Example: "[2346789]11|01[2-9]x.[2-9]xxxxxxxx"

- If the dialed phone number is "21", "91" and so on when **[Call Even If Dial Plan Does Not Match]** is set to **[Yes]**, the call is made after the inter-digit timer expires.
- If the dialed phone number is "21", "91" and so on when **[Call Even If Dial Plan Does Not Match]** is set to **[No]**, the call is denied after the inter-digit timer expires.

Example: "[2346789]11|01[2-9]x.[2-9]xxxxxxxx"

- If the dialed phone number is "21234567", "598765432" and so on when **[Call Even If Dial Plan Does Not Match]** is set to **[Yes]**, the call is made after the inter-digit timer expires.
- If the dialed phone number is "21234567", "598765432" and so on when **[Call Even If Dial Plan Does Not Match]** is set to **[No]**, the call is denied after the inter-digit timer expires.

No Match:

Example: "[2346789]11|01[2-9]x.[2-9]xxxxxxxx"

- If the dialed phone number is "0011", "1011" and so on when **[Call Even If Dial Plan Does Not Match]** is set to **[Yes]**, the call is made after the inter-digit timer expires.
- If the dialed phone number is "0011", "1011" and so on when **[Call Even If Dial Plan Does Not Match]** is set to **[No]**, the call is denied.

6.4 Broadsoft XSI (Xtended Services Interface)

6.4.1 Outline

BroadWorksXsi is an API library used to support the integration of Internet service-based BroadWorks functionality to create web applications and mashups (web application hybrids).

The KX-TGP600 uses the Broadsoft XSI (Xtended Services Interface) to run the following services.

1. Remote Office
2. AnyWhere
3. Simultaneous Ring Personal
4. Calling Line ID Delivery Blocking (Anonymous Call)
5. Call Forward
6. Do Not Disturb
7. Anonymous Call Rejection

(1) Remote Office

The Remote Office function allows you to use your home phone or cellular phone as your office phone. All incoming calls are forwarded from the IP phone (the KX-TGP600) to the Remote Office phone number.

(2) AnyWhere

The AnyWhere function is for remote users to easily access their IP phone's functions (such as making and receiving calls, and voicemail) from any phone.

(3) Simultaneous Ring Personal

The Simultaneous Ring Personal function enables up to 10 other phone numbers to ring at the same time an IP phone (the KX-TGP600) receives a call.

(4) Calling Line ID Delivery Blocking (Anonymous Call)

The Calling Line ID Delivery Blocking (Anonymous Call) function sets the caller information for calls made from an IP phone (the KX-TGP600) to "Anonymous Call".

(5) Call Forward

The Call Forward function forwards incoming calls to an IP phone (the KX-TGP600) to a specified phone number.

* When Feature Key Synchronization is set (FWD_DND_SYNCHRO_ENABLE_n="Y", see Page 299), the Call Forward function will not operate as an XSI function.

(6) Do Not Disturb

The Do Not Disturb function rejects incoming calls to the IP phone (the KX-TGP600).

* When Feature Key Synchronization is set (FWD_DND_SYNCHRO_ENABLE_n="Y", see Page 299), the Do Not Disturb function will not operate as an XSI function.

(7) Anonymous Call Rejection

The Anonymous Call Rejection function rejects calls made to the IP phone (the KX-TGP600) as Anonymous Calls.

6.4.2 XSI Service Settings

XSI services can be used when "MULTI_NUMBER_ENABLE"="N" is set.

Phone settings for using XSI services can be set using configuration parameters or the Web user interface (administrators only).

See **4.3.7 Xtended Service Settings** for making settings using the Web user interface.

The following parameter names will be displayed and can be set as needed.

Parameter Name	Description	Reference
XSI_ENABLE	Enables XSI services.	Page 209

6.5.1 Outline

Parameter Name	Description	Reference
XSI_SERVER	Specifies the XSI server.	Page 210
XSI_SERVER_TYPE	Specifies the communication method.	Page 210
XSI_SERVER_PORT	Specifies the port used for communication with the XSI server.	Page 210
XSI_USERID_n	Specifies the user name for each user (account) that will use XSI.	Page 210
XSI_PASSWORD_n	Specifies the password for each user (account) that will use XSI.	Page 211
XSI_PHONEBOOK_ENABLE_n	Specifies whether to enable or disable the Xsi phonebook service.	Page 211
XSI_PHONEBOOK_TYPE_n	Specifies the type of Xsi phonebook.	Page 211
XSI_CALLLOG_ENABLE_n	Specifies whether to enable or disable the Xsi call log service.	Page 211

Note

To change settings for the following XSI services using a handset, the parameter ADMIN_ABILITY_ENABLE_HSy="Y" (see Page 296) must be set. (When ADMIN_ABILITY_ENABLE_HSy="N" is set, the settings can only be viewed.)

- Remote Office ("Remote Office")
- AnyWhere ("Anywhere")
- Simultaneous Ring Personal ("SimultaneousRing")
- Calling Line ID Delivery Blocking ("Anonymous Call")
- Anonymous Call Rejection ("Block Anonymous")

Note

The text in parentheses are shown on the handset display.

Operations for accessing the above XSI services

1.  / **MENU**
2. **[▲]/[▼]/[◀]/[▶]**:  → **OK**
3. **[▲]/[▼]**: "Call Settings" → **OK**
4. **[▲]/[▼]**: "Remote Office", "Anywhere", "SimultaneousRing", "Anonymous Call", or "Block Anonymous" → **OK**

6.5 BroadCloud (Presence)

6.5.1 Outline

The KX-TGP600 supports the following BroadCloud functions.

(1) BroadCloud Buddies

View the information of your Buddies.

(2) BroadCloud Favorites

View the information of your Buddies that have been marked as Favorites.

(3) BroadCloud Presence

Shares presence statuses.

6.5.2 BroadCloud (Presence) Function Settings

Phone settings for using XMPP functions can be set using configuration parameters or the Web user interface (administrators only).

See **4.3.8 UC Settings** for making settings using the Web user interface.

The following parameter names will be displayed and can be set as needed.

Parameter Name	Description	Reference
UC_ENABLE	Enables BroadCloud services.	Page 212
UC_USERID_HSy	Specifies user IDs for the BroadCloud server.	Page 212
UC_PASSWORD_HSy	Specifies passwords for the BroadCloud server.	Page 212
XMPP_SERVER	Specifies the IP address or FQDN of the XMPP server.	Page 213
XMPP_PORT	Specifies the communication port for XMPP.	Page 213
XMPP_TLS_VERIFY	Specifies the TLS (Transport Layer Security) certification validation type for protocol communication.	Page 213
XMPP_ROOT_CERT_PATH	Specifies the path (URL) of the ROOT certificate for XMPP.	Page 213
XMPP_CLIENT_CERT_PATH	Specifies the path (URL) of the Client certificate for XMPP.	Page 213
XMPP_PEKY_PATH	Specifies the path (URL) of the private key for XMPP.	Page 214

6.5.3 Handset Operation of BroadCloud (Presence) Functions

Operations for Viewing the Buddies List

1. [◀]
2. [▲]/[▼]: "Buddies" → **OK**
3. The Buddies list is displayed.

Operations for Viewing the Favorites List

1. [▶]
2. The Favorites list is displayed.

Operations to Change Your Handset's Presence

1. [◀]
2. [▲]/[▼]: "My phone" → **OK**
3. Press [▲] or [▼] to select the presence status to set (Available/Away/Busy/Offline/Invisible).
[▲]/[▼]: "Available", "Away", "Busy", "Offline" or "Invisible" → **OK**

Presence Status Icons

6.6.1 Outline

When Buddies or Favorites lists are displayed, presences are indicated by icons.

Lit/Flashing	Presence Status	Remarks
Off	Offline	Indicates user is offline.
Lit Green	Available	Indicates user is available.
Flashing Red	Away	Indicates user is away from their phone.
Lit Red	Busy	Indicates user is busy.


6.6 Pairing (Parallel Mode)

6.6.1 Outline

By using a cordless desktop phone (KX-TPA65) as a master desk phone, a wireless handset (KX-TPA60) can be set to be paired with it so that the phone number (account) of the master desk phone (KX-TPA65) is applied to the slave (paired) handset (KX-TPA60).

With pairing settings, the desktop phone (KX-TPA65) can be used while you are sitting at your desk, and the slave handset (KX-TPA60) can be used while away from your desk to enhance your business activities.

1. Image of Pairing (Parallel Mode) Operation (Incoming Call)

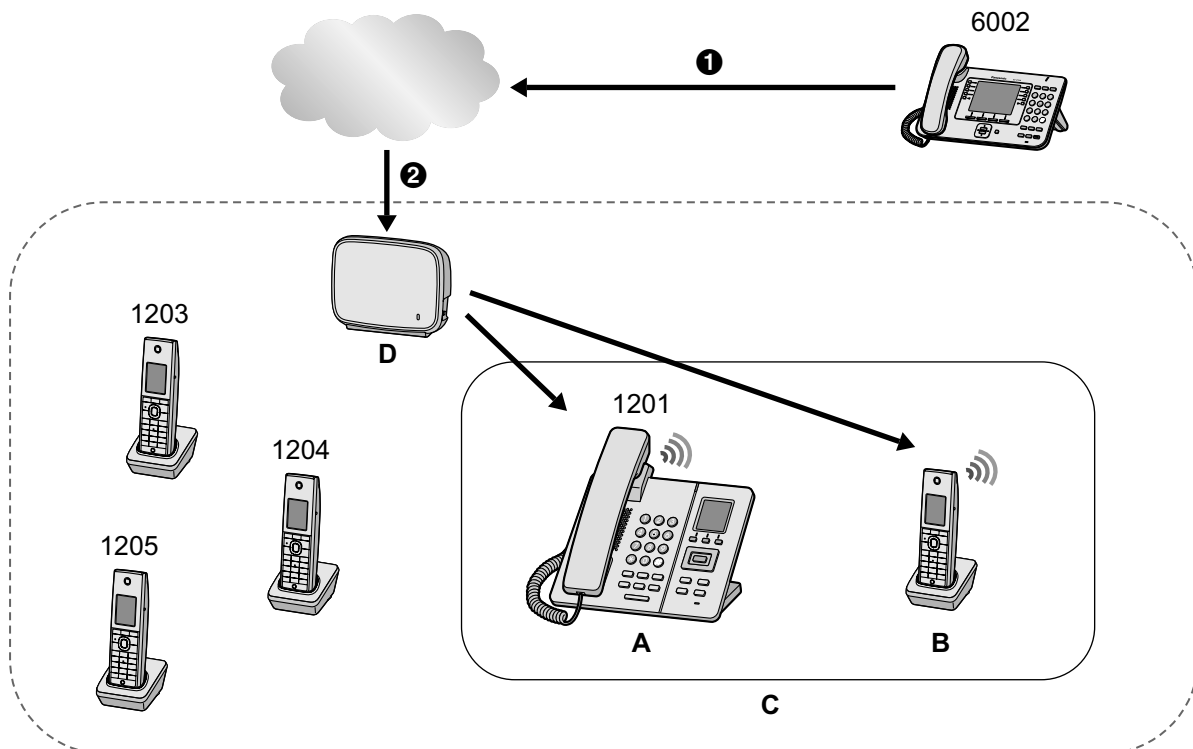

① Call from 6002

② Call to 1201

A. Master Desk Phone (KX-TPA65)

- B. Paired Handset (KX-TPA60)
- C. Paired Phones
- D. Base Unit (KX-TGP600)

 : Call Rings

Operation Description

1. A call is made to Ext. 1201 from Phone C.
2. When the base unit (KX-TGP600) receives the call, Phone A and Phone B both ring.
3. The call can be answered from either Phone A or Phone B.

Note

- While pairing is set, the extension originally set for the paired handset is disabled.
- While pairing is set, calls made from the paired handset are handled as calls made from the master desk phone (in the example, 1201). (The caller information for such calls will be that of extension 1201.)
- While pairing is set and one of the paired phones is busy and the other paired phone goes off hook, a setting can be made for whether to continue the conversation with the phone that went off hook, or to send a busy signal to the phone that went off hook (prohibiting operation with that phone). The setting can be made using configuration parameters or the Web user interface (administrators only).

6.6.2 Pairing (Parallel Mode) Settings

Pairing (Parallel Mode) settings can be made using configuration parameters or the Web user interface (administrators only).

Up to 4 pairing settings can be made.

Note


- Only desktop phones (KX-TPA65) can be set as master desk phones.
- Handsets that are already paired cannot be set as a pair with another phone. (Note that functionality with such settings cannot be guaranteed.)

Pairing Setting Example

As an example, 4 handsets (KX-TPA60) with a KX-TGP600 base unit, along with 4 desktop phones (KX-TPA65) are in use.

6.6.2 Pairing (Parallel Mode) Settings

Here the maximum 4 pairing settings will be explained.

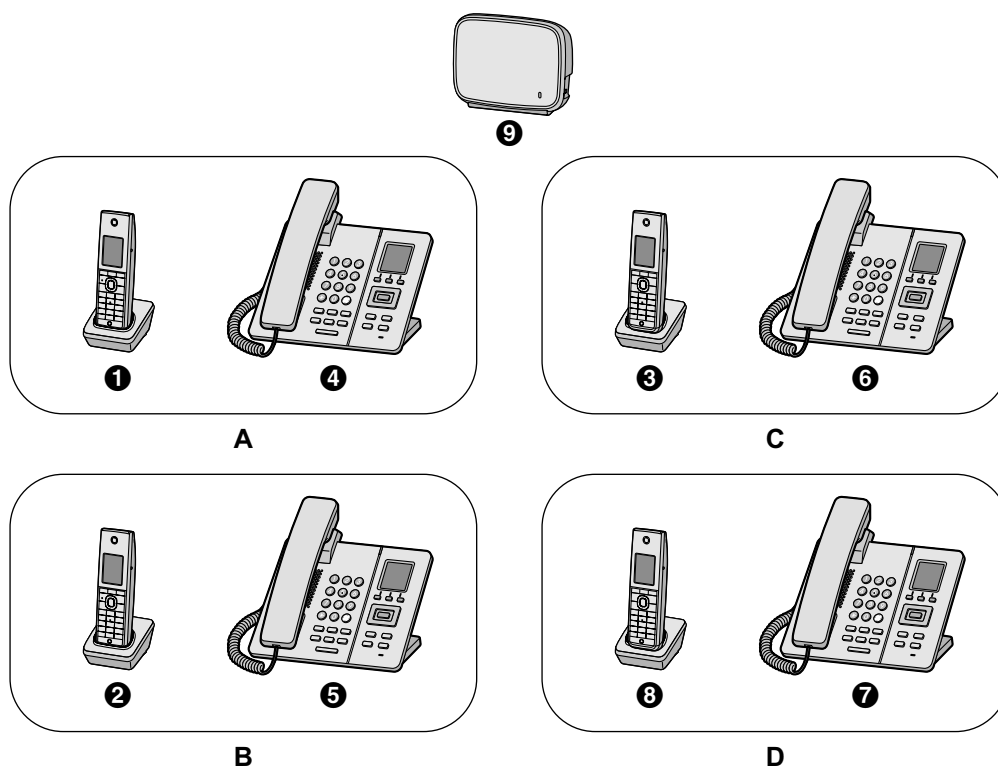

- ❶ Handset 1 (KX-TPA60)
- ❷ Handset 2 (KX-TPA60)
- ❸ Handset 3 (KX-TPA60)
- ❹ Handset 4 Master Desk Phone (KX-TPA65)
- ❺ Handset 5 Master Desk Phone (KX-TPA65)
- ❻ Handset 6 Master Desk Phone (KX-TPA65)
- ❼ Handset 7 Master Desk Phone (KX-TPA65)
- ❽ Handset 8 (KX-TPA60)
- ❾ Base Unit (KX-TGP600)
- A. Pairing Group 1
- B. Pairing Group 2
- C. Pairing Group 3
- D. Pairing Group 4

Phone	Model No.	ID Number	Master	Pairing Group
Handset 1	KX-TPA60	1		1
Handset 2	KX-TPA60	2		2
Handset 3	KX-TPA60	3		3
Handset 4	KX-TPA65	4	✓	1
Handset 5	KX-TPA65	5	✓	2
Handset 6	KX-TPA65	6	✓	3
Handset 7	KX-TPA65	7	✓	4

Phone	Model No.	ID Number	Master	Pairing Group
Handset 8	KX-TPA60	8		4

Note

The handset's ID number is shown on the handset's standby display. (Ex.  1,  2... 8.)

1. Configuration parameter setting examples

Parameter Name	Description	Reference
PARALLEL_HSNOM	Specifies the paired handset. Note For the paired handset, specify using the KX-TGP600's ID number.	Page 302
PARALLEL_MODEM	Specifies the operation mode for when one paired handset is in a call and the other handset goes off hook.	Page 302

Note

Specify the master desk phone's ID number for "m" in PARALLEL_HSNOM and PARALLEL_MODEM.
Specify the ID number of the handset to be paired for the value of PARALLEL_HSNOM.
For configuration parameter details, see **PARALLEL_HSNOM**.

<Pairing Group 1 Settings>	Configuration Parameter Setting
Handset 4 is paired as the master desk phone together with Handset 1.	PARALLEL_HSNOM4="1"
Operation Mode: Continue call	PARALLEL_MODE4="1"

Note

The ID number of the master desk phone is 4, so set PARALLEL_HSNOM4 and PARALLEL_MODE4.

<Pairing Group 2 Settings>	Configuration Parameter Setting
Handset 5 is paired as the master desk phone together with Handset 2.	PARALLEL_HSNOM5="2"
Operation Mode: Continue call	PARALLEL_MODE5="1"

Note

The ID number of the master desk phone is 5, so set PARALLEL_HSNOM5 and PARALLEL_MODE5.

<Pairing Group 3 Settings>	Configuration Parameter Setting
Handset 6 is paired as the master desk phone together with Handset 3.	PARALLEL_HSNOM6="3"
Operation mode: Busy	PARALLEL_MODE6="0"

6.6.2 Pairing (Parallel Mode) Settings

Note

The ID number of the master desk phone is 6, so set PARALLEL_HSN06 and PARALLEL_MODE6.

<Pairing Group 4 Settings>	Configuration Parameter Setting
Handset 7 is paired as the master desk phone together with Handset 8.	PARALLEL_HSN07="8"
Operation mode: Busy	PARALLEL_MODE7="0"

Note

The ID number of the master desk phone is 7, so set PARALLEL_HSN07 and PARALLEL_MODE7.

2. Setting using the Web user interface (administrators only)
See **4.4.8 Parallel Mode Settings** for making settings using the Web user interface.

Note

"Master Desk Phone Number" refers to the ID number of the master desk phone (KX-TPA65).

"Slave Handset Number" is set to the ID number of the slave handset (KX-TPA60).

Section 7

Firmware Update

This section explains how to update the firmware of the unit.

7.1 Firmware Server Setup

No special server is necessary for the firmware update. You can use an HTTP, HTTPS, FTP, or TFTP server as the firmware server by simply setting its URL.

Updating the firmware of handsets takes approximately 15 minutes and up to 4 unused handsets can be updated simultaneously. Updating 5 or more handsets simultaneously will take approximately 30 minutes to complete. While downloading, "Downloading xx%" (xx=01-99) is displayed on the handset. If the display does not change after several minutes, there may be a communication error; try moving the handset closer to the base unit.

Before performing the firmware update, make sure that the handset is turned on and is communicating with the base unit.

If the firmware update is started while the handset is on a call, the update will start after the call is completed. During the firmware update, the handset cannot be used to make calls (including emergency calls). Also, the firmware update cannot be canceled midway through the update.

Note

- To ensure that the update proceeds smoothly, it is recommended that the handset is placed on its charger for the duration of the update.
- It is recommended to select a time for updating in which the handset will not be used. (For details about the timing of updating configuration files, see **2.2.4 Downloading Configuration Files**.)

7.2 Firmware Update Settings

Firmware updates are provided by the manufacturer when necessary.

The firmware update will be executed by setting the corresponding parameters using configuration file programming (→ see **5.3.7 Firmware Update Settings**) or Web user interface programming (→ see **4.7.2 Firmware Maintenance**). The following shows the parameters and the setting procedures:

Firmware Update Enable/Disable

- In a configuration file, add the line, **FIRM_UPGRADE_ENABLE="Y"**.
- In the Web user interface, click the **[Maintenance]** tab, click **[Firmware Maintenance]**, and then select **[Yes]** for **[Enable Firmware Update]**.

Firmware Version Number

- In a configuration file, specify the new version number in "**FIRM_VERSION**".

Firmware Server URL

- In a configuration file, specify the URL in "**FIRM_FILE_PATH**".
- In the Web user interface, click the **[Maintenance]** tab, click **[Firmware Maintenance]**, and then enter the URL in **[Firmware File URL]**.

Configuration Parameter Example

By setting the parameters as shown in the following example, the unit will automatically download the firmware file from the specified URL, "http://firm.example.com/firm/01.050.fw", and perform the update operation if the currently used firmware version is older than 01.050.

Example

FIRM_UPGRADE_ENABLE="Y"

```
FIRM_VERSION="01.050"
```

```
FIRM_FILE_PATH="http://firm.example.com/firm/01.050.fw"
```

7.3 Executing Firmware Update

After configuring the firmware update settings in the configuration file, the firmware will be updated when the configuration file is downloaded. The firmware update procedure is detailed below.

The firmware update process


Note

Downgrading the firmware is not recommended. Operation cannot be guaranteed after performing a downgrade.

Step 1

The unit downloads a configuration file from the provisioning server.

- For details about setting the timing of when configuration files are downloaded, see **2.2.4 Downloading Configuration Files**.

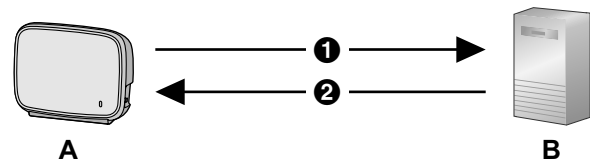

① Provisioning Server Address

② Configuration File


A. KX-TGP600

B. Provisioning Server

Step 2

The unit compares the version number of the firmware in the configuration file to the unit's current firmware version.

(In this example, the unit is using version 01.000 and the configuration file specifies version 01.050.)

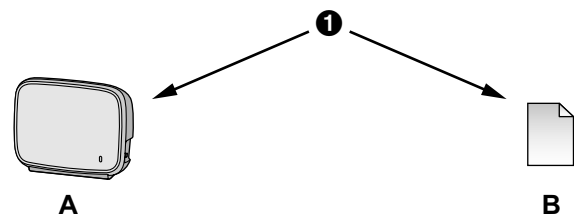

① Compare

A. KX-TGP600

Current Version 01.000


B. Provisioned Configuration File

FIRM_VERSION="01.050"

7.4 Upgrade Firmware

Step 3

When a newer firmware version is specified in the configuration file, the unit will download the firmware from the address specified under "**FIRM_FILE_PATH**" in the configuration file.

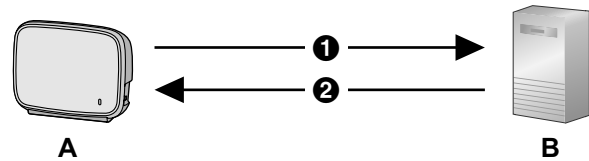

① <http://firm.example.com/firm/01.050.fw>


② 01.050.fw

A. KX-TGP600

B. Firmware Server

Step 4

Once the newer firmware is downloaded, it is applied to the unit and the unit automatically restarts.

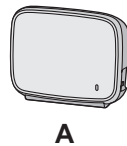

Version 01.050 Updated

Step 5

After the base unit is updated, the update for the handsets (KX-TPA60/KX-TPA65/KX-UDT121/KX-UDT131) is executed.

7.4 Upgrade Firmware

When an updated version of the firmware is provided on a Web site or other means, you can perform the firmware update manually using Web user interface programming.

For details about the local firmware update, see **4.7.3 Upgrade Firmware**.

Updating the firmware of handsets takes approximately 15 minutes and up to 4 unused handsets can be updated simultaneously. Updating 5 or more handsets simultaneously will take approximately 30 minutes to complete. While downloading, "Downloading xx%" (xx=01-99) is displayed on the handset. If the display does not change after several minutes, there may be a communication error; try moving the handset closer to the base unit.

Before performing the firmware update, make sure that the handset is turned on and is communicating with the base unit.

If the firmware update is started while the handset is on a call, the update will start after the call is completed. During the firmware update, the handset cannot be used to make calls (including emergency calls). Also, the firmware update cannot be canceled midway through the update.

Note

- To ensure that the update proceeds smoothly, it is recommended that the handset is placed on its charger for the duration of the update.
- It is recommended to select a time for updating in which the handset will not be used.

To manually update the firmware

1. In the Web user interface, click the **[Maintenance]** tab, and then click **[Upgrade Firmware]**.
2. Click **Browse**, select the folder where the firmware file is stored, and specify the firmware file on your PC.
3. Click **[Upgrade Firmware]**.

Section 8

Troubleshooting

This section provides information about troubleshooting.

8.1 Troubleshooting

If you still have difficulties after following the instructions in this section, disconnect the base unit from the AC outlet, then connect the AC adaptor again. If using PoE, disconnect the LAN cable, then connect the LAN cable again.

General Use

Problem	Cause/Solution
I cannot hear a dial tone.	• Network settings may not be correct. • Many installation issues can be resolved by resetting all the equipment. First, shut down your modem, router, hub, unit, and PC. Then turn the devices back on, one at a time, in this order: modem, router, hub, unit, PC. • If you cannot access Internet Web pages using your PC, check to see if your phone system is having connection issues in your area. • Check the VoIP status in the Web user interface and confirm that each line is registered properly (→ see To check the setting status in the Web user interface in this section). • Check that the SIP server address, URLs of the configuration files, encryption key, and other required settings are correct. • Check the firewall and port forwarding settings on the router. • For details about the settings, consult your network administrator or phone system dealer.

Base Unit STATUS Indicator

Problem	Cause/Solution
The STATUS indicator continues flashing in amber rapidly.	- An IP address may not have been acquired or the static IP address is not appropriate. Check the unit's IP address (→ see 1.1.3 Basic Network Setup). It is recommended to perform the following. - Network settings may not be correct. Check the unit's IP address (→ see 1.1.3 Basic Network Setup). - Many installation issues can be resolved by resetting all the equipment. First, shut down your modem, router, hub, base unit, and PC. Then turn the devices back on, one at a time, in this order: modem, router, hub, base unit, PC. - If you cannot access Internet Web pages using your PC, check to see if your phone system is having connection issues in your area. - Check the VoIP status in the Web user interface and confirm that each line is registered properly (→ see To check the setting status in the Web user interface in this section). - Check that the SIP server address, URLs of the configuration files, encryption key, and other required settings are correct. - Check the firewall and port forwarding settings on the router. - For details about settings, consult your network administrator or phone system dealer.
The STATUS indicator continues flashing in amber.	Unplug the unit's AC adaptor to reset the unit, then reconnect the AC adaptor. If using PoE, disconnect the LAN cable, then connect the LAN cable again. If the STATUS indicate is still flashing in amber rapidly, there may be a problem with the base unit hardware. Contact your phone system dealer/service provider.
The STATUS indicator light is amber.	The unit's IP address may conflict with the IP address of other devices on your local network. Check the unit's static IP address (→ see 1.1.3 Basic Network Setup).
The STATUS indicator is off.	- The base unit power is off. - The Ethernet cable is not connected properly. Connect it.
The STATUS indicator continues flashing in green rapidly.	The unit is operating normally. The base unit's system is busy. Wait until the STATUS indicator is flashing or the indicator remains lit.
The STATUS indicator flashes quickly in the order of red → green → amber → off → red → green → amber → off	The unit is being returned to its factory default settings. Wait until it has finished.
The STATUS indicator flashes slowly in the order of red → green → amber → off → red → green → amber → off	When the STATUS indicator flashes in this way after the unit is turned on, the unit is in maintenance mode. Turn the unit off and back on again.

Making/Answering Calls, Intercom

Problem	Cause/Solution
The unit does not ring.	- Check the VoIP status in the Web user interface and confirm that each line is registered properly (→ see To check the setting status in the Web user interface in this section). - Check that the SIP server address, URLs of the configuration files, encryption key, and other required settings are correct. - Check the firewall and port forwarding settings on the router. - Check [Call Control] for each line in the [Telephone] tab in the Web user interface. - If [Enable Do Not Disturb] is set to [Yes], the unit does not receive calls (→ see 4.6.3.1 Call Features). - If [Enable Call Forwarding No Answer] is set to [Yes], the unit does not receive calls (→ see 4.6.3.1 Call Features). - If [Enable Block Anonymous Call] is set to [Yes], the unit does not receive anonymous calls (→ see 4.6.3.1 Call Features). - Check that [Enable Do Not Disturb], [Enable Call Forwarding No Answer], and [Enable Block Anonymous Call] are not controlled by your phone system. - For details about settings, consult your network administrator or phone system dealer.
I cannot make a call.	- The handset is too far from the base unit. Move closer and try again. - Check the VoIP status in the Web user interface and confirm that each line is registered properly (→ see To check the setting status in the Web user interface in this section). - Check that the SIP server address, URLs of the configuration files, encryption key, and other required settings are correct. - Check the firewall and port forwarding settings on the router. - For details about settings, consult your network administrator or phone system dealer.

Password for Web User Interface Programming

Problem	Cause/Solution
I have lost the login password of the Web user interface for the Administrator or User account.	Consult your network administrator or phone system dealer. For security reasons, it is recommended that the passwords are set again immediately (→ see 4.4.4 Admin Password Settings or 4.4.3 User Password Settings).

Time

Problem	Cause/Solution
The time is not correct.	- In the Web user interface, you can set NTP synchronization and DST (Summer Time) control to adjust the time automatically (→ see 4.4.5 Time Adjust Settings). - If the time is still incorrect even after setting NTP synchronization, check the firewall and port forwarding settings on the router.

Error Codes

When a system error occurs, when the handset accesses the base unit such as when pressing the [TALK] key, the error code is displayed on the handset's screen.

Error code	Probable Cause	Solution
Error:001	LAN disconnection detected	Check the LAN cables connections.
Error:002	Overlapping IP addresses	Check the IP addresses and re-set them. For making settings using a handset, see 1.1.3 Basic Network Setup.
Error:003	The REGISTER of the SIP server has not been registered.	Consult your network administrator or phone system dealer.

Error Message

Error Message	Probable Cause	Solution
Need Repair	Hardware failure	Consult your network administrator or phone system dealer.

Checking the Status of the Unit

You can check the status of the unit by using Web user interface programming (→ see **4.2.3 Network Status** and **4.2.4 VoIP Status**) or by looking at system logs (→ see **5.3.33 Logging Settings**) sent from the unit.

To check the setting status in the Web user interface

1. Click the **[Status]** tab, and then click **[Network Status]** to check the network settings.
2. Check the status displayed.
3. Click **[VoIP Status]** to check the VoIP settings.
4. Check the status displayed.

To check the setting status using the Cordless Handset

1.  / **MENU**
2. **[▲]/[▼]/[◀]/[▶]**:  → **OK**

3. [▲]/[▼]: "Status" → **OK**

Export Logging File

Export the log file using the Web user interface (→ see **4.7.5 Export Logging File**).

Panasonic System Networks Co., Ltd.

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

Copyright:

This material is copyrighted by Panasonic System Networks Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic System Networks Co., Ltd.

© Panasonic System Networks Co., Ltd. 2015

PNQX6922ZA DD0215SM0